



## D RELAY LOCATIONS


### [Engine Compartment] (LHD)

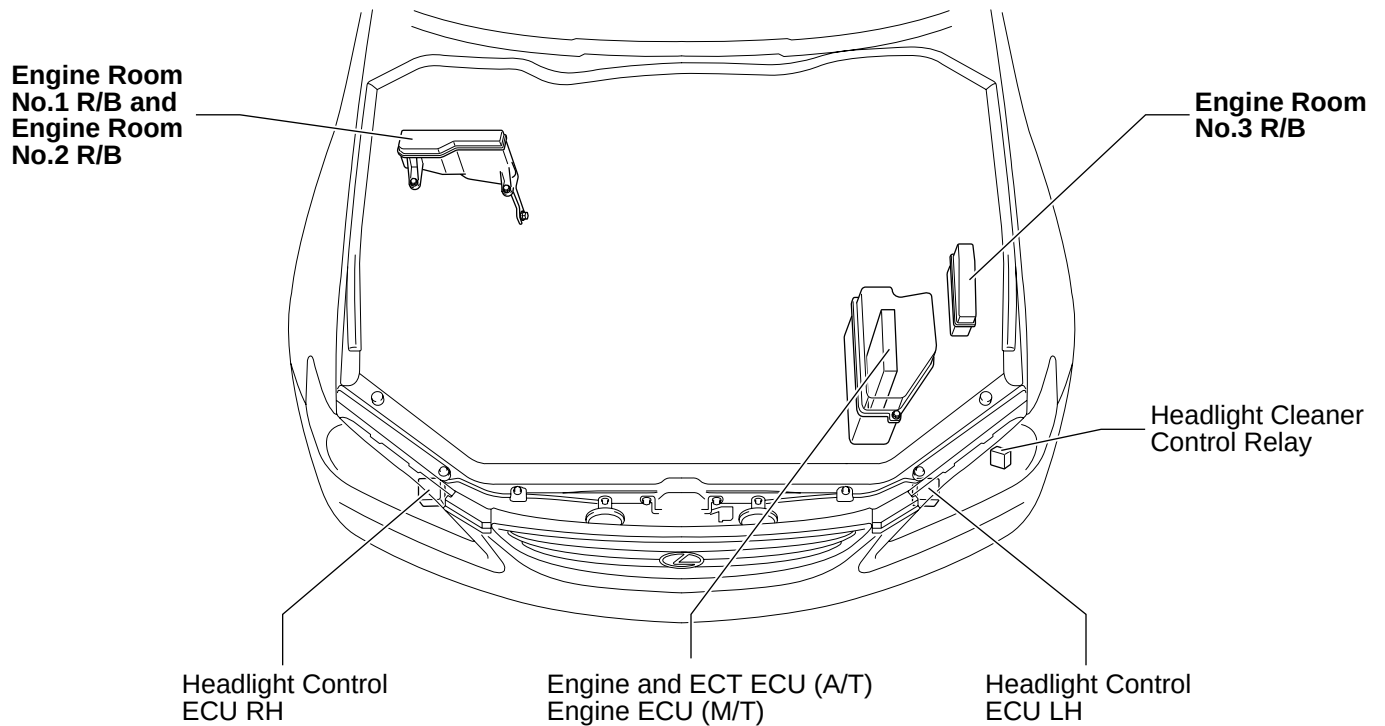


### (RHD)

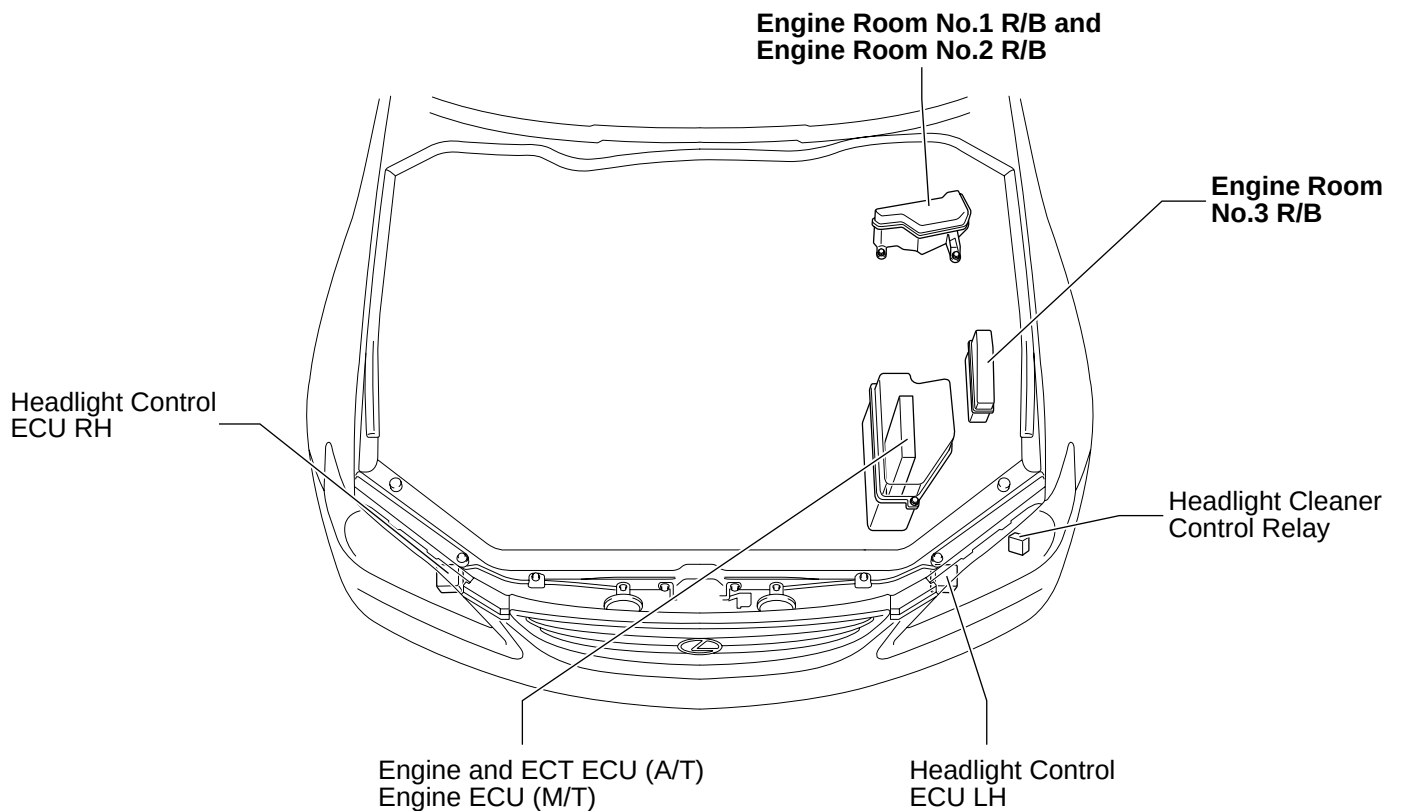

## [Instrument Panel] (LHD)

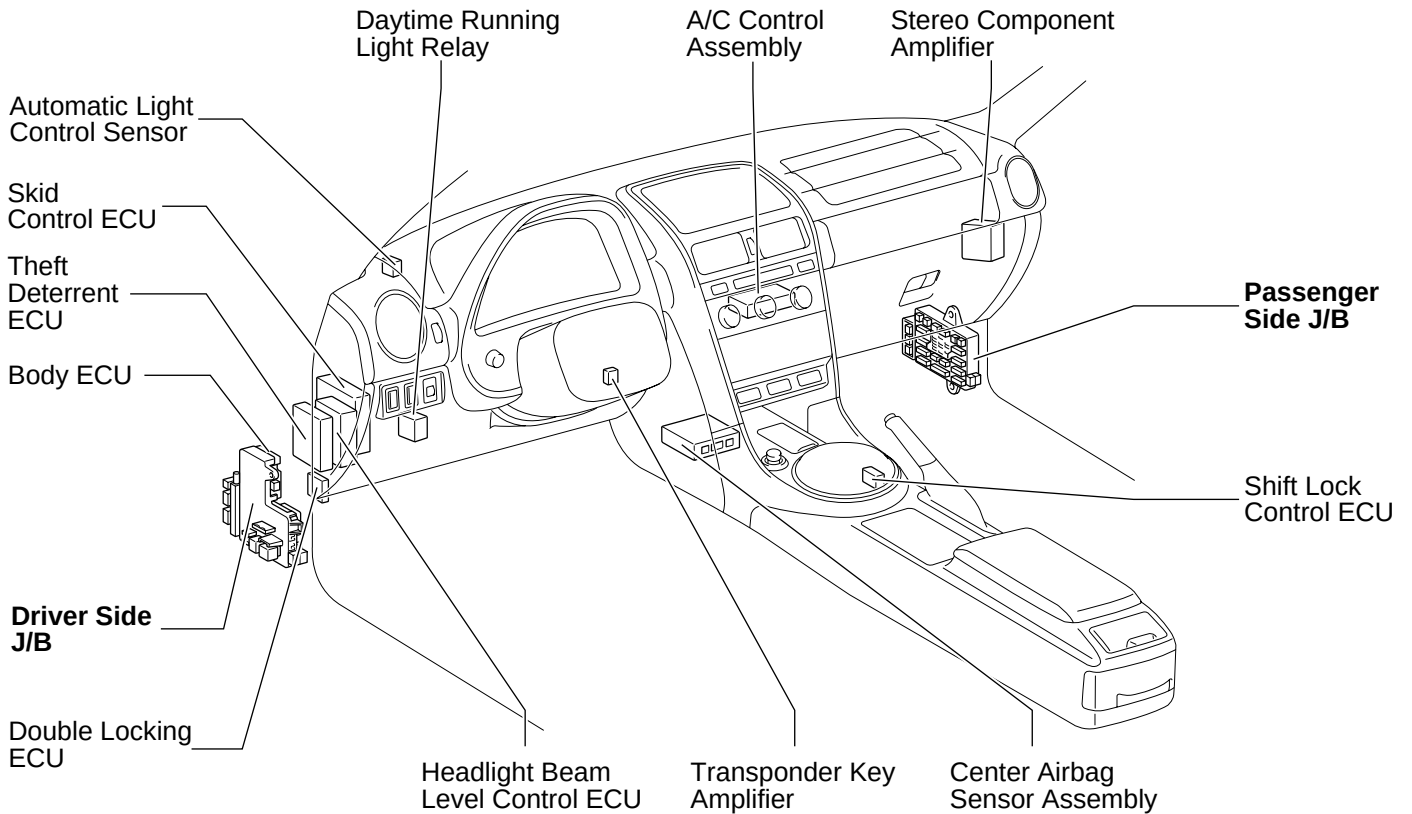


## (RHD)

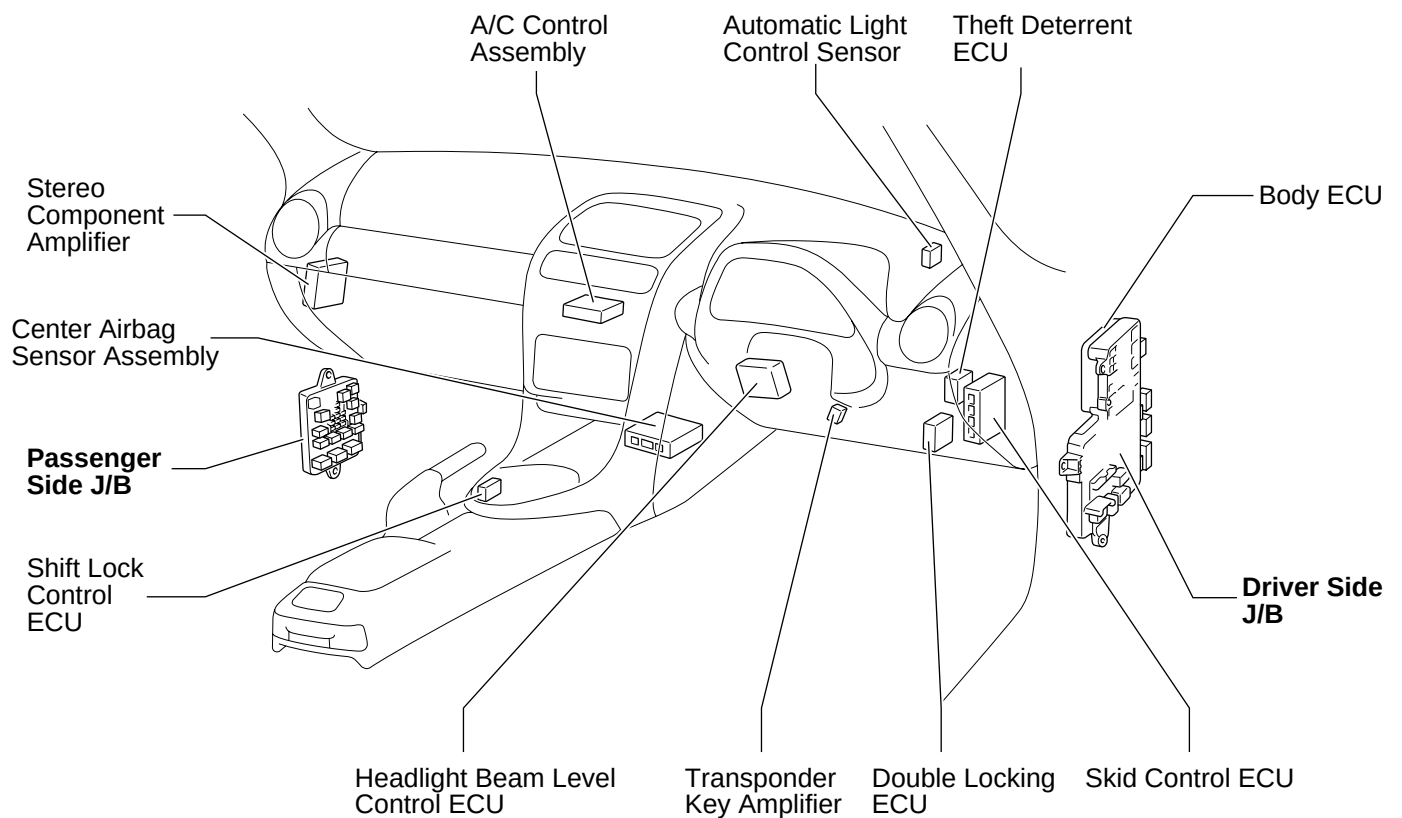


## D RELAY LOCATIONS

[Body]  
(S/D)

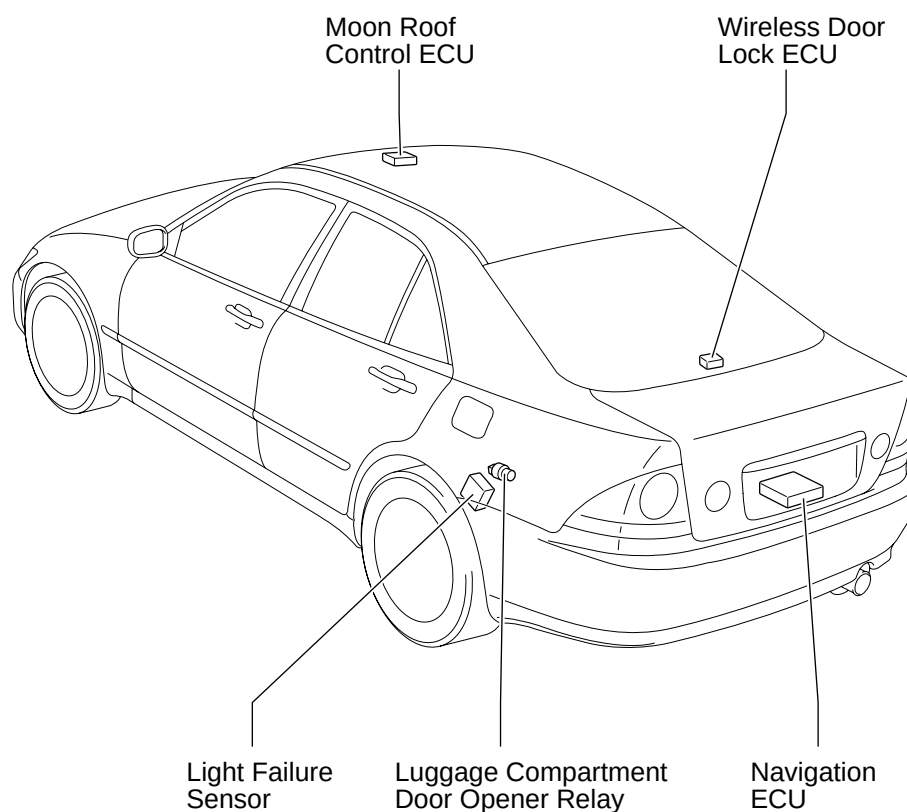


(W/G)

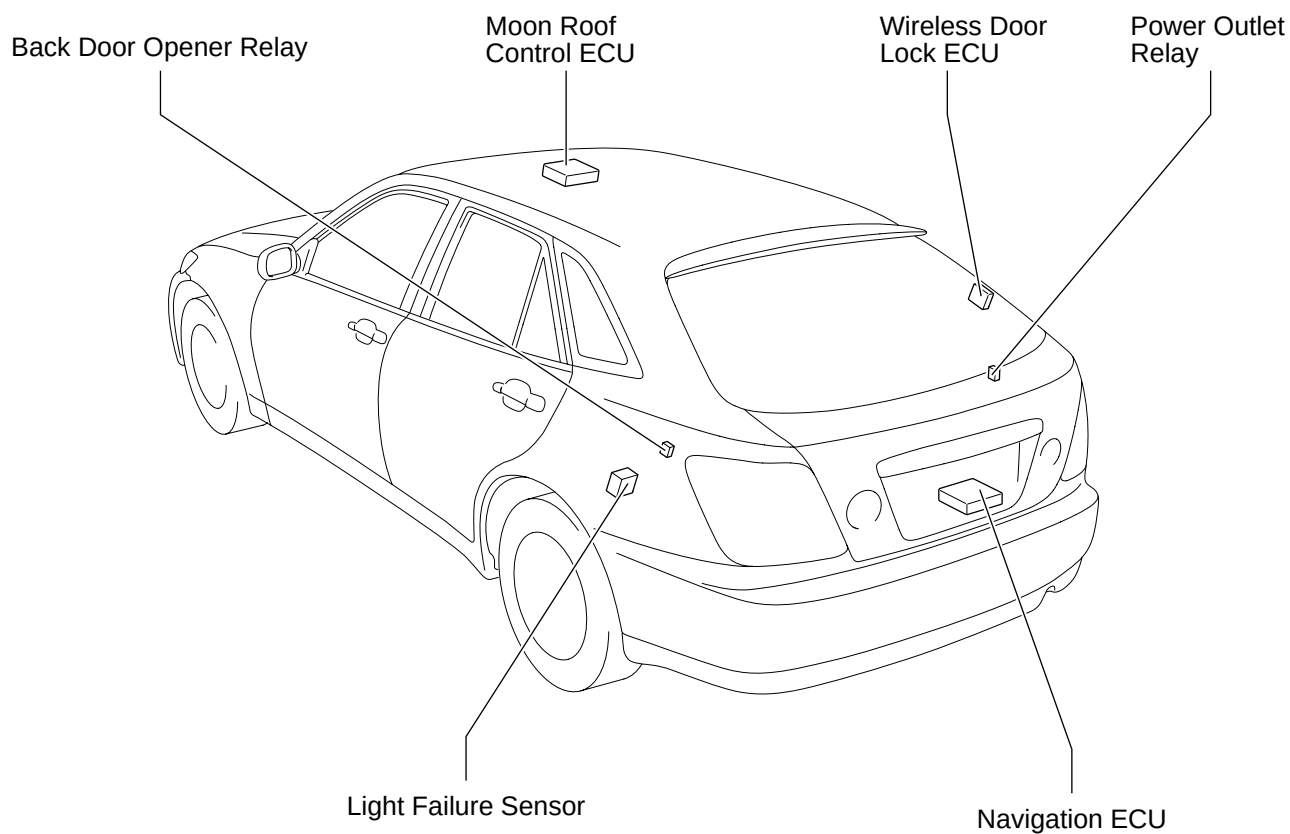

## D RELAY LOCATIONS

|                          |                                       |
|--------------------------|---------------------------------------|
| ① : Engine Room No.1 R/B | Engine Compartment Right (See Page 8) |
| ② : Engine Room No.2 R/B |                                       |

[LHD]

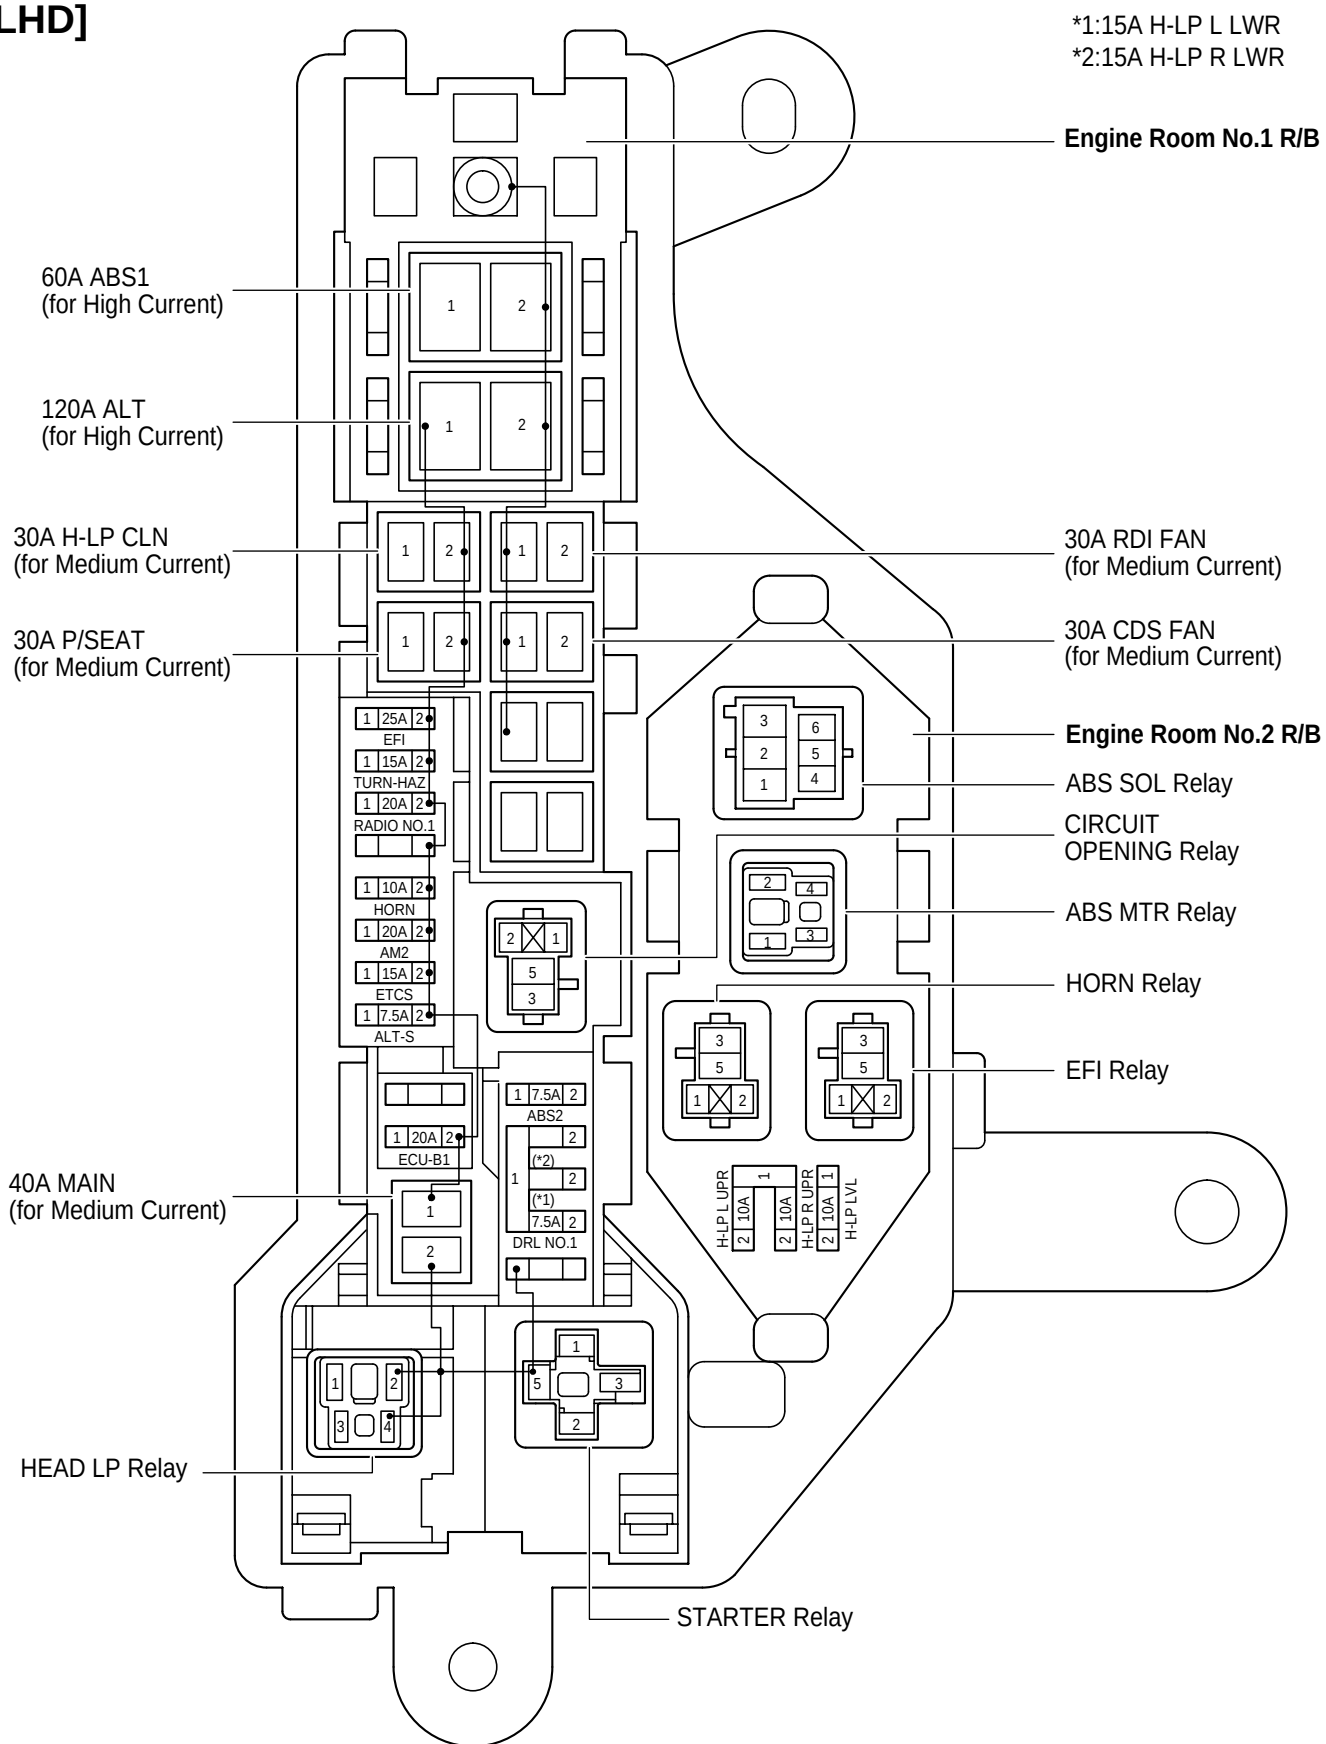


① : Engine Room No.1 R/B

② : Engine Room No.2 R/B

## Engine Compartment Left (See Page 8)

[RHD]

\*1:15A H-LP L LWR  
 \*2:15A H-LP R LWR

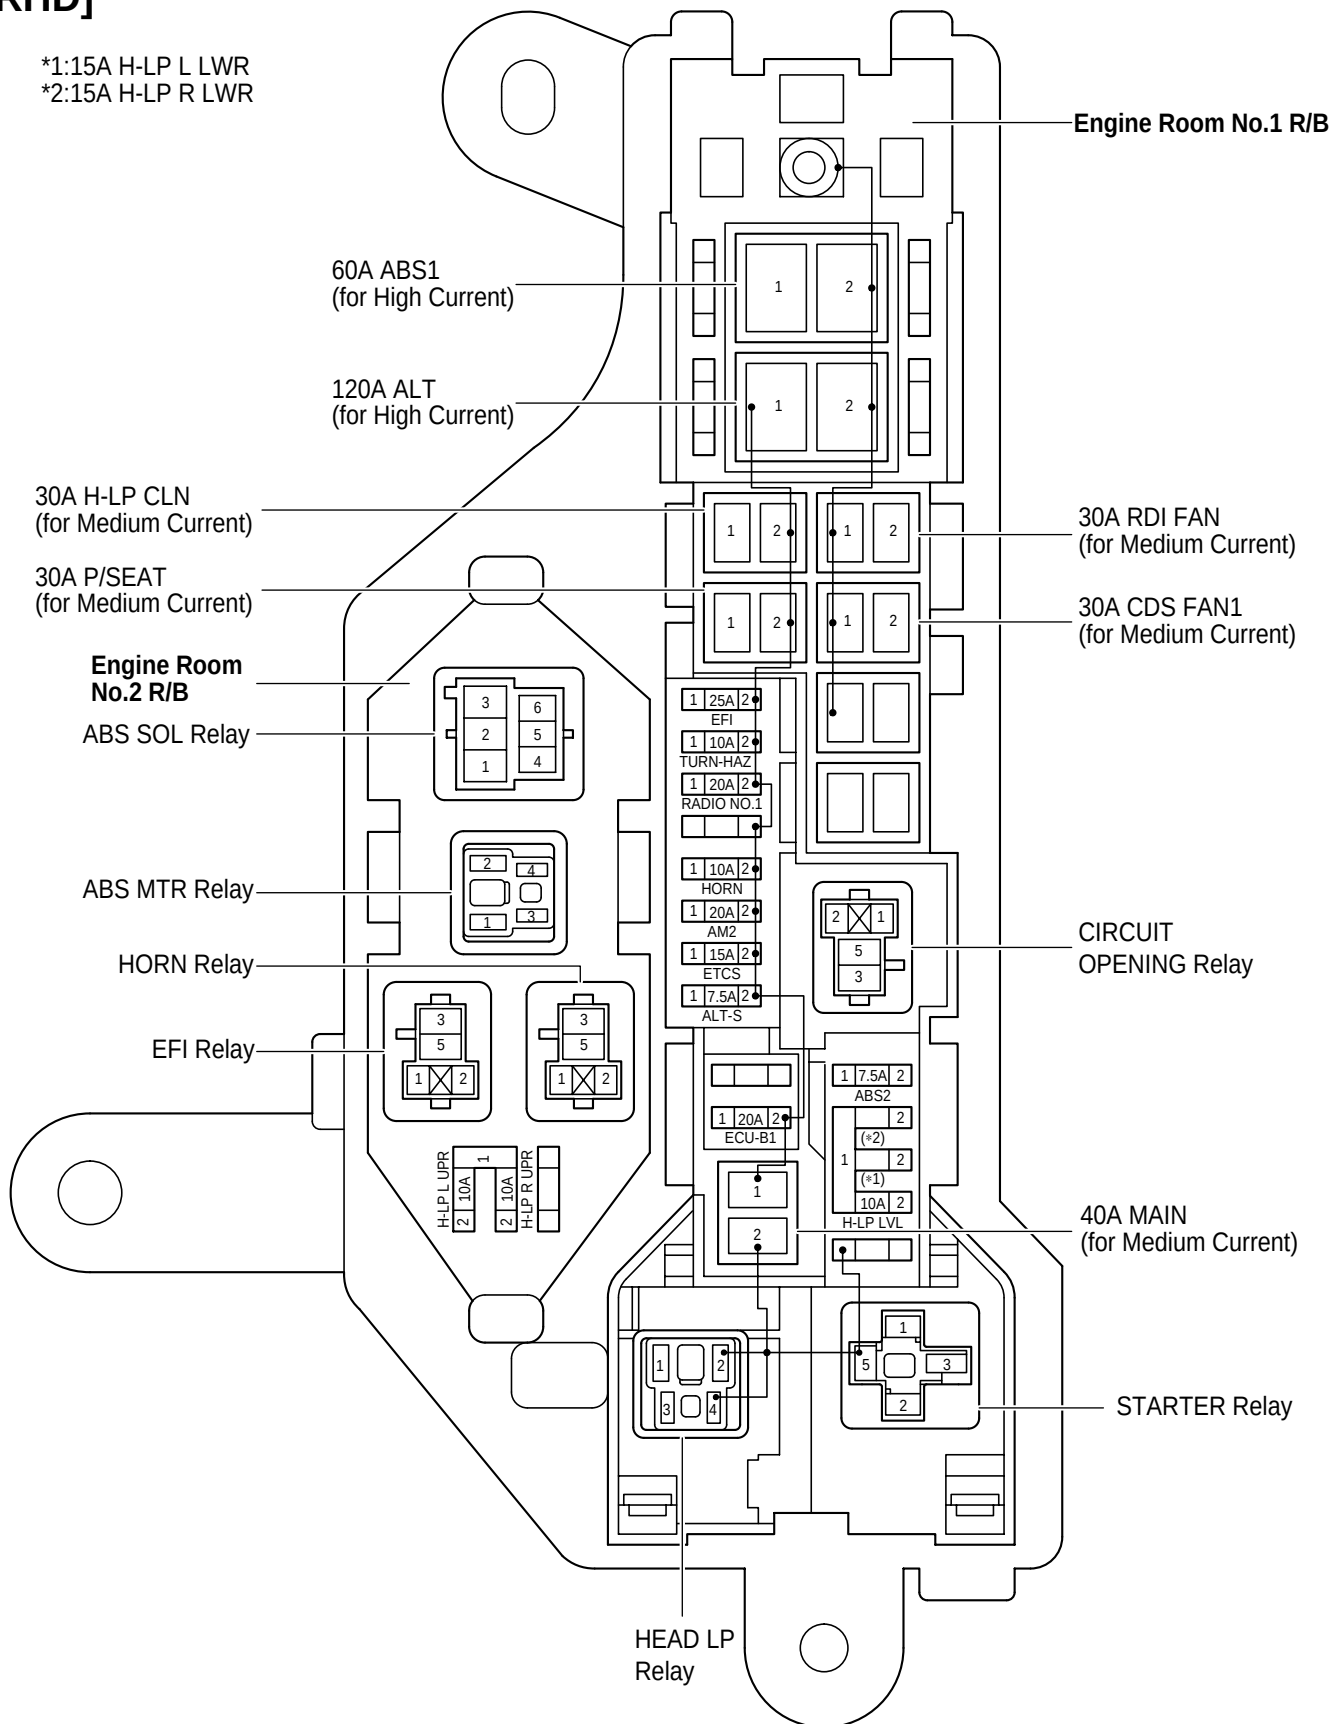


## D RELAY LOCATIONS

○ : Driver Side J/B

Left Kick Panel (See Page 9)

[LHD]

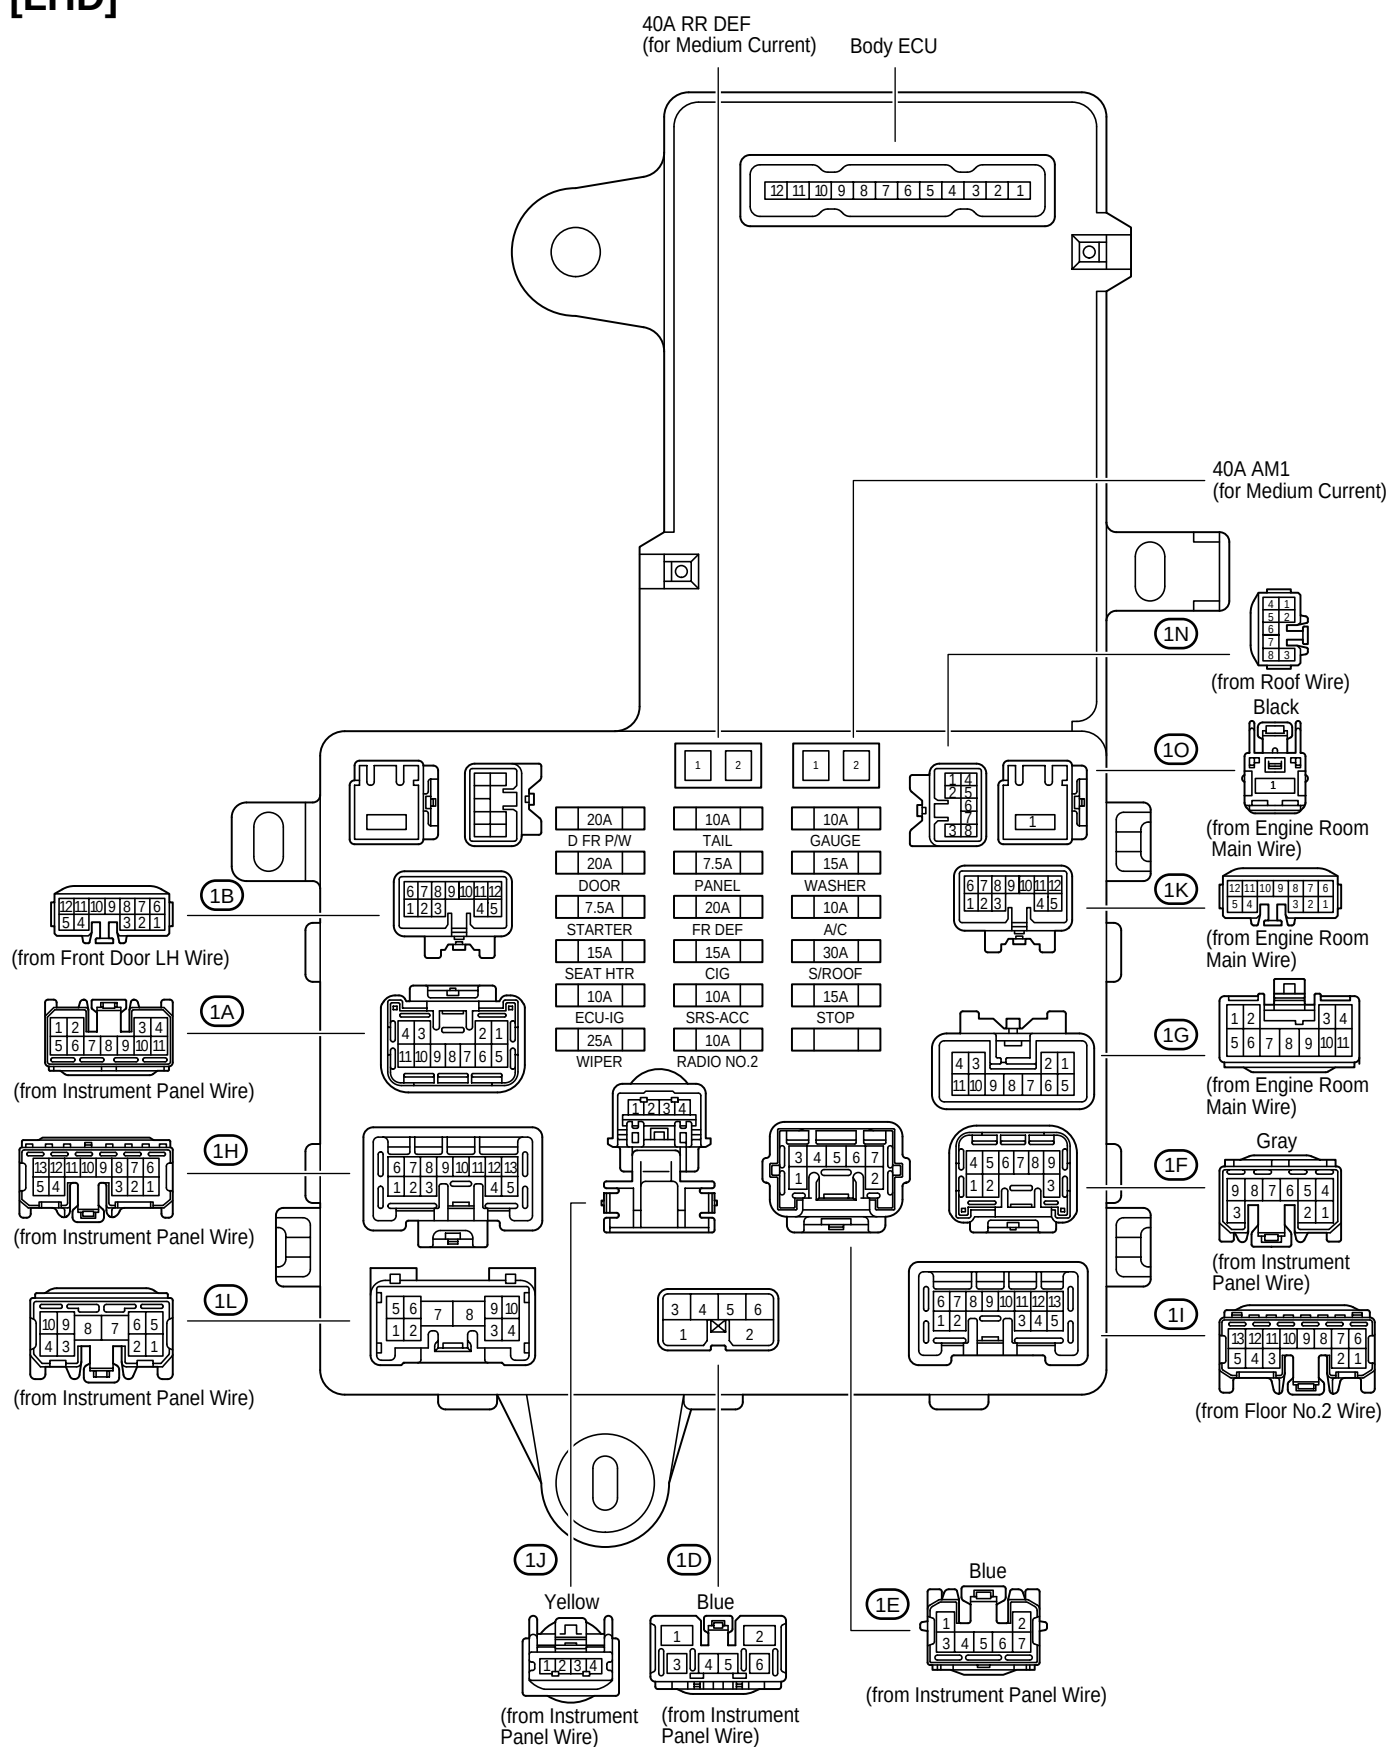


## D RELAY LOCATIONS

○ : Passenger Side J/B

Right Kick Panel (See Page 9)

[LHD]

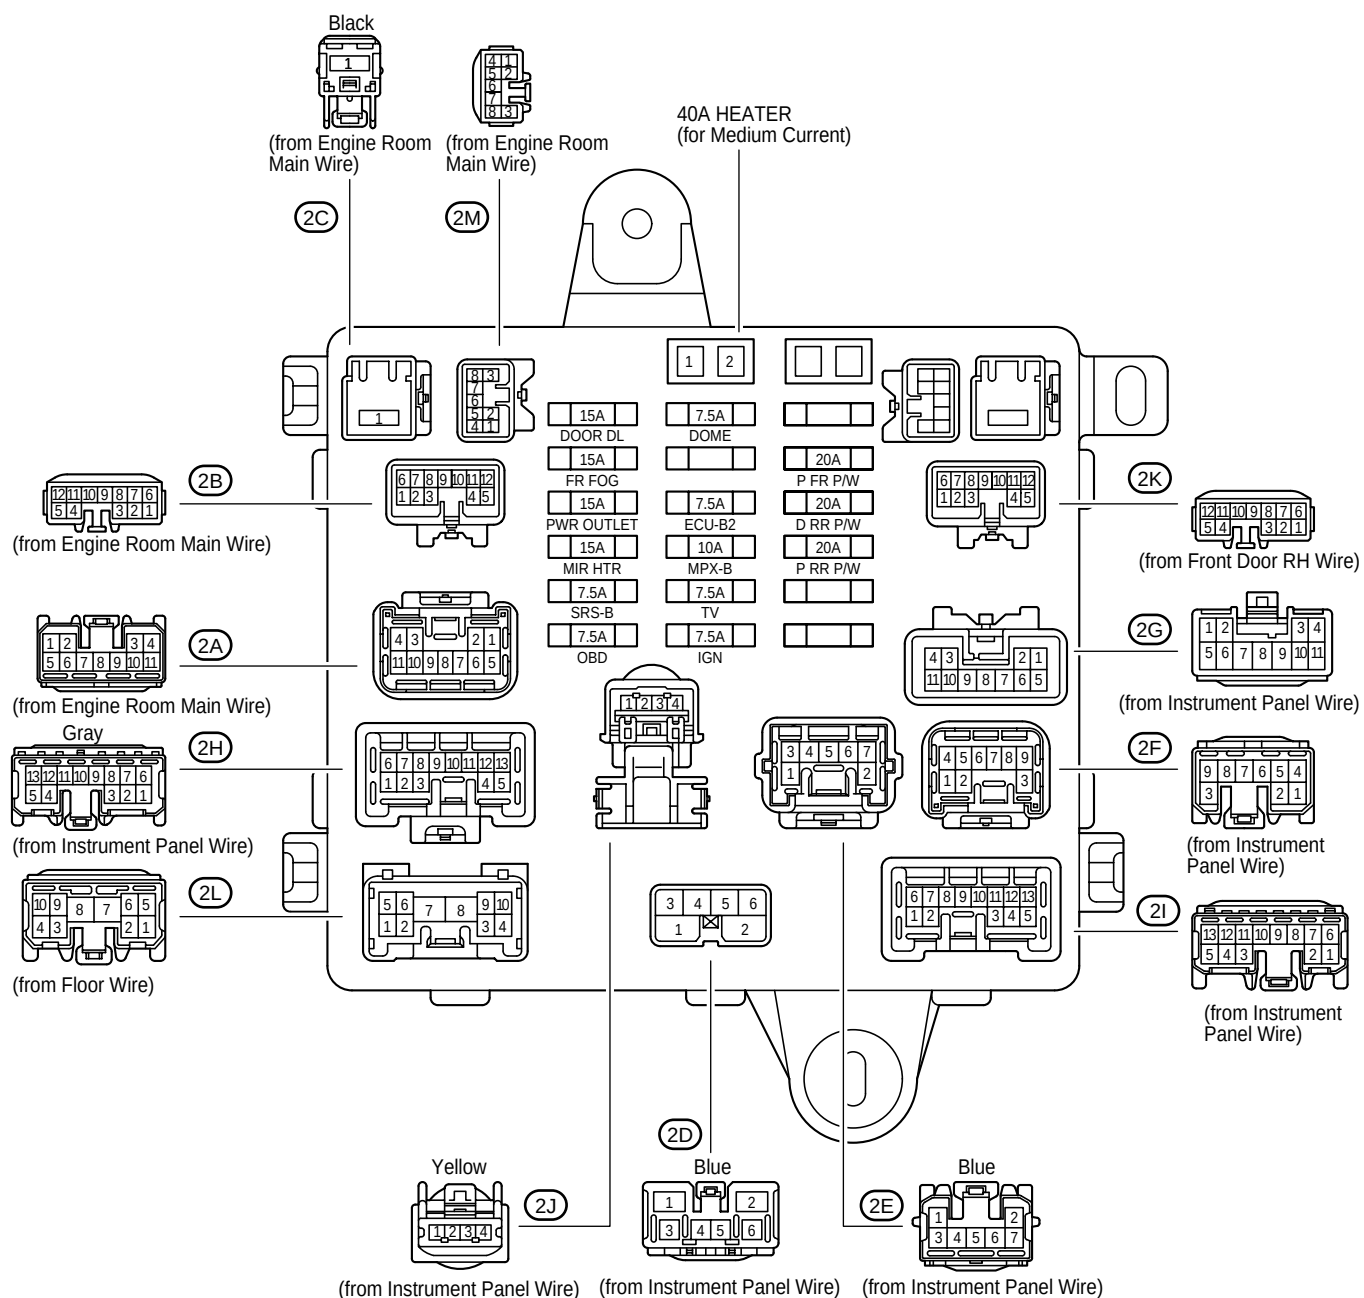


## D RELAY LOCATIONS

○ : Driver Side J/B

Right Kick Panel (See Page 9)

[RHD]

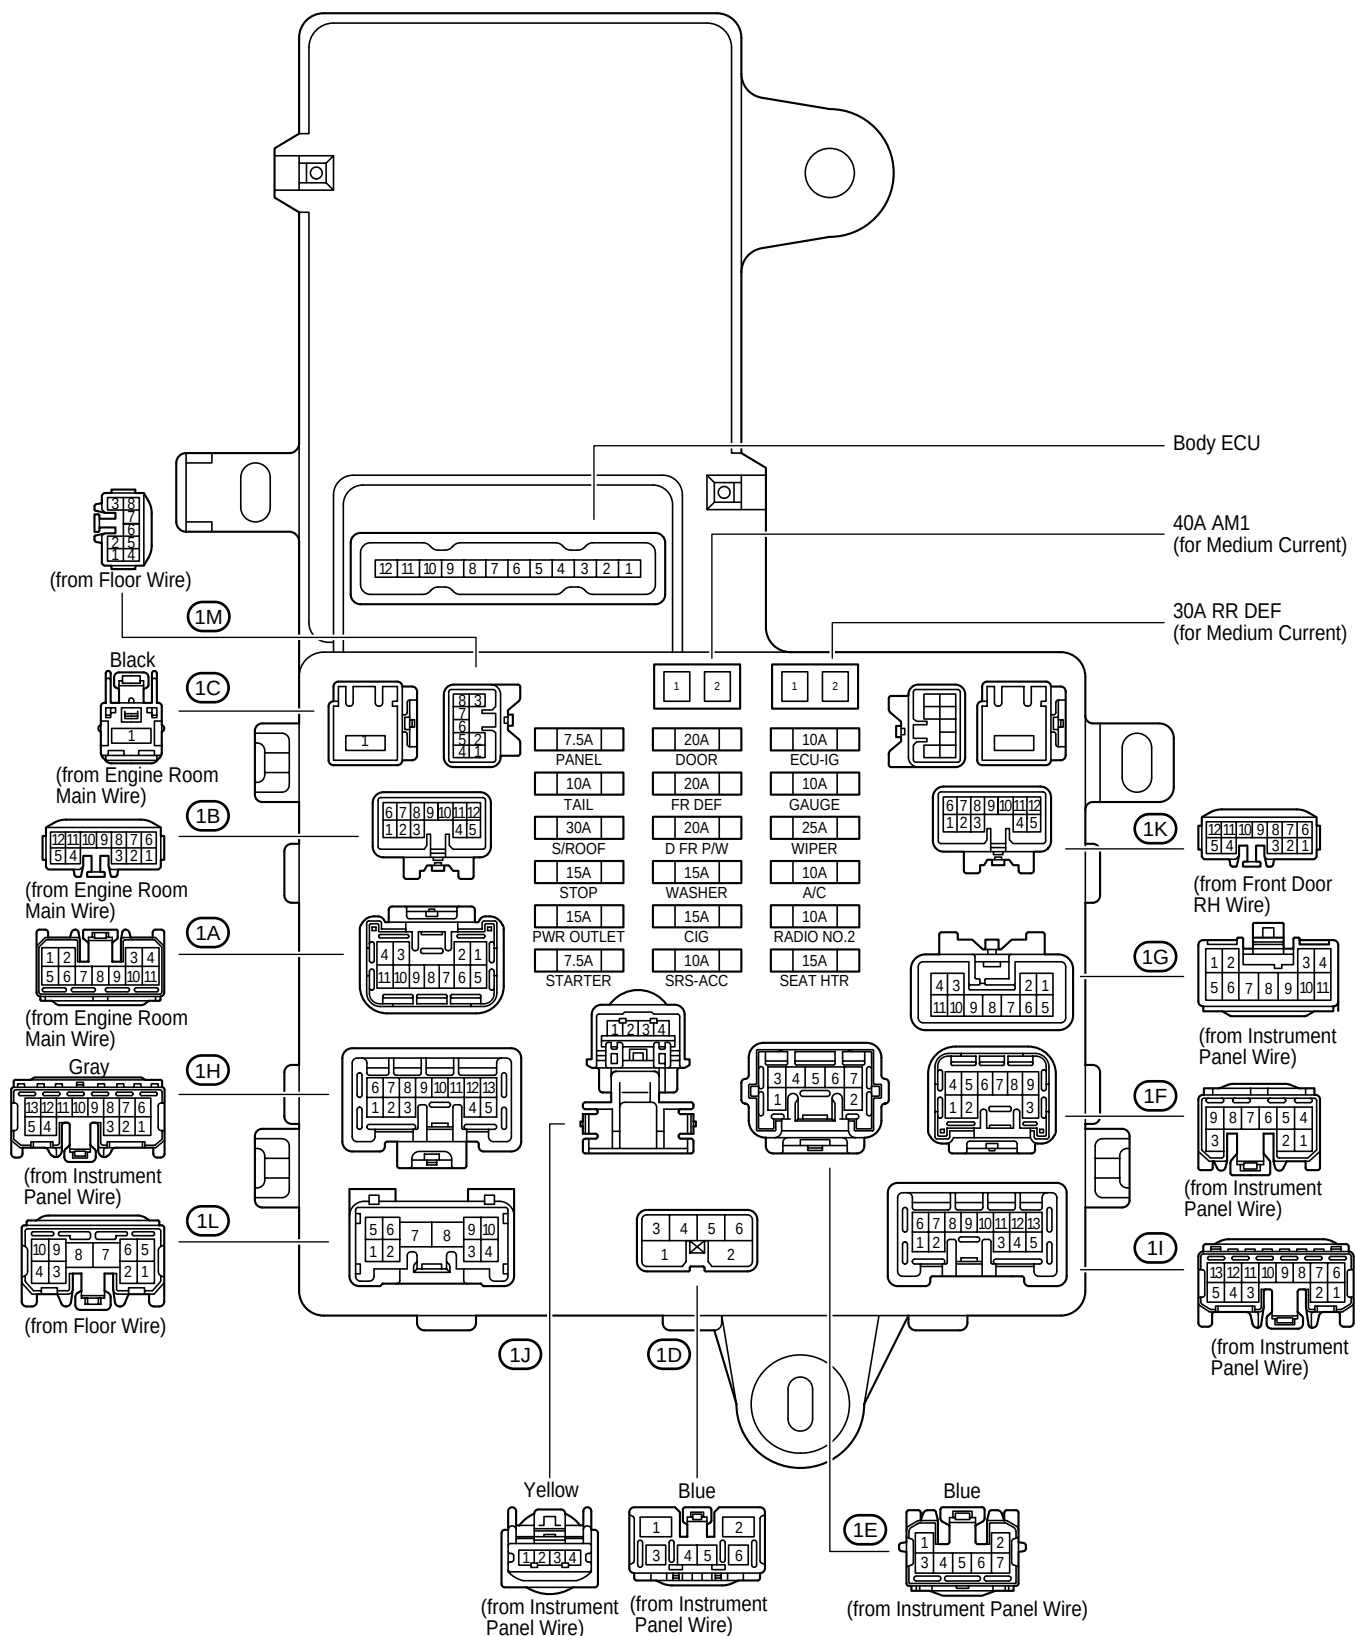


## D RELAY LOCATIONS

○ : Passenger Side J/B

Left Kick Panel (See Page 9)

[RHD]

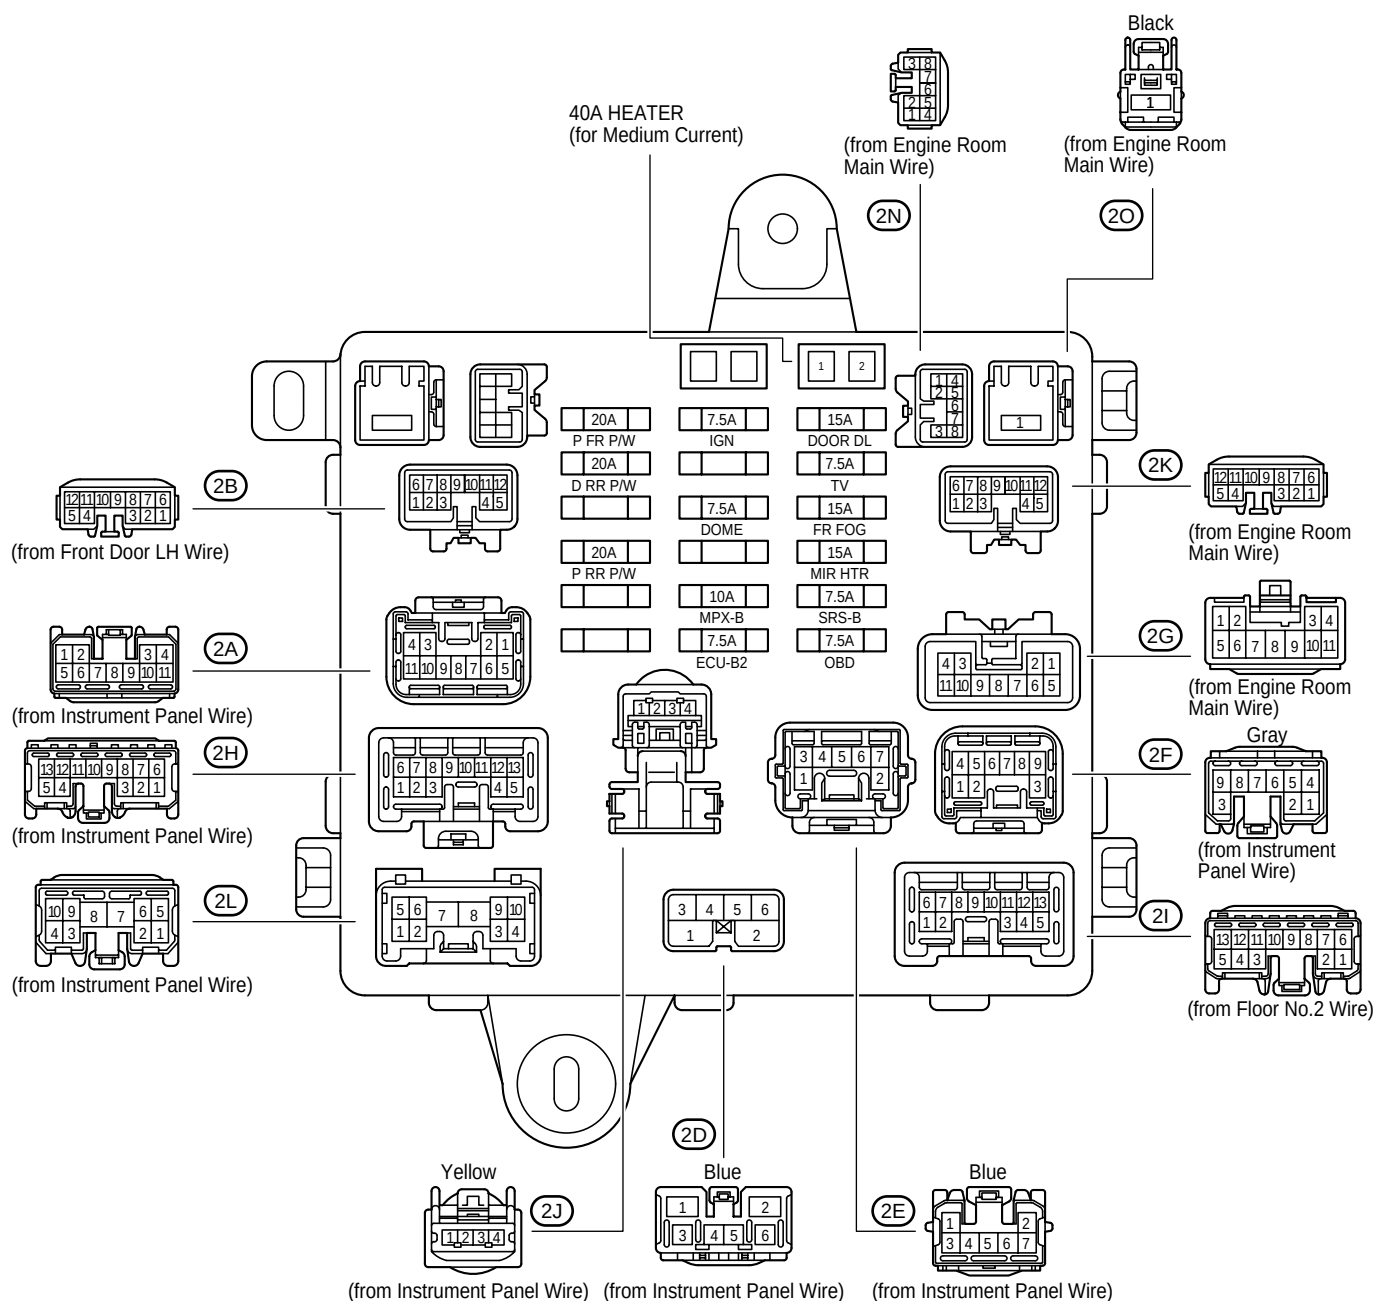

## D RELAY LOCATIONS

③ : Engine Room No.3 R/B Engine Compartment Left (See Page 8)

