

59.Rear Wiring Harness

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R2	24	★	B-1	B97	Bulkhead wiring harness
R3	24	★	C-3	B99	
R9	3	★	C-4		Front door switch LH
R10	8	★	C-4	D22	Rear door cord LH
R12	3	★	B-2		Front door switch RH
R13	8	★	B-2	D28	Rear door cord RH
R15	12	★	B-4	R57	Fuel cord
R16	3	★	A-3		Rear door switch RH
R41	4	★	C-3		Seat heater LH
R43	12	★	B-3		Seat heater switch
R44	4	★	B-3		Seat heater RH
R47	3	Black	B-4		Fuel tank pressure sensor
R50	12	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	2	★	A-3	R74	Sunroof cord
R57	12	★	B-4	R15	Rear wiring harness
R58	6	★	B-4		Fuel pump assembly
R59	2	★	B-5		Fuel sub level sensor
R68	2	Dark gray	B-4		Pressure control solenoid valve
R72	2	★	B-4		Rear ABS wheel speed sensor RH
R73	2	★	B-4		Rear ABS wheel speed sensor LH
R74	2	★	A-3	R55	Roof cord
R75	6	★	A-4		Sunroof motor assembly
R98	16	★	B-1	i53	Instrument panel wiring harness
R100	12	★	B-1	i56	
R108	4	★	C-3		Seat belt switch LH
R110	2	Black	C-3		Power seat LH
R128	5	★	A-3		Sunroof switch
R139	3	★	B-3		Compass mirror
R142	2	Black	B-3		Fuel pump condenser
R167	16	★	C-3	i102	Instrument panel wiring harness
R168	20	★	C-3		Fuse & relay box (F/B)
R211	12	★	B-4		TPMS CM
R284	6	★	B-3		AUX input terminal
R305	2	★	C-4		Cup holder
R310	6	Gray	B-2		Spot map light
R311	2	★	B-3		Rear accessory power supply socket (console)

★ : White or natural color

Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	24	Yellow	C-2		Airbag CM
AB18	24	Yellow	C-2		
AB19	4	Yellow	C-3		Side airbag module LH
AB21	2	Black	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	4	Yellow	B-2		Side airbag module RH
AB26	2	Black	B-2		Pretensioner RH
AB28	4	Yellow	B-2		Side airbag sensor RH
AB34	4	Yellow	A-3		Curtain airbag sensor RH
AB35	2	Black	C-3		Fuse & relay box (F/B)
AB41	2	Yellow	B-4		Satellite safing sensor
AB53	18	Gray	B-2		Occupant detection control module
AB56	3	Brown	B-3		Belt tension sensor

WIRING SYSTEM

