

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B17	Buckle SW (Front Passenger's Side)	90980-11019
A 2	A/C Lock Sensor	90980-11016	B19	Buckle SW LH	90980-10942
	A/C Magnetic Clutch			Seat Position Airbag Sensor LH	
A 3	Pressure SW	90980-10943	C 1	Camshaft Position Sensor	90980-10947
A 4	ABS Speed Sensor Front LH	90980-11075	C 2	Camshaft Timing Control Valve	90980-11162
A 5	ABS Speed Sensor Front RH		C 3	Camshaft Timing Oil Control Valve LH	
A 6	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	C 4	Camshaft Timing Oil Control Valve RH	
A 7	Air Fuel Ratio Sensor (Bank 2 Sensor 1)		C 5	Condenser Fan Motor	90980-10928
A 8	Airbag Sensor Front LH	90980-11856	C 6	Counter Gear Speed Sensor	90980-11156
A 9	Airbag Sensor Front RH		C 7	Crankshaft Position Sensor	90980-10947
A10	A/C Control Assembly	90980-11392	C 9	Cigarette Lighter	90980-10760
A11	A/C Control Assembly	90980-11391	C10	Cigarette Lighter Illumination	90980-11148
A12	A/C Solar Sensor	90980-11918	C11	Combination Meter	90980-11392
A13	Air Inlet Control Servo Motor	90980-11909	C12	Combination Meter	90980-11391
A14	Air Mix Control Servo Motor		C13	Combination SW	90980-11672
A15	Air Vent Mode Control Servo Motor		C14	Combination SW	90980-11594
A16	Airbag Sensor Assembly (w/ Curtain Shield Airbag)	82824-50160	C16	Combination SW	90980-12183
	Airbag Sensor Assembly (w/o Curtain Shield Airbag)	90980-11869	C17	Charcoal Canister Assembly	90980-12380
A17	Airbag Sensor Assembly	90980-11872	C18	Curtain Shield Airbag Squib LH	90980-12219
A18	Airbag Sensor Assembly (w/ Curtain Shield Airbag)	82824-50150	C19	Curtain Shield Airbag Squib RH	
	Airbag Sensor Assembly (w/o Curtain Shield Airbag)	90980-11867	D 2	Diode (Cooling Fan)	90980-10962
A19	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	D 3	Data Link Connector 3	90980-11978
A20	Airbag Squib (Steering Wheel Pad)		D 4	Diode (Rear Interior Light)	90980-10962
A21	Antenna Amplifier (Front)	90980-10871	D 5	Door Courtesy Light Front LH	90980-11148
A22	Ashtray Illumination	90980-10824	D 6	Door Courtesy Light Front RH	
A23	Automatic Light Control Sensor	90980-11107	D 7	Door Courtesy SW Front LH	90980-10871
A24	ABS Speed Sensor Rear LH	90980-11060	D 8	Door Courtesy SW Front RH	
A25	ABS Speed Sensor Rear RH		D 9	Door Courtesy SW Rear LH	
A26	Antenna Amplifier (Rear)	90980-10871	D10	Door Courtesy SW Rear RH	90980-10797
A27	Accel Position Sensor	90980-11858	D11	Door Lock Control SW	
B 4	Brake Warning SW	90980-11207	D12	Door Key Lock and Unlock SW Front LH	90980-11858
B 5	Blower Control SW	90980-10877		Door Lock Motor Front LH	
B 6	Blower Motor	90980-10385		Door Unlock Detection SW Front LH	
B 7	Blower Motor Control	90980-11676	D13	Door Key Lock and Unlock SW Front RH	
B 8	Blower Resister	90980-11136		Door Lock Motor Front RH	
B 9	Body ECU	90980-11957		Door Unlock Detection SW Front RH	
B10	Body ECU	90980-11956	D14	Door Lock Motor Rear LH	90980-11150
B11	Body ECU	90980-11955		Door Unlock Detection SW Rear LH	
B12	Body ECU	90980-11954	D15	Door Lock Motor Rear RH	
B13	Brake Pedal Load Sensing SW	90980-10860		Door Unlock Detection SW Rear RH	
B14	Back Door Key Lock and Unlock SW	90980-11489	D16	Diode (Rear Wiper)	90980-10962
B15	Back Door Lock Motor	90980-11292	E 1	Electronically Controlled Transmission Solenoid	90980-12326
	Back Door Unlock Detection SW		E 2	Engine Coolant Temp. Sensor (2AZ-FE)	90980-11061
				Engine Coolant Temp. Sensor (3MZ-FE)	90980-10737
			E 3	Engine Hood Courtesy SW	90980-11189

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
E 4	Electronically Controlled Transmission Pattern Select SW	90980-10797	I 9	Injector No.2 (2AZ-FE)	90980-11875
E 5	Engine Control Module	90980-12142		Injector No.2 (3MZ-FE)	90980-11153
E 6	Engine Control Module	90980-12146	I10	Injector No.3 (2AZ-FE)	90980-11875
E 7	Engine Control Module	90980-12144		Injector No.3 (3MZ-FE)	90980-11153
E 8	Engine Control Module	90980-12145	I11	Injector No.4 (2AZ-FE)	90980-11875
E 9	Engine Control Module	90980-12143		Injector No.4 (3MZ-FE)	90980-11153
E10	Electronically Controlled Transmission Solenoid	90980-11658	I12	Injector No.5	90980-11153
E12	Evaporator Temp. Sensor	90980-11918	I13	Injector No.6	
F 1	Front Fog Light LH	90980-11660	I14	Ignition Key Cylinder Illumination	90980-11148
F 2	Front Fog Light RH		I15	Ignition SW	90980-11615
F 3	Front Parking Light LH	90980-11020	I16	Interior Light	90980-10908
	Front Turn Signal Light LH		I17	Inner Mirror	90980-11794
F 4	Front Parking Light RH		J 1	Junction Connector	90980-11194
	Front Turn Signal Light RH		J 2	Junction Connector	
F 5	Front Wiper Deicer	90980-11407	J 3	Junction Connector	
F 6	Front Wiper Motor	90980-11599	J 4	Junction Connector	
F 7	Fusible Link Block	-	J 5	Junction Connector	90980-11542
F 8	Front Power Outlet	90980-10760	J 6	Junction Connector	90980-11915
F10	Front Door Speaker LH	90980-10935	J 7	Junction Connector	90980-11542
F11	Front Door Speaker RH		J10	Junction Connector	90980-10807
F12	Fuel Pump	90980-11077	J12	Junction Connector	
	Fuel Sender		J13	Junction Connector	90980-11915
F14	Front Washer Motor	90980-11019	J14	Junction Connector	90980-10976
G 1	Generator	90980-11964	J16	Junction Connector	90980-11915
G 2	Generator	90980-09365	J17	Junction Connector	
G 4	Glove Box Light	90980-11098	J18	Junction Connector	90980-11542
G 5	Gateway ECU	90980-11911	J19	Junction Connector	
H 1	Headlight LH (High Beam)	90980-11659	J20	Junction Connector	
H 2	Headlight LH (Low Beam)	90980-11660	J21	Junction Connector	90980-12374
H 3	Headlight RH (High Beam)	90980-11659	J22	Junction Connector	
H 4	Headlight RH (Low Beam)	90980-11660	J23	Junction Connector	
H 6	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11930	J24	Junction Connector	
H 7	Horn LH	90980-10619	K 1	Knock Sensor (Bank 1)	90980-11875
H 8	Horn RH		K 2	Knock Sensor (Bank 1)	
H 9	Heater Relay	82660-44010	K 3	Knock Sensor (Bank 2)	
H10	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11929	K 4	Key Interlock Solenoid	90980-10795
H11	High Mounted Stop Light	90980-11148		Unlock Warning SW	
I 2	Ignition Coil and Igniter No.1	90980-11885	L 1	License Plate light	90980-11300
I 3	Ignition Coil and Igniter No.2		M 1	Mass Air Flow Meter	90980-11317
I 4	Ignition Coil and Igniter No.3		M 2	Main SW	90980-10957
I 5	Ignition Coil and Igniter No.4		M 3	Multi-Display	90980-12203
I 6	Ignition Coil and Igniter No.5		M 4	Multi-Display	90980-12410
I 7	Ignition Coil and Igniter No.6		M 5	Multi-Display	90980-12012
I 8	Injector No.1 (2AZ-FE)	90980-11875	N 1	Noise Filter (Ignition System)	90980-10843
	Injector No.1 (3MZ-FE)	90980-11153	N 2	Noise Filter (Rear Window Defogger)	90980-10860
			N 3	Navigation ECU	90980-11973

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
N 4	Navigation ECU	90980-11923	R 3	Radio and Player	90980-10997
O 1	Oil Pressure SW	90980-11363	R 4	Radio and Player	90980-12038
O 3	Option Connector 1	90980-10908	R 5	Remote Control Mirror SW	90980-11657
O 4	Option Connector 2		R 6	Room Temp. Sensor	90980-11918
O 5	Overhead J/B	90980-12183	R 7	Rear Combination Light LH	90980-10797
O 6	Occupant Classification ECU	90980-12356	R 8	Rear Combination Light RH	
O 7	Occupant Classification ECU	90980-12357	R 9	Rear Door Speaker LH	90980-10935
O 8	Occupant Classification Sensor Front LH	90980-12353	R10	Rear Door Speaker RH	
O 9	Occupant Classification Sensor Front RH	90980-12354	R11	Rear Interior Light	90980-10908
O10	Occupant Classification Sensor Rear LH		R12	Rear Interior Light SW	90980-10860
O11	Occupant Classification Sensor Rear RH	90980-12353	R13	Rear Power Outlet	90980-10760
P 1	A/T Indicator SW	90980-12362	R14	Rear Side Marker Light LH	90980-11159
	Back-Up Light SW		R15	Rear Side Marker Light RH	90980-10534
	Park/Neutral Position SW		R16	Rear Window Defogger	90980-11259
P 2	Power Steering Oil Pressure SW	90980-11428	R17	Rear Window Defogger	
P 3	Parking Brake SW	90980-10871	R18	Rear Wiper Motor	90980-10908
P 5	Power Window Master SW with ECU	90980-12166	R19	Remote Control Mirror LH	90980-10798
P 6	Power Window Motor Front LH	90980-10797	R20	Remote Control Mirror RH	
P 7	Power Window Motor Front RH		R21	Rear Washer Motor	90980-11051
P 8	Power Window Motor Rear LH		R22	Radio and Player	90980-12183
P 9	Power Window Motor Rear RH		R23	Radio and Player	90980-12259
P10	Power Window SW Front RH	90980-10799	R24	Rear Heater Main SW	90980-10933
P11	Power Window SW Rear LH		R25	Rear Heater Blower Motor	90980-10795
P12	Power Window SW Rear RH		R26	Rear Heater Blower SW	90980-11527
P13	Pretensioner LH	90980-12253	R27	Rear Heater Relay	82660-53010
P14	Pretensioner RH		R28	Rear Seat Entertainment Display	90980-12153
P15	Power Seat Control SW (Driver's Seat Control)	90980-10997	R29	Rear Seat Entertainment ECU	
P16	Power Seat Control SW (Driver's Seat Lumbar Support Control)	90980-10789	R30	Rear Seat Entertainment ECU	90980-12200
P18	Power Seat Motor (Driver's Seat Lumbar Support Control)	90980-10825	R31	Rear Seat Entertainment ECU	90980-12259
P20	Power Seat Motor (Driver's Seat Reclining Control)		S 1	Starter	90980-11400
P21	Power Seat Motor (Driver's Seat Slide Control)		S 2	Starter	90980-09463
P22	Pressure SW	90980-10906	S 3	Seat Heater SW LH	90980-10957
P23	Power Outlet (110V)	90980-10601	S 4	Seat Heater SW RH	90980-10933
P24	Power Seat Control SW (Front Passenger's Seat Control)	90980-10997	S 5	Shift Lock ECU	90980-11319
P25	Power Seat Motor (Driver's Seat Front Tilt Control)	90980-10825	S14	Steering Sensor	82824-45030
P26	Power Seat Motor (Driver's Seat Lifter Control)		S15	Stop Light SW	90980-11118
P27	Power Seat Motor (Front Passenger's Seat Reclining Control)		S16	Side Airbag Sensor Front LH	90980-12225
P28	Power Seat Motor (Front Passenger's Seat Slide Control)		S17	Side Airbag Sensor Front RH	
R 1	Radiator Fan Motor	90980-10928	S18	Side Airbag Squib LH	90980-11864
R 2	Radio and Player	90980-10996	S19	Side Airbag Squib RH	
			S20	Sliding Roof Control ECU	90980-10801
			S22	Stereo Power Amplifier	90980-10807
			S23	Stereo Power Amplifier	90980-10848
			S25	Seat Heater LH	90980-10797
			S26	Seat Heater RH	
			S27	Skid Control ECU with Actuator	90980-12297

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
S28	Short Connector	90980-12366	V 2	VSV (ACIS No.2)	90980-11149
S29	Short Connector	90980-12365	V 4	VSV (EVAP)	90980-11156
S30	Short Connector	90980-10859	V 5	VSV (ACM)	
S31	Short Connector	90980-10860	V 6	VVT Sensor LH	90980-10947
S32	Side Airbag Sensor Rear LH	90980-12225	V 7	VVT Sensor RH	
S33	Side Airbag Sensor Rear RH		V 8	VSC Warning Buzzer	90980-10906
T 1	Theft Deterrent Horn	90980-10619	V 9	Garage Door Opener	90980-11369
T 3	Turbine Speed Sensor	90980-11156		Vanity Light LH	
T 4	Theft Deterrent ECU	90980-12169	V10	Vanity Light RH	
T 5	Theft Deterrent Indicator Light	90980-12063	V11	Vapor Pressure Sensor	90980-11860
T 6	TRAC Off SW	90980-11013	V13	Video Terminal	90980-12221
T 7	Transponder Key Amplifier	90980-12092	V14	VSV (Canister Closed Valve)	90980-11859
T 8	Turn Signal Flasher	90980-10799	V15	Voltage Inverter	90980-10799
T 9	Towing Converter	90980-11527	W 1	Washer Level Sensor	90980-11068
T10	Trailer Hitch	90980-10794	W 3	Water Temp. SW No.1	90980-11235
T11	Tweeter LH	90980-11013	W 4	Water Temp. SW No.2	90980-11243
T12	Tweeter RH		W 5	Wireless Door Lock Buzzer	90980-11142
T13	Throttle Control Motor	90980-11858	W 6	Wireless Door Lock ECU	90980-11909
	Throttle Position Sensor		Y 1	Yaw Rate Sensor	90980-11904
T14	Transponder Key Computer	90980-11911			
T15	Telltale Light Assembly	90980-12221			
T16	Indicator Light Wire Sub Assembly				
	Transmission Control SW				
	Transmission Shift Main SW				