

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A2	Ambient Temp. Sensor	90980-11070	A76	Skid Control ECU	90980-12525
A3	Horn (High)	90980-10619	A77	Brake Stroke Simulator Cylinder	90980-11009
A4	Horn (Low)		A78	Short Connector	90980-11466
A6	A/C Condenser Fan Motor	90980-10928	A79	Short Connector	90980-11467
A7	Radiator Fan Motor		A80	Brake Pedal Stroke Sensor	90980-11150
A8	Headlamp (LH High)	90980-11659	B1	Windshield Wiper Motor	90980-11599
A13	Airbag Sensor (Front LH)	90980-12490	C2	Mass Air Flow Meter	90980-12292
A14	Speed Sensor (Front LH)	90980-11002	C4	Engine Coolant Temp. Sensor	90980-10735
A16	Brake Fluid Level Warning SW	90980-11207	C5	Throttle Body Assembly	90980-11858
A17	Accelerator Position Sensor	90980-12303	C6	VSV (Purge)	90980-11156
A18	Parking Brake SW	90980-10871	C7	Fuel Injector (No.1)	90980-11875
A19	Stop Lamp SW	90980-11118	C8	Fuel Injector (No.3)	
A27	A/C Pressure Sensor	90980-10845	C9	Fuel Injector (No.2)	
A28	Airbag Sensor (Front RH)	90980-12490	C10	Fuel Injector (No.4)	
A29	Headlamp (RH High)	90980-11659	C11	Ignition Coil (No.1)	90980-11885
A35	Speed Sensor (Front RH)	90980-11002	C12	Ignition Coil (No.3)	
A37	Windshield Washer Motor	90980-11019	C13	Ignition Coil (No.2)	
A40	Junction Connector	90980-11661	C14	Ignition Coil (No.4)	
A41	Junction Connector	90980-12372	C15	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178
A42	Junction Connector		C16	Noise Filter (Ignition)	90980-10843
A43	Junction Connector	90980-11194	C20	Crankshaft Position Sensor	90980-10947
A44	Junction Connector		C22	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
A45	Headlamp (LH Low)	82824-60460	C23	Engine Oil Pressure SW	90980-11363
A46	Turn Signal and Parking Lamp (Front LH)	90980-11020	C30	Knock Control Sensor (Bank 1)	90980-11875
A47	Side Marker Lamp (Front LH)	90980-11162	C31	Camshaft Position Sensor	90980-10947
A48	Wireless Door Lock Buzzer	90980-11142	C32	Camshaft Timing Oil Control Valve	90980-11162
A49	Headlamp (RH Low)	82824-60460	C58	Inverter	90980-12326
A50	Turn Signal and Parking Lamp (Front RH)	90980-11020	C59	Motor Generator No.1	90980-11658
A51	Side Marker Lamp (Front RH)	90980-11162	C60	Motor Generator No.2	90980-11034
A52	Washer Level Warning SW	90980-11068	C61	Motor Generator No.2	90980-11143
A58	Junction Connector	90980-11661	C62	Park/Neutral Position SW	90980-12362
A61	Hybrid Vehicle Control ECU	82824-33200	C63	Compressor Motor	90980-12303
A62	Inverter	90980-12630	C64	Hybrid Vehicle Control ECU	82824-33210
A63	Current Breaker Sensor	90980-12490	E1	Diode (Door Courtesy Rear LH)	90980-10962
A64	Water Pump Motor (A/C)	90980-10887	E2	Diode (Door Courtesy Rear RH)	
A65	Water Pump Motor (Hybrid Vehicle)	90980-11885	E3	Outer Mirror SW	90980-11657
A66	Power Steering ECU	90980-12483	E5	Diode (Door Courtesy Front LH)	90980-10962
A67	Power Steering ECU	90980-12326	E6	Main Body ECU	90980-12330
A68	Power Steering ECU	90980-12648	E7	Main Body ECU	90980-12561
A69	Power Steering Motor		E8	Main Body ECU	90980-12329
A70	Power Steering Motor	90980-12495	E9	Main Body ECU	90980-12328
A71	Power Steering Torque Sensor	90980-12520	E10	Data Link Connector 3	90980-11665
A72	Brake Actuator	90980-12297	E11	Automatic Light Control Sensor	90980-12056
A73	Skid Control ECU	90980-12527	E12	Ion Generator	90980-11909
A74	Skid Control ECU	90980-12528	E13	VSC Warning Buzzer	90980-10906
A75	Skid Control ECU	90980-12529	E14	Turn Signal Flasher	90980-10799

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
E16	Airbag Squib (Steering Wheel Pad)	90980-12160	F4	Hazard Warning Signal SW	90980-12113
E17	Steering Sensor	90980-12162	F5	Glove Box Lamp	90980-11098
E18	Spiral Cable	90980-12552	F8	Radio Receiver Assembly	90980-12460
E19	Windshield Wiper SW Assembly	90980-12358	F9	Navigation Receiver Assembly	90980-12038
E20	Windshield Wiper SW Assembly	90980-12359	F10	Navigation Receiver Assembly	90980-12460
E21	Headlamp Dimmer SW Assembly	90980-12460	F11	Radio Receiver Assembly	90980-12423
E27	A/C Room Temp. Sensor	90980-11918	F12	Navigation Receiver Assembly	90980-12404
E29	Power Outlet Socket (Front)	90980-12498	F13	Navigation Receiver Assembly	90980-11909
E30	Airbag Sensor Assembly Center	90980-12391	F14	Navigation Receiver Assembly	90980-12209
E34	Yaw Rate Sensor	90980-11904	F15	Antenna Amplifier	90980-10871
E35	Power Outlet Socket (Rear)	90980-12498	F16	A/C Control Assembly	90980-12559
E37	Diode (Door Courtesy Front RH)	90980-10962	F17	Stereo Jack Adapter	82824-21030
E38	A/C Amplifier	90980-12557	F18	Stereo Component Amplifier	90980-10801
E39	Blower Motor	90980-11667	F19	Stereo Component Amplifier	90980-12554
E40	Junction Connector	90980-11661	F20	Stereo Component Amplifier	90980-10803
E41	Junction Connector		F21	Tweeter (Front LH)	90980-10860
E42	Junction Connector	90980-12355	F23	Tweeter (Front RH)	
E43	Junction Connector		F25	Junction Connector	90980-11542
E44	Junction Connector		F26	Radio Receiver Assembly	90980-12038
E45	Junction Connector		H1	Speaker (Front Door RH)	90980-10935
E46	Junction Connector		H2	Outer Rear View Mirror (RH)	90980-12056
E48	Junction Connector	90980-11542	H4	Power Window Regulator Motor (Front Passenger's Side)	90980-10797
E49	Junction Connector		H5	Door Lock Control SW	90980-11950
E50	ID Code Box	90980-12558	H6	Power Window SW (Front Passenger's Side)	90980-10789
E51	Steering Lock ECU	90980-12092	H7	Courtesy Lamp (Front Door RH)	90980-11148
E52	Power SW	90980-12370	H8	Door Lock Assembly (Front Passenger's Side)	90980-12226
E53	Tire Pressure Warning Reset SW	90980-10906	I1	Speaker (Front Door LH)	90980-10935
E54	Airbag Squib (Knee Airbag)	90980-12253	I3	Outer Rear View Mirror (LH)	90980-12056
E55	Seat Heater SW	90980-10797	I4	Power Window Regulator Motor (Front LH)	90980-10797
E56	Electrical Key Oscillator (Console)	90980-12296	I6	Courtesy Lamp (Front Door LH)	90980-11148
E57	Shift Lock Control ECU	90980-12552	I7	Door Lock Assembly (Driver's Side)	90980-12226
E58	Certification ECU	90980-12388	J1	Power Window SW (Rear RH)	90980-10789
E60	Tire Pressure Warning ECU	90980-12552	J3	Power Window Regulator Motor (Rear RH)	90980-10797
E61	Option Connector (Bus Buffer)	90980-10860	J5	Door Lock Assembly (Rear RH)	90980-12226
E62	Junction Connector	90980-12355	K1	Power Window SW (Rear LH)	90980-10789
E63	Junction Connector		K3	Power Window Regulator Motor (Rear LH)	90980-10797
E66	ECO SW	90980-12558	K5	Door Lock Assembly (Rear LH)	90980-12226
E67	Fuel Lid Opener SW	90980-12366	M1	Power Window Master SW	90980-12122
E68	PTC Heater	90980-10903	N1	Airbag Sensor Assembly Center	90980-12449
E69	Junction Connector	90980-11542	N3	Front Seat Inner Belt (Driver's Side)	90980-10942
E70	Short Connector	90980-10860	N6	Door Courtesy SW (Driver's Side)	90980-10871
E71	Short Connector	90980-10859	N7	Side Airbag Sensor (Front LH)	90980-12225
E72	A/T Shift Lever Illumination	90980-12551	N8	Pretensioner (LH)	90980-12253
F1	Combination Meter	90980-12554			
F2	Combination Meter	90980-12553			
F3	Clock	90980-12460			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
N10	Fuel Suction Pump and Gage Assembly	90980-11077	Q6	Overhead J/B	90980-11989
N11	Electrical Key Oscillator (Rear Seat)	90980-12296	Q7	Vanity Lamp (LH)	-
N12	Side Airbag Sensor (Rear LH)	90980-11856	Q8	Vanity Lamp (RH)	
N13	Door Courtesy SW (Rear LH)	90980-10871	Q9	Room Lamp (Center)	
N15	Noise Filter (Dome and Stop)	90980-10916	Q10	Map Lamp (RH)	
N16	Center Stop Lamp	90980-11159	Q11	Map Lamp (LH)	
N17	Canister Pump Module	90980-12380	Q12	Sliding Roof Control ECU and Motor	90980-10997
N18	Noise Filter (Rear Window Defogger)	90980-10916	S1	License Plate Lamp (RH)	90980-11148
N19	Rear Window Defogger	90980-10913	S2	Back-Up Light (RH)	
N20	Tire Pressure Warning Antenna and Receiver	90980-12366	S3	Back-Up Light (LH)	
N21	Curtain Shield Airbag Squib (LH)	90980-12575	S4	License Plate Lamp (LH)	
N23	Diode (Luggage Compartment Lamp)	90980-10962	S5	Door Lock Assembly (Luggage)	90980-10908
N24	Luggage Compartment Lamp	90980-11148	S6	Luggage Compartment Door Lock Cylinder	90980-11060
N25	Electrical Key Oscillator (Inside Luggage Room)	90980-12296	S9	Luggage Electrical Key SW	90980-11967
N27	Junction Connector	90980-12374	S11	Rear Combination Lamp (LH)	90980-10795
N28	Junction Connector	90980-11915	S12	Rear Combination Lamp (RH)	
N29	Junction Connector	90980-11539	S14	Electrical Key Oscillator (Outside Luggage Room)	90980-12381
N35	Vapor Pressure Sensor	90980-11143	S15	Junction Connector	90980-10803
N36	Fuel Lid Opener Motor	90980-11019	S16	Junction Connector	90980-11915
N37	Fuel Lid Courtesy SW	90980-10825	T1	Power Seat Motor (Front Passenger's Seat Slide Control)	90980-10825
N38	Battery Blower Motor	90980-10795	T3	Power Seat Motor (Front Passenger's Seat Reclining Control)	
O1	Airbag Sensor Assembly Center	90980-12450	T6	Seat Heater (RH)	90980-10906
O3	Front Seat Inner Belt (Front Passenger's Side)	90980-11156	T7	Front Seat Inner Belt (Front Passenger's Side)	90980-11156
O4	Occupant Classification ECU	90980-12356	T8	Power Seat SW (Front Passenger's Seat)	90980-10997
O6	Door Courtesy SW (Front Passenger's Side)	90980-10871	T10	Occupant Classification ECU	90980-12356
O7	Side Airbag Sensor (Front RH)	90980-12225	T11	Occupant Classification ECU	90980-12357
O8	Pretensioner (RH)	90980-12253	T14	Occupant Classification Sensor (Front LH)	90980-12353
O9	Side Airbag Sensor (Rear RH)	90980-11856	T15	Occupant Classification Sensor (Rear LH)	90980-12354
O10	Door Courtesy SW (Rear RH)	90980-10871	T16	Occupant Classification Sensor (Front RH)	
O14	Speaker (Rear LH)	90980-10795	T17	Occupant Classification Sensor (Rear RH)	90980-12353
O15	Speaker (Rear RH)		T18	Junction Connector	90980-12374
O16	Curtain Shield Airbag Squib (RH)	90980-12575	U1	Power Seat Motor (Driver's Seat Slide Control)	90980-10825
O18	Door Control Receiver	90980-50011	U2	Power Seat Motor (Driver's Seat Front Vertical Control)	
O19	Electrical Key Antenna	90980-12043	U3	Power Seat Motor (Driver's Seat Reclining Control)	
O20	Junction Connector	90980-12374	U4	Power Seat Motor (Driver's Seat Lifter Control)	
O21	Junction Connector	90980-11539	U5	Power Seat Motor (Driver's Seat Lumbar Support Control)	
O23	Brake Control Power Supply Assembly	82824-50190	U6	Seat Heater (LH)	90980-10906
O24	Battery Thermometer Sensor	90980-11148	U7	Power Seat SW (Driver's Seat)	90980-10997
O25	Fusible Link Block	82675-33030	U8	Power Seat SW (Driver's Seat Lumbar Support Control)	90980-10789
P1	Rear Window Defogger	90980-10914	U11	Junction Connector	90980-12374
Q1	Vanity Lamp SW (LH)	90980-12322			
Q2	Vanity Lamp SW (RH)				
Q3	Inner Rear View Mirror	90980-12366			
Q5	Microphone				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
W1	Door Outside Handle (Front RH)	90980-12382	k1	VSV (Canister Closed Valve)	90980-11859
W2	Electrical Key Oscillator (Front Door RH)	90980-12380	n2	Battery Voltage Sensor	90980-12221
X1	Door Outside Handle (Front LH)	90980-12382	n3	System Main Relay	90980-11296
X2	Electrical Key Oscillator (Front Door LH)	90980-12380	n4	Converter (Hybrid Vehicle)	90980-12012
Y1	Side Airbag Squib (RH)	90980-12452	n5	Inter Lock SW	90980-11918
Z1	Side Airbag Squib (LH)		n6	Junction Connector	90980-11529
a1	Spiral Cable	90980-12361	o1	Battery Voltage Sensor	90980-12259
	Steering Pad SW			Hybrid Vehicle Battery	
b1	Cruise Control SW	90980-12296	r3	Battery Voltage Sensor	90980-11915
	Spiral Cable			Hybrid Vehicle Battery	
c1	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12219	s1	System Main Relay	90980-11775
c2	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12224	s2	Battery Voltage Sensor	82675-47060
d1	Occupant Classification ECU	90980-12357		Hybrid Vehicle Battery	
d2	Occupant Classification Sensor (Front LH)	90980-12353	t1	System Main Relay	90980-11775
d3	Occupant Classification Sensor (Rear LH)		t2	Battery Voltage Sensor	82675-47070
d4	Occupant Classification Sensor (Front RH)			Hybrid Vehicle Battery	
d5	Occupant Classification Sensor (Rear RH)		v1	Converter (Hybrid Vehicle)	99141-12004
e1	A/C Amplifier	90980-12264	v2	System Main Relay	90980-11259
	A/C Blower Assembly		v3	Converter (Hybrid Vehicle)	99141-12004
f1	Speed Sensor (Rear RH)	90980-11900	v4	System Main Relay	90980-10916
g1	Speed Sensor (Rear LH)		v5	Converter (Hybrid Vehicle)	90980-09250
h1	Inverter	90980-12628	v6	System Main Relay	90980-09499
h3	System Main Relay	82675-36050	w1	Converter (Hybrid Vehicle)	99141-12004
h4	System Main Relay		w2	System Main Relay	90980-10871
h5	Converter (Hybrid Vehicle)	82675-28470	x1	Motor Generator No.1	90980-12675
j1	Compressor Motor	90980-12568	x2	Inverter	90980-12680
j2	Inverter	90980-12629	y1	Motor Generator No.2	90980-12675
			y2	Inverter	90980-12679