


Chevrolet Corvette 2017 – 2018 fuse box diagram

Engine compartment fuse block

There is one fuse block in the engine compartment on the passenger side of the vehicle.

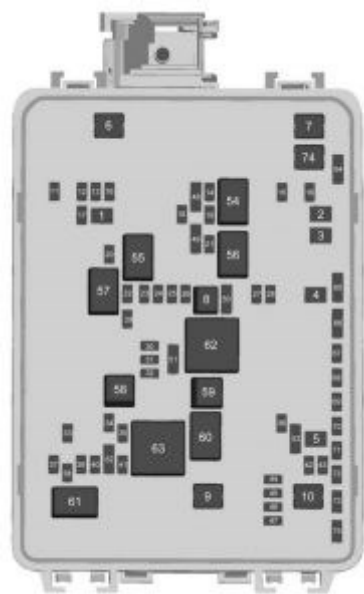

Chevrolet Corvette – fuse box – engine compartment


Fuses	Usage
1	Front wiper
2	Starter
3	ABS valves
4	Engine control module
5	Electric parking brake
6	Front HVAC
7	ABS pump
8	Logistics
9	Vacuum pump
10	Electronic rear differential module
11	Heated Seat 1
12	Column Lock Module
13	Steering Column
14	Glove Box
15	Engine Inside Position
16	Body Control Module 6
17	HVAC controls
18	Body Control Module 5
19	Heated Seat 2
20	Body Control Module 7

21	Electric Steering Column Lock
22	Display
23	Auxiliary Outlet
24	Radio
25	Instrument Cluster HUD
26	Inside Rearview Mirror
27	Ignition – odd
28	Ignition – even
29	Data Link Connector
30	Seat Fan
31	Fuel Pump Power Module
32	Exhaust Valve 1
33	Horn
34	Headlamp Washer
35	A/C clutch
36	Engine Outside Position
37	Real Time Damping
38	Intercooler
39	Left Headlamp
40	Right Headlamp
41	Headlamp Washer Pump
42	Exhaust Valve 2
43	Reverse Lockout
44	Electric Rear Differential Module
45	Rear Transmission Cooler Fan
46	Transmission Control Module
47	Canister Vent
48	Integrated chassis control module/Automatic occupant sensing
49	Theft/Vehicle interface module
50	Engine/Transmission
51	Instrument cluster
52	High-beam headlamps
53	Transmission control module/Engine control module
54	Starter
55	Front wiper – Low/High
56	Run/Crank
57	Front wiper motor
58	Headlamp washer
59	A/C control

60	Logistics 1
61	Low-beam headlamps
62	Engine control module
63	Vacuum pump
64	—
65	—
66	—
67	—
68	—
69	—
70	—
71	—
72	—
73	—
74	Transmission cooling fan 2
75	—
76	Communication gateway module
Relay	Usage
54	Starter
55	Front wiper – Low/High
56	Run/Crank
57	Front wiper motor
58	Headlamp washer
59	A/C control
60	—
61	Low-beam headlamps
62	Engine control module
63	Vacuum pump

Rear Compartment Fuse Block

The rear compartment fuse block is in the rear of the vehicle, under the load floor. Lift the carpet and access door in the center of the load floor to access the fuses.

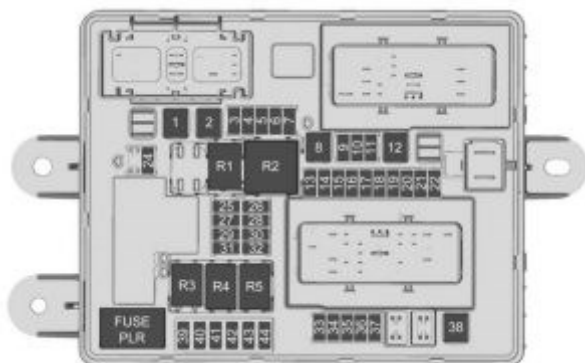

Chevrolet Corvette – fuse box – rear compartment

Fuses	Usage
1	Window
2	Driver Power Seat
3	Passive entry/Passive start 2
4	Passive entry/Passive start 1
5	Engine Control Module
6	Heated Mirrors
7	Body Control Module 4
8	Rear Window Defogger
9	GBS
10	Body Control Module 2
11	Steering Wheel
12	Passenger Power Seat
13	—
14	Exterior rearview mirror
15	Body Control Module 1
16	Body Control Module 3
17	Sensing Diagnostic Module/Automatic Occupant Sensing
18	Logistics 2
19	Body Control Module 8
20	Integrated Chassis Control Module
21	Amplifier
22	Rear Accessory Power Outlet
24	Memory Seat Module/Convertible Top
25	Theft-Deterrent PSM
26	Trunk release module
27	OnStar (If Equipped)
28	Camera Module
29	—
30	Fuel Pump Power Module
31	Trunk release module latch
32	Battery Regulated Voltage Control
33	—
34	Convertible Top Solenoid
35	—
36	Passenger Window Switch
37	Front Accessory Power Outlet
38	—
39	—

40	—
41	—
42	—
43	—
44	—

Relays	Usage
R1	—
R2	Rear Window Defogger
R3	—
R4	Front Accessory Power Outlet
R5	Theft (Door Lock Security)