

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

55.Bulkhead Wiring Harness (In Engine Compartment)

A: LOCATION

1. NON-TURBO MODEL


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B6	2	Gray	B-2		Front ABS wheel speed sensor RH
B8	5	★	B-3		Front wiper motor
B10	4	★	B-4		Pressure switch
B11	20	Gray	B-3	T4	Transmission cord
B12	12	★	B-3	T3	
B14	1	Black	B-4		Starter motor
B15	2	Gray	B-4		Front ABS wheel speed sensor LH
B16	2	Gray	B-3		Brake fluid level switch
B21	54	★	B-3	E2	Engine wiring harness
B24	2	Gray	B-3	T1	Back-up light switch (MT model)
B25	2	Brown	B-4	T2	Neutral position switch
B143	20	★	B-4		Main fuse box (M/B)
B144	9	Brown	B-4		
B145	7	Brown	B-4		
B146	2	★	C-4		Front washer motor
B147	2	★	C-4		Rear washer motor
B164	2	Black	C-3		Keyless buzzer
B186	8	★	B-4		Main fuse box (M/B)
B310	46	Black	B-2		VDC CM
B321	2	★	B-1		Hood switch
B360	16	Gray	B-4	F109	Through joint connector
B361	14	★	B-4	F108	
B407	2	★	B-5		Puddle light LH
B430	2	★	B-3		Puddle light RH

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

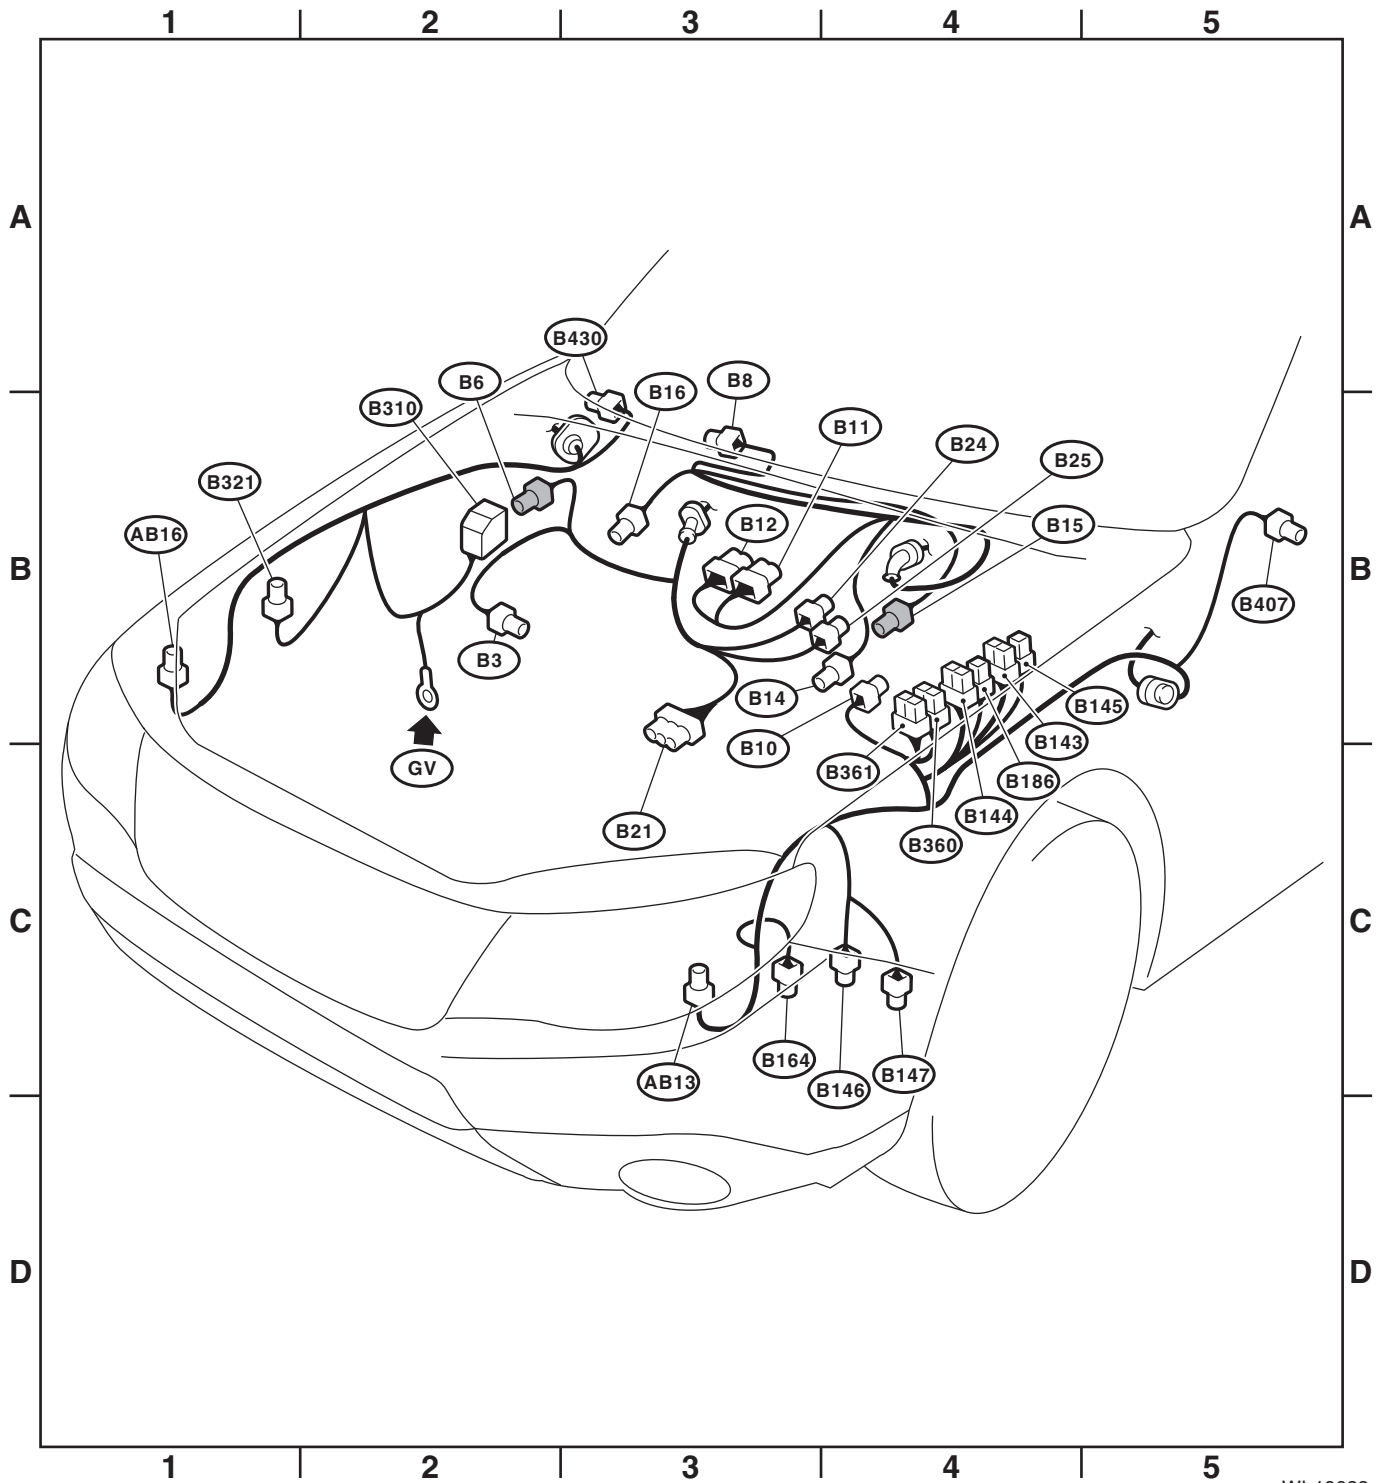

WI-19628

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM


2. TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	B-2		Mass air flow and intake air temperature sensor
B6	2	Gray	B-2		Front ABS wheel speed sensor RH
B8	5	★	B-3		Front wiper motor
B10	4	★	B-4		Pressure switch
B11	20	Gray	B-3	T4	Transmission cord
B12	12	★	B-3	T3	
B14	1	Black	B-3		Starter motor
B15	2	Gray	B-4		Front ABS wheel speed sensor LH
B16	2	Gray	B-3		Brake fluid level switch
B19	4	★	B-3	T5	Rear oxygen sensor cord
B21	54	★	B-3	E2	Engine wiring harness
B143	20	★	B-4		Main fuse box (M/B)
B144	9	Brown	B-4		
B145	7	Brown	B-4		
B146	2	★	C-4		Front washer motor
B147	2	★	C-4		Rear washer motor
B164	2	Black	C-3		Keyless buzzer
B186	8	★	B-4		Main fuse box (M/B)
B310	46	Black	B-2		VDC CM
B321	2	★	B-1		Hood switch
B360	16	Gray	B-4	F109	Through joint connector
B361	14	★	B-4	F108	
B379	4	★	B-3		Front oxygen (A/F) sensor
B384	3	★	B-4	F42	Front wiring harness
B407	2	★	B-5		Puddle light LH
B430	2	★	B-3		Puddle light RH
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	Yellow	C-3		Front sub sensor LH
AB16	2	Yellow	B-1		Front sub sensor RH

Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

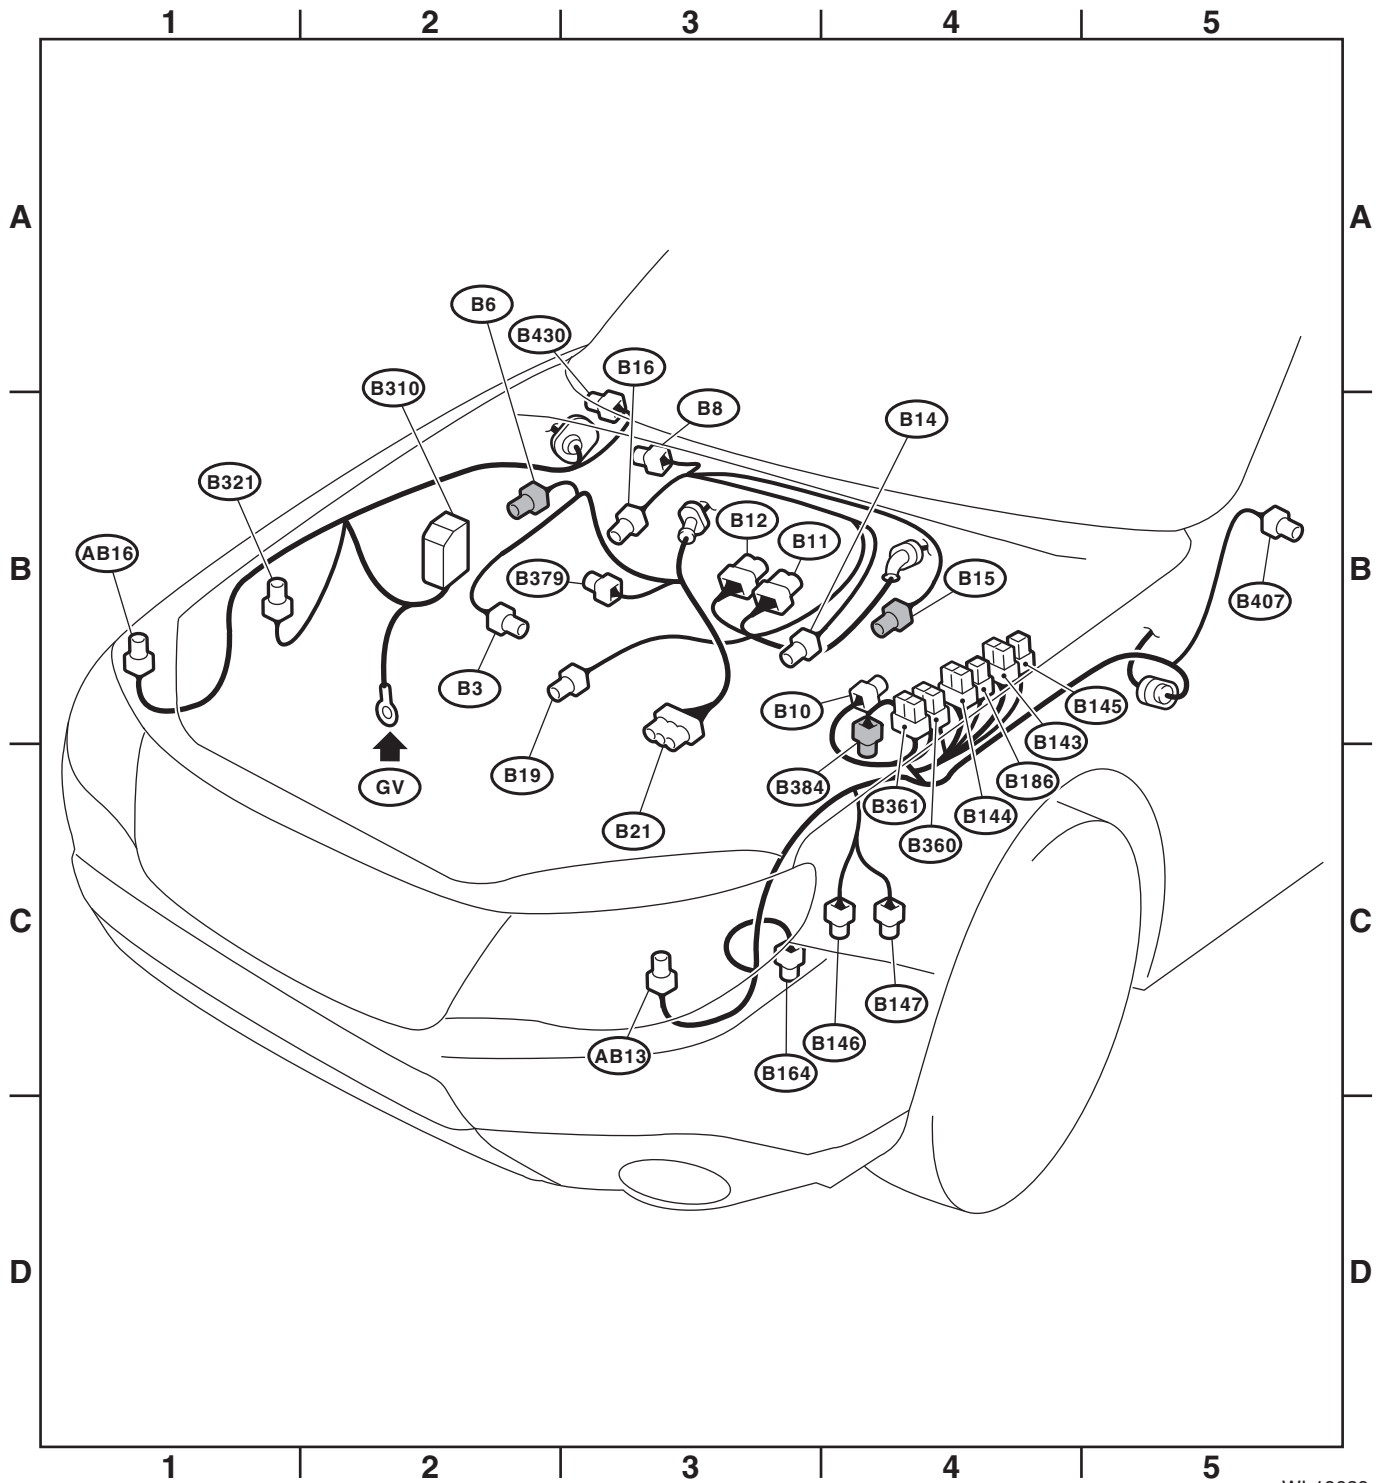

WI-19629