


Oldsmobile Cutlass Supreme 1994 fuse box diagram

Glove Box Fuse Block

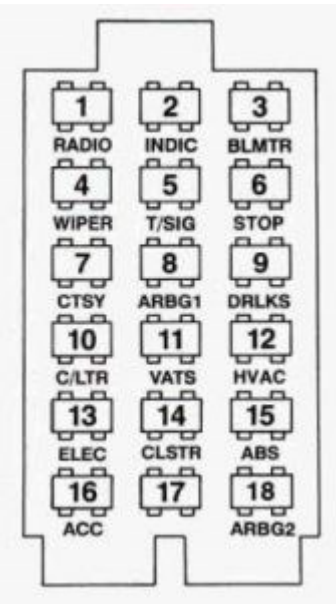


Oldsmobile Cutlass Supreme – fuse box –

glove box fuse block

Fuse	Ampere rating [A]	Usage
1	10	Radio & Clock
2	10	Rear Defogger Timer Relay; Instrument Cluster; Chime Module; Cruise Control; DIU Module (Canada); ABS Lamp Driver Module; SIR
3	20	Blower Motor
4	25	Windshield Wiper & Washer
5	10	Turn Signals/Flasher
6	15	Brake Lights
7	10	Courtesy, Glove Box, Underhood, Trunk, Header Lights; Lighted Inside Rearview Mirror
8	15	SIR
9	20	Door Locks
10	15	Cigar Lighter
11	5	Vehicle Anti-Theft System (Pass-I Key I)
12	15	Blower Control Switch; Solenoid

13	15	Radio & Clock; Passive Restraint Lockout, Passive Restraint Timer; Chime Module; ABSV; ATS
14	15	Cluster; HVAC Controls; HUD; DRL
15	5	ABS Control Module
16	10	Power Door Lock Switch; Seat Belts; Power Outside Mirrors; Power Antenna
17	—	Not Used
18	5	SIR (crank)

Component Center

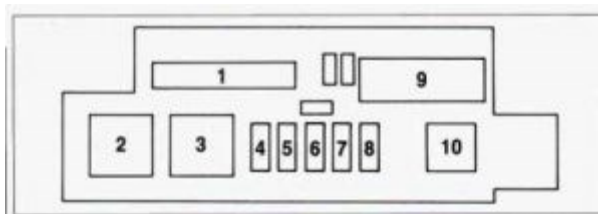


Oldsmobile Cutlass Supreme – fuse box –

component center

Fuse	Ampere rating [A]	Usage
1		Defogger Timer Relay
2		Air Conditioner Blower Relay (HI) (Electronic AC only)
3		Air Conditioner Blower Relay (LO) (Electronic AC only)
4	30	Rear Defogger Circuit Breaker
5	30	Power Accessories Circuit Breaker
6	30	Power Windows and Sunroof Circuit Breaker
7		Not Used
8	20	Lock Control
9		Chime Module
10		Hazard Flasher

Passenger Side Underhood Electrical Center

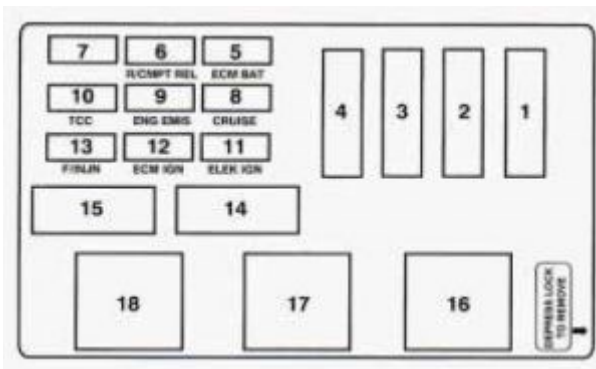


Oldsmobile Cutlass Supreme – fuse box –

passengers side underhood electrical center

Fuse	Ampere rating [A]	Usage
1	60	Instrument Panel
2	60	Instrument Panel
3	60	Cooling Fan
4	60	Instrument Panel
5	20	ECM; Fuel Pump
6	15	Trunk Release
7		Not Used
8	15	Cruise Control; Air Conditioner (3.4L Only)
9	15	Engine Emission Controls
10	15	Transmission Torque Converter Clutch
11	15	Electronic Ignition System
12	15	ECM
13	15	Fuel Injectors

Relay	Usage
14	Air Conditioner Compressor
15	Fuel Pump
16	Not Used
17	Driver Side Engine Cooling Fan Control
18	Passenger Side Engine Cooling Fan Control

Driver Side Underhood Electrical Center

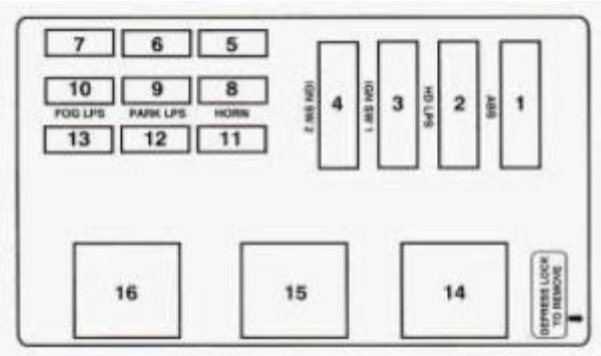

Oldsmobile Cutlass Supreme – fuse box –

driver side underhood electrical center

Fuse	Ampere rating [A]	Usage
1	60	ABS
2	30	Headlamp Circuit Breaker
3	40	Ignition Switch
4	40	Ignition Switch
5		Not Used
6		Not Used
7		Not Used
8	15	Horn
9	25	Park Lamps
10	200	Fog Lamps
11		Not Used
12		Not Used
13		Not Used

Relay	Circuitry
15	Horn
16	Fog Lights
17	ABS