



FRONT SEAT ASSEMBLY
COMPONENTS

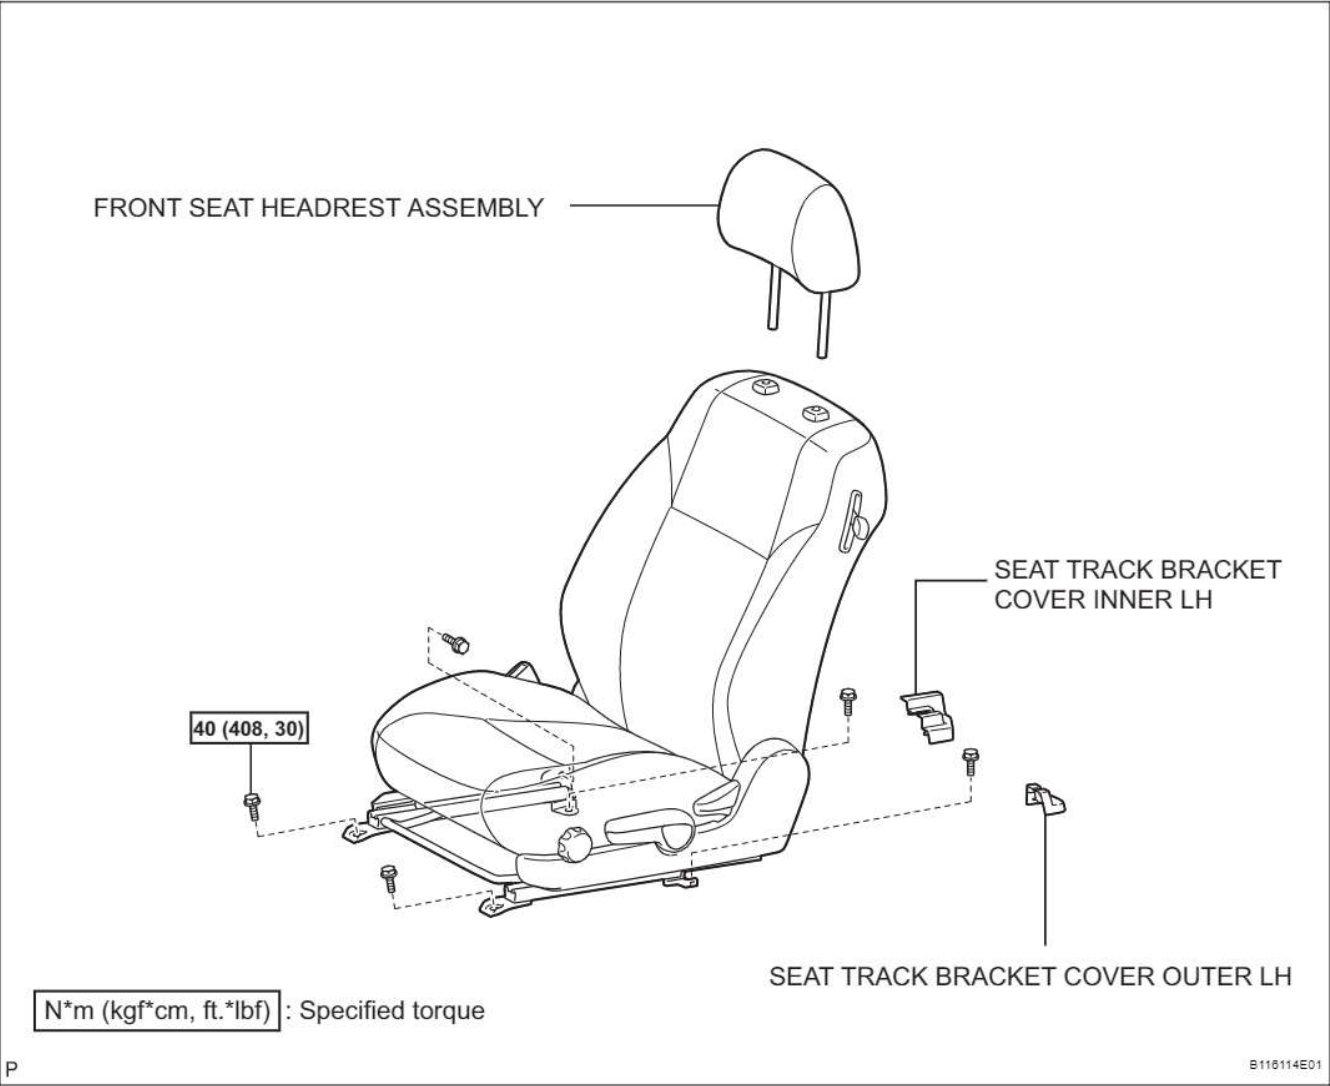


SE-2

SEAT – FRONT SEAT ASSEMBLY

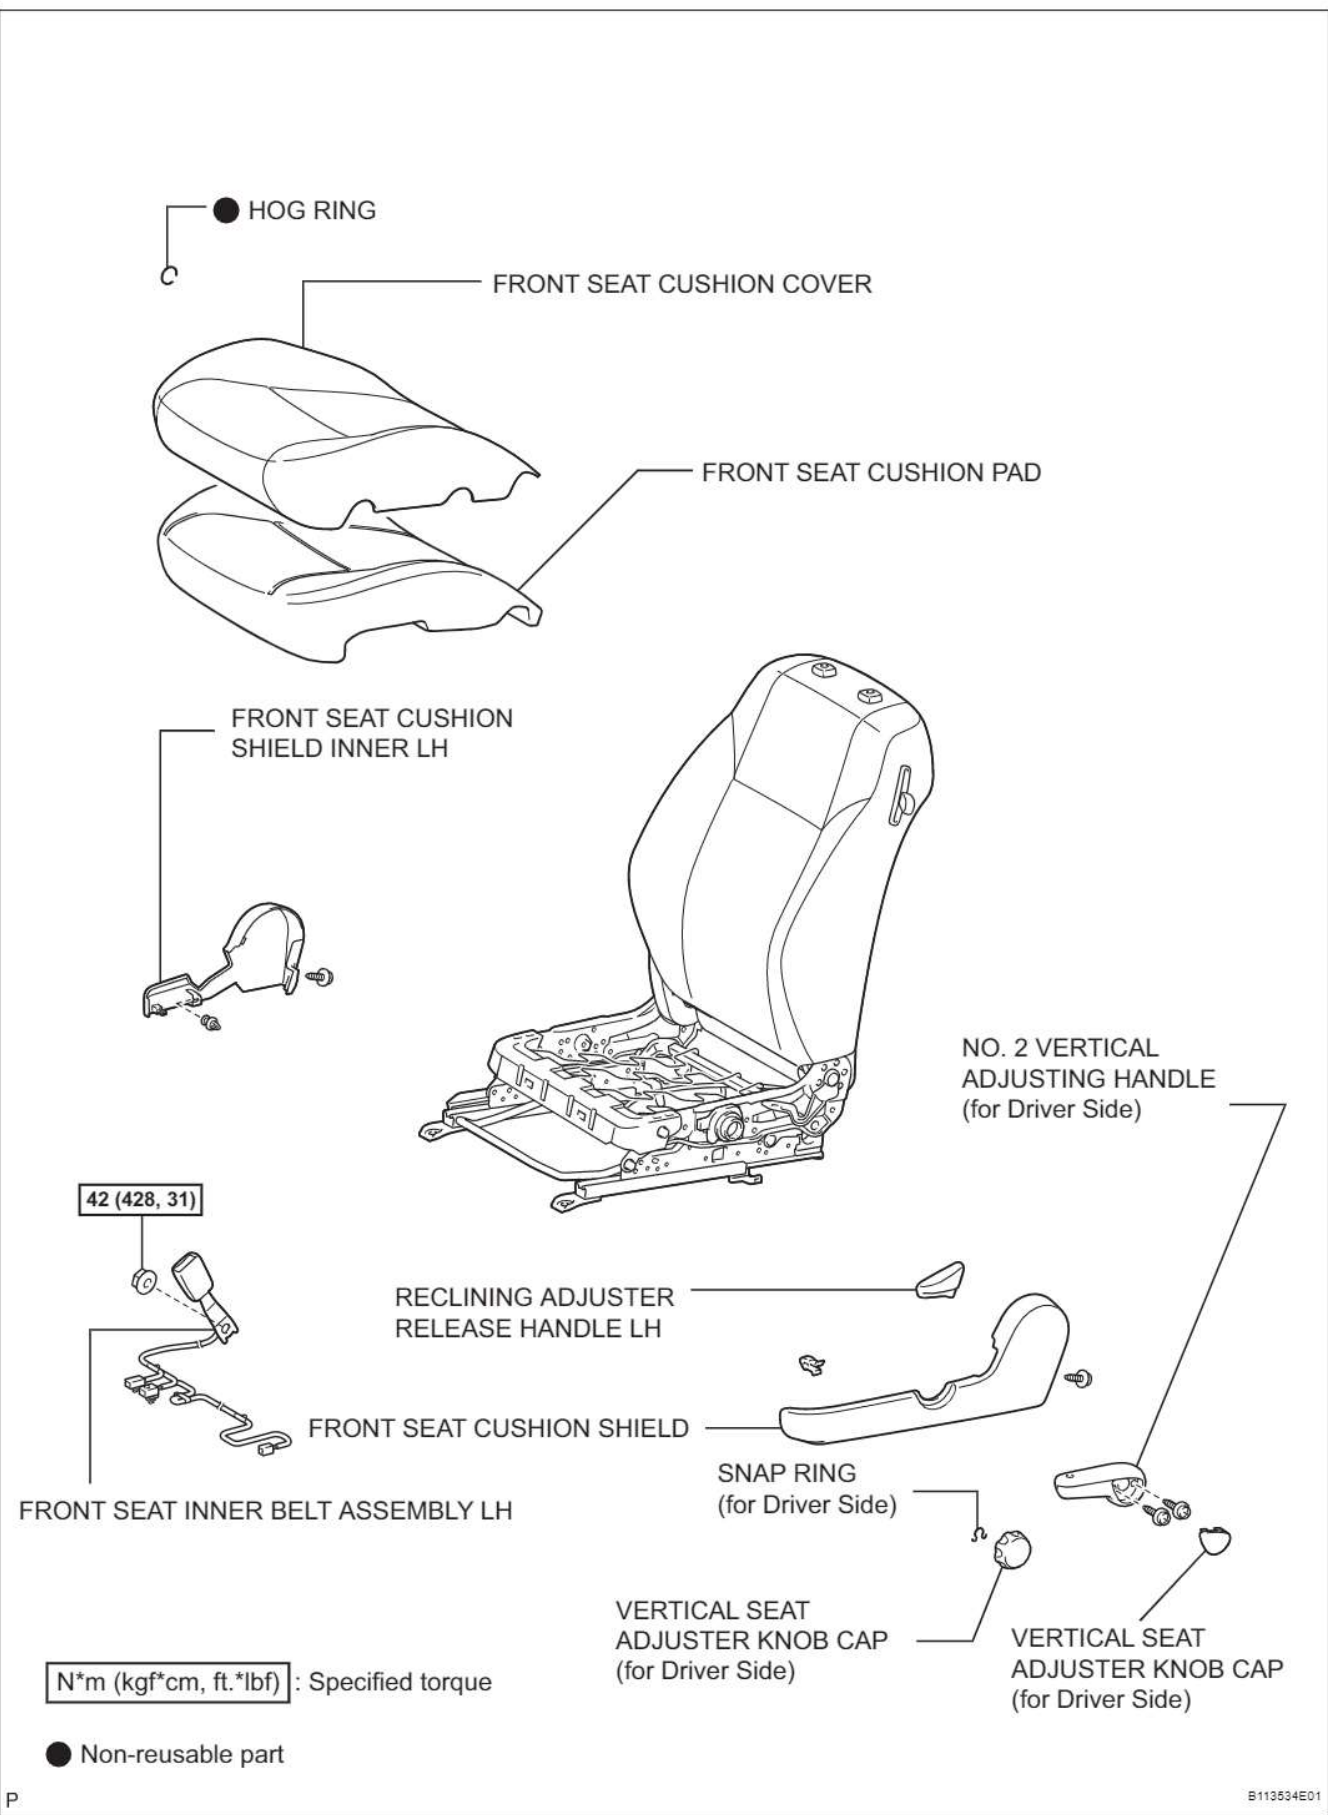

SEAT – FRONT SEAT ASSEMBLY

SE-3

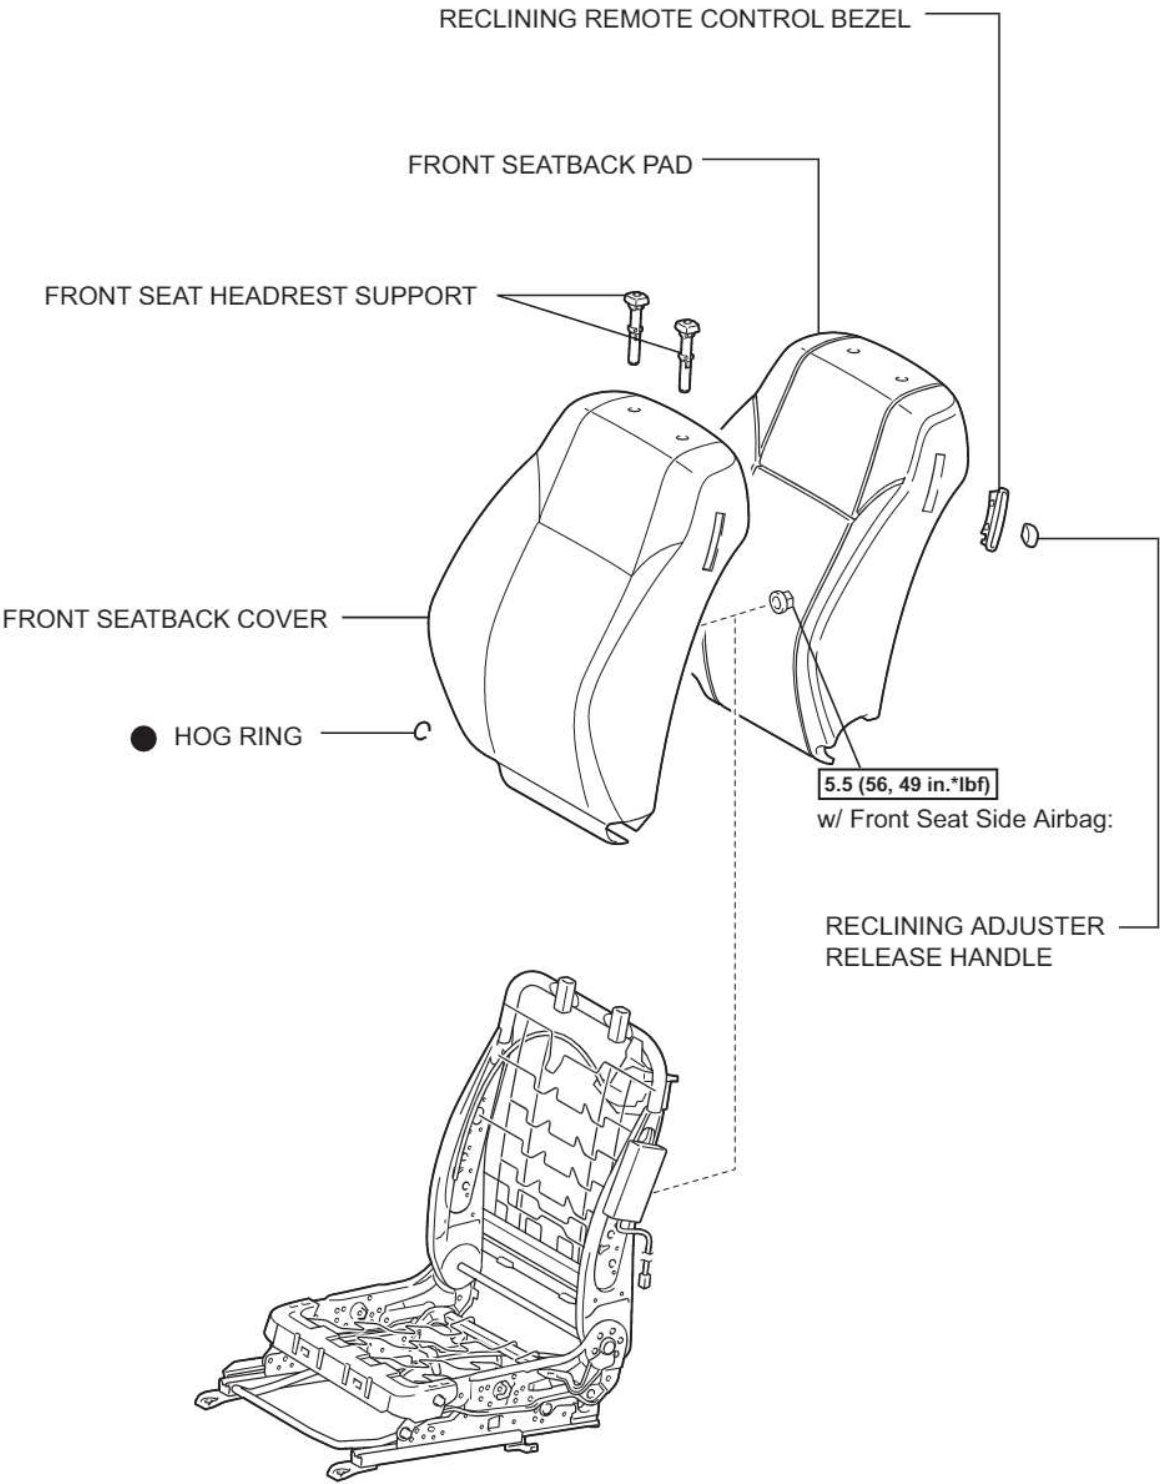

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


P

B113535E01

SE

SE-4

SEAT – FRONT SEAT ASSEMBLY

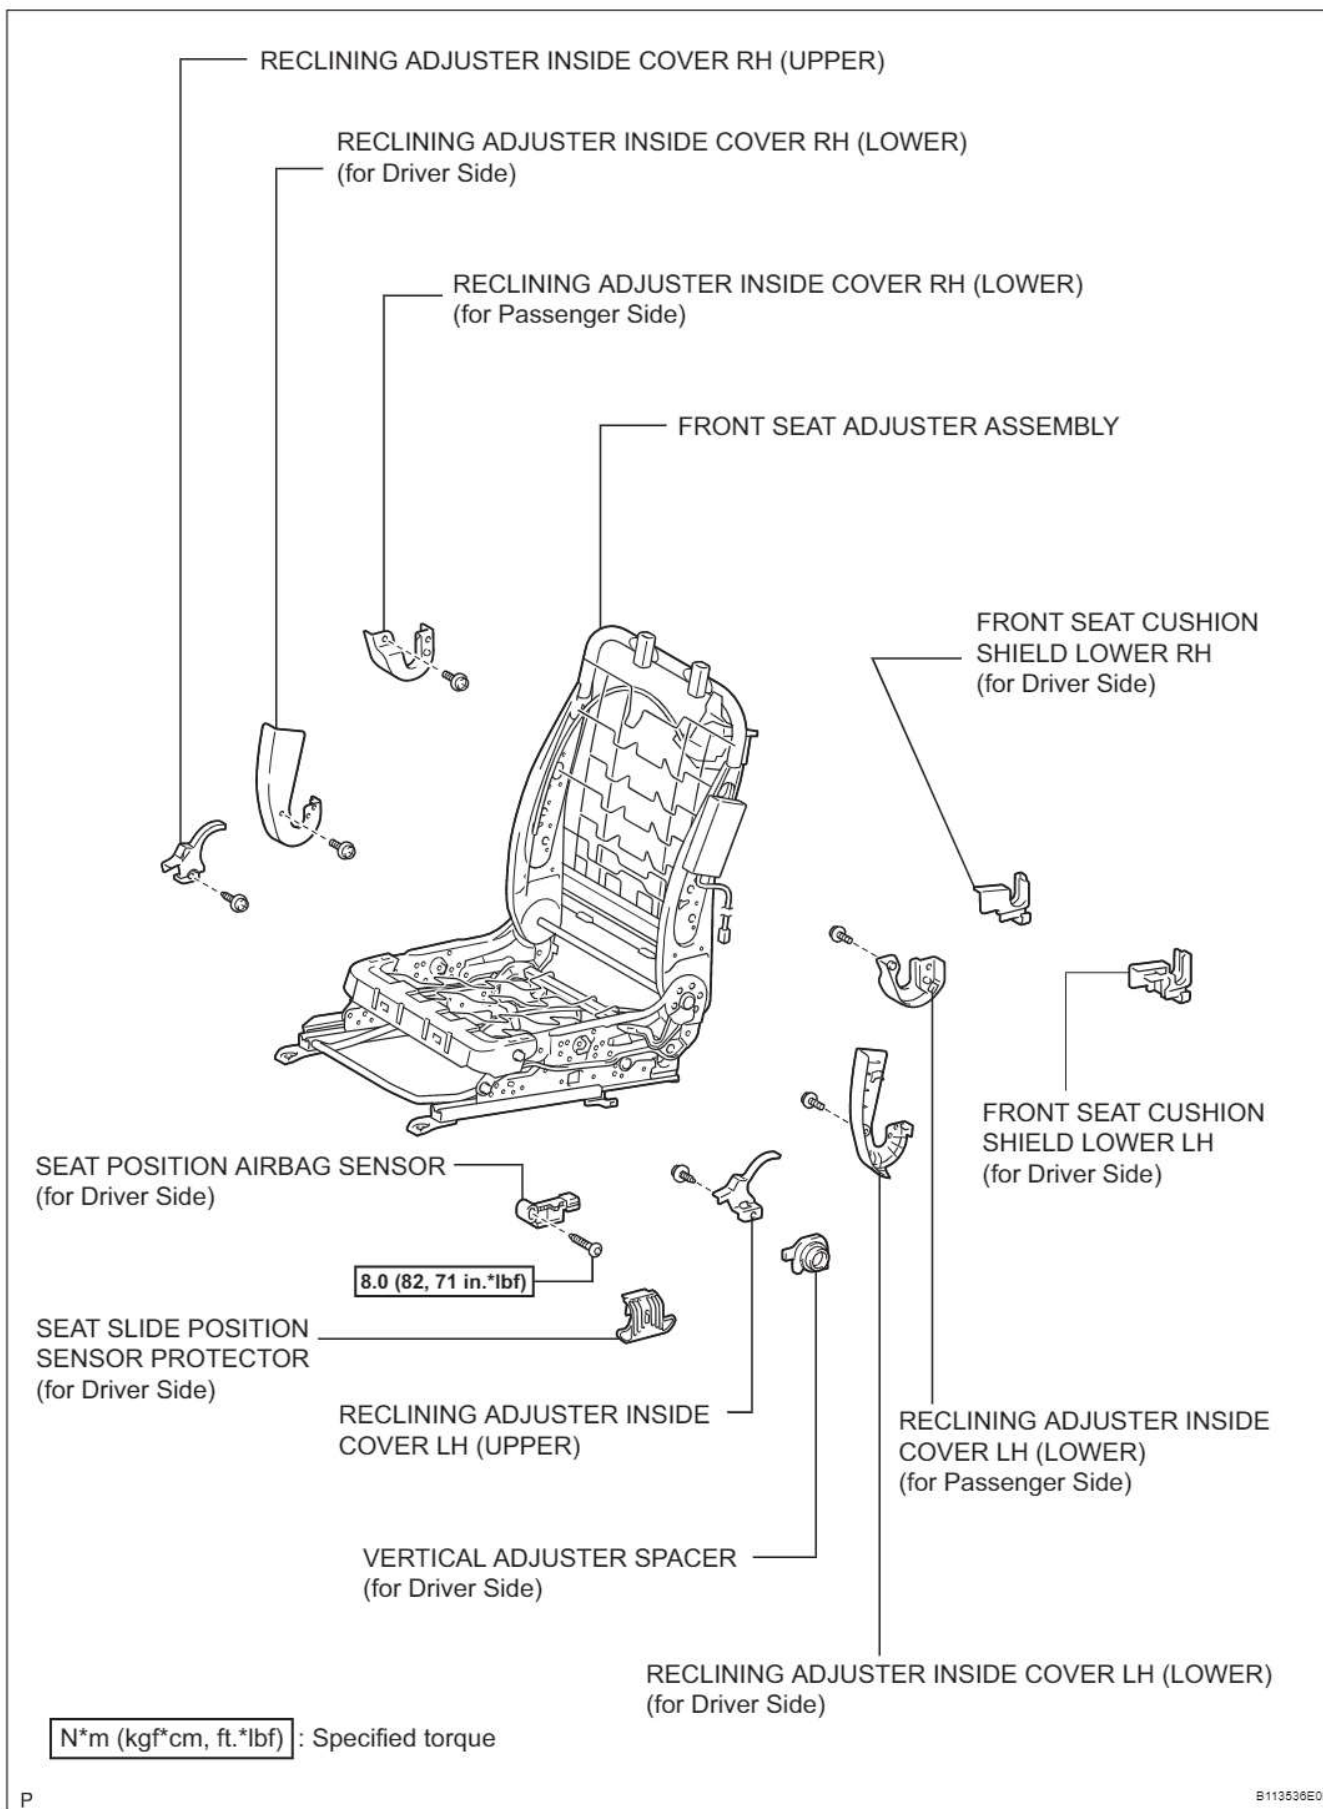

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE SEAT TRACK BRACKET COVER OUTER LH

- (a) Using a screwdriver, detach the 2 claws and remove the bracket cover.

HINT:

Tape the screwdriver tip before use.

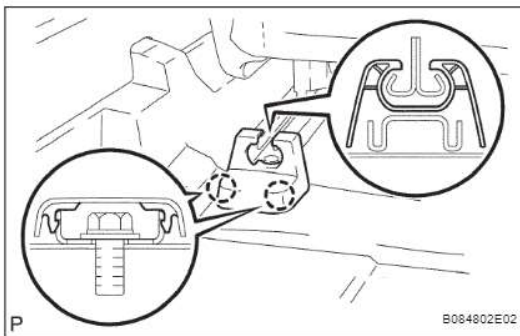


3. REMOVE SEAT TRACK BRACKET COVER INNER LH

- (a) Using a screwdriver, detach the 3 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

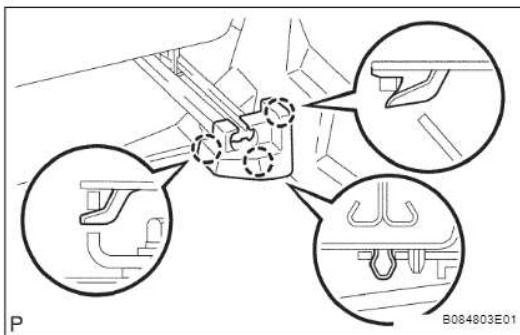

4. REMOVE FRONT SEAT HEADREST ASSEMBLY

5. REMOVE FRONT SEAT ASSEMBLY

- (a) Lift up the seat track adjusting handle and move the seat to the rearmost position.
- (b) Remove the 2 bolts on the front side of the seat.
- (c) Lift up the seat track adjusting handle and move the seat to the foremost position.
- (d) Remove the 3 bolts on the rear side of the seat.
- (e) Lift up the seat track adjusting handle and move the seat to the center position. Also, operate the reclining adjuster release handle and move the seatback to the upright position.
- (f) Disconnect the connectors under the seat. Then remove the front seat.

NOTICE:

Be careful not to damage the vehicle body.

SE

SE-6

SEAT – FRONT SEAT ASSEMBLY

DISASSEMBLY**CAUTION:**

Wear protective gloves. Sharp areas on the seat adjuster frame may injure your hands.

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE VERTICAL SEAT ADJUSTER KNOB LH (for Driver Side)

- (a) Using a screwdriver, remove the snap ring as shown in the illustration. Then remove the knob.

HINT:

Tape the screwdriver tip before use.

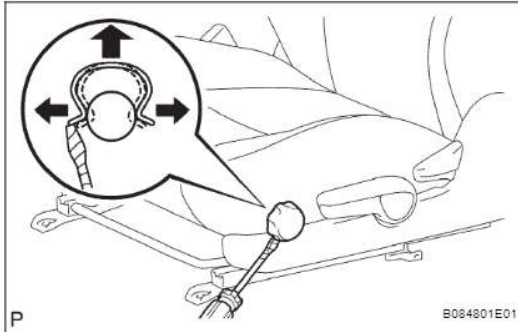


2. REMOVE NO. 2 VERTICAL ADJUSTING HANDLE (for Driver Side)

- (a) Using a screwdriver, detach the 3 claws and remove the vertical seat adjuster knob cap.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and vertical adjusting handle.

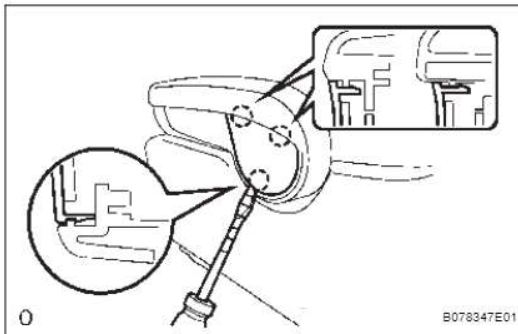


3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

- (a) Raise the reclining adjuster release handle to reveal the claw. Using a screwdriver, detach the claw and remove the release handle.

HINT:

Tape the screwdriver tip before use.

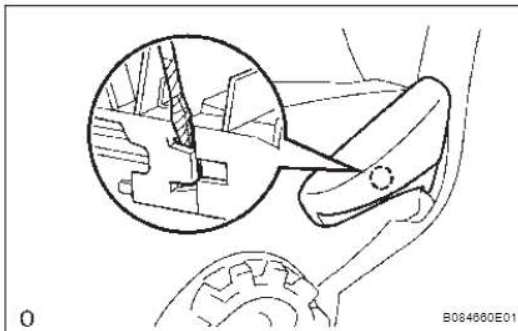


4. REMOVE FRONT SEAT CUSHION SHIELD

- (a) Remove the screw.
(b) Using a screwdriver, detach the 2 claws and clip, and remove the cushion shield.

HINT:

Tape the screwdriver tip before use.

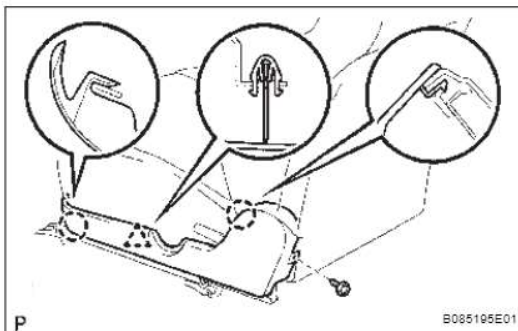


5. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH (See page [SB-5](#))

SE

SEAT – FRONT SEAT ASSEMBLY

SE-7

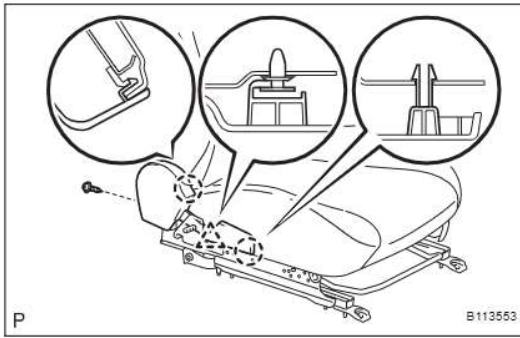**6. REMOVE FRONT SEAT CUSHION SHIELD INNER LH**


- (a) Remove the screw.
- (b) Using a screwdriver, detach the 2 claws and clip. Then remove the cushion shield inner LH.

HINT:

Tape the screwdriver tip before use.

7. REMOVE FRONT SEAT CUSHION COVER


- (a) Passenger side:
Disconnect the connector.
- (b) Detach the hook and remove the hog rings and seat cushion cover (with pad) from the seat adjuster.
- (c) Remove the hog rings and cushion cover from the seat cushion pad.

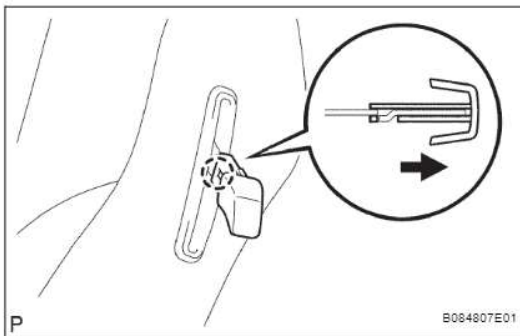**8. REMOVE RECLINING REMOTE CONTROL BEZEL**

- (a) Using a screwdriver, detach the claw and remove the reclining adjuster release handle.

HINT:


Tape the screwdriver tip before use.

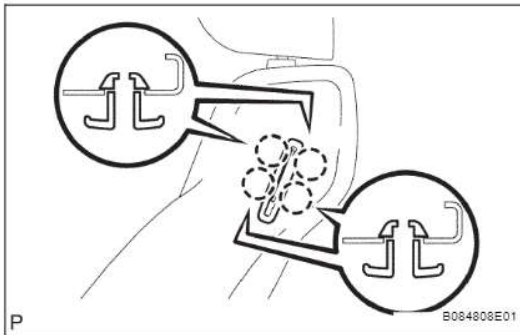

- (b) Using a screwdriver, detach the 4 claws and remove the bezel.

HINT:

Tape the screwdriver tip before use.

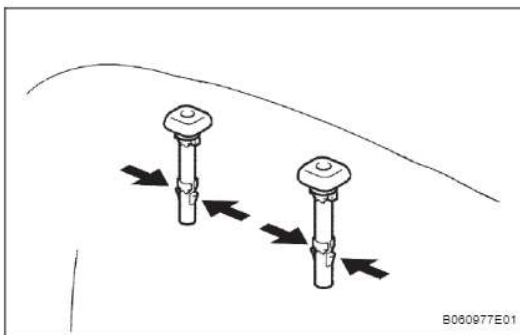
**9. REMOVE FRONT SEATBACK COVER**

- (a) Remove the hog rings and hooks.
- (b) Roll up the seatback cover.
- (c) Detach the 4 claws and remove the 2 headrest supports.

SE

SE-8

SEAT – FRONT SEAT ASSEMBLY

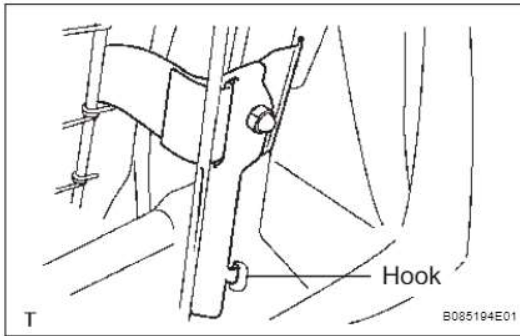

- (d) w/ Front seat side airbag:
Remove the nut and detach the hook. Then remove the 2 seatback cover brackets.
- (e) Remove the seatback cover (with pad) from the seat adjuster.
- (f) Remove the hog rings and remove the seatback cover from the seatback pad.

10. REMOVE RECLINING ADJUSTER INSIDE COVER LH

- (a) Upper side:
Remove the screw and inside cover.
- (b) Lower side:
Detach the clamp.
Remove the screw and inside cover.

11. REMOVE RECLINING ADJUSTER INSIDE COVER RH

- (a) Upper side:
Remove the screw and inside cover.
- (b) Lower side:
Remove the screw and inside cover.

12. REMOVE FRONT SEAT CUSHION SHIELD LOWER LH (for Driver Side)

- (a) Using a screwdriver, detach the claws and remove the cushion shield.
HINT:
Tape the screwdriver tip before use.

13. REMOVE FRONT SEAT CUSHION SHIELD LOWER RH (for Driver Side)

- (a) Using a screwdriver, detach the claws and remove the cushion shield.
HINT:
Tape the screwdriver tip before use.

14. REMOVE VERTICAL ADJUSTER SPACER (for Driver Side)

- (a) Using a screwdriver, detach the claws and remove the spacer.
HINT:
Tape the screwdriver tip before use.

15. REMOVE SEAT SLIDE POSITION SENSOR PROTECTOR (for Driver Side)**16. REMOVE SEAT POSITION AIRBAG SENSOR (for Driver Side) (See page RS-404)**

REASSEMBLY

CAUTION:

Wear protective gloves. Sharp areas on the seat adjuster frame may injure your hands.


HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. **INSTALL SEAT POSITION AIRBAG SENSOR (for Driver Side)** (See page [RS-404](#))
2. **INSTALL SEAT SLIDE POSITION SENSOR PROTECTOR (for Driver Side)**
3. **INSTALL VERTICAL ADJUSTER SPACER (for Driver Side)**
 - (a) Attach the claws to install the spacer.
4. **INSTALL FRONT SEAT CUSHION SHIELD LOWER LH (for Driver Side)**
 - (a) Attach the claws to install the cushion shield.
5. **INSTALL FRONT SEAT CUSHION SHIELD LOWER RH (for Driver Side)**
 - (a) Attach the claws to install the cushion shield.
6. **INSTALL RECLINING ADJUSTER INSIDE COVER LH**
 - (a) Upper side:
Install the inside cover with the screw.
 - (b) Lower side:
Attach the clamp and install the inside cover with the screw.
7. **INSTALL RECLINING ADJUSTER INSIDE COVER RH**
 - (a) Upper side:
Install the inside cover with the screw.
 - (b) Lower side:
Install the inside cover with the screw.
8. **INSTALL FRONT SEATBACK COVER**


NOTICE:

 - **Be careful not to damage the cover.**
 - **When installing the hog rings, avoid wrinkling the cover.**
 - (a) Using hog ring pliers, install the seatback cover to the seatback pad with new hog rings.
 - (b) Install the seatback cover (with pad) to the seat adjuster.
 - (c) Install the 2 headrest supports.

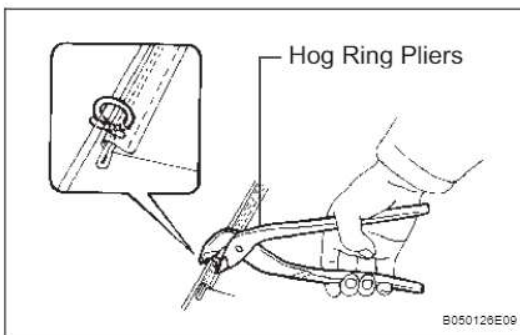

SE-10

SEAT – FRONT SEAT ASSEMBLY

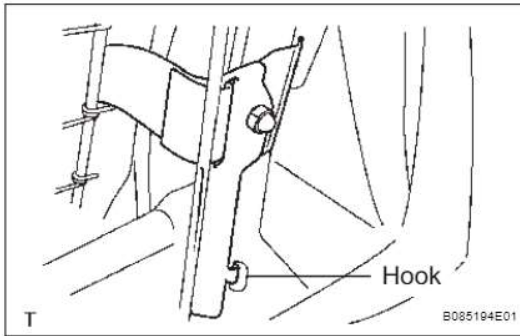

- (d) w/ Front seat side airbag:
Fully cover the airbag with the 2 seatback cover brackets. Then attach the hook and tighten the nut.

Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)



NOTICE:

- For vehicle with front seat side airbag, the seatback cover must be securely installed. Otherwise, the side airbag may not deploy properly.
- Make sure that the strap is not twisted after installing the bracket.
- Install the bracket securely.


- (e) Using hog ring pliers, install the seatback cover with new hog rings and attach the hooks.

9. INSTALL RECLINING REMOTE CONTROL BEZEL

- (a) Attach the 4 claws and install the bezel.

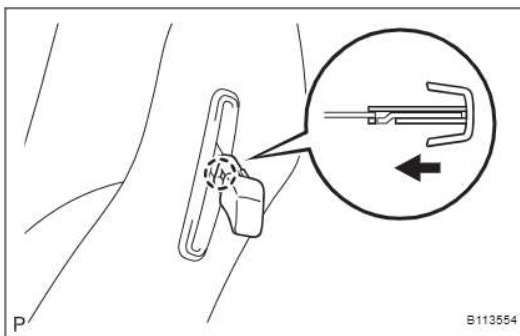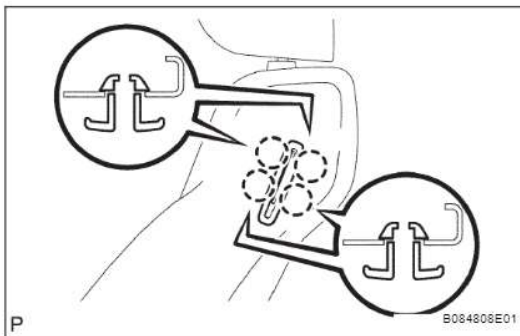

- (b) Attach the claw to install the reclining adjuster release handle.

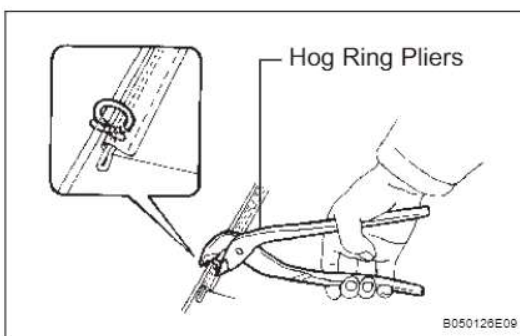


10. INSTALL FRONT SEAT CUSHION COVER

NOTICE:


- Be careful not to damage the cover.
 - When installing the hog rings, avoid wrinkling the cover.
- (a) Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.
- (b) Using hog ring pliers, install the seat cushion cover (with pad) to the seat adjuster with new hog rings and hooks.
- (c) Passenger side:
Connect the connector.

SEAT – FRONT SEAT ASSEMBLY


SE-11

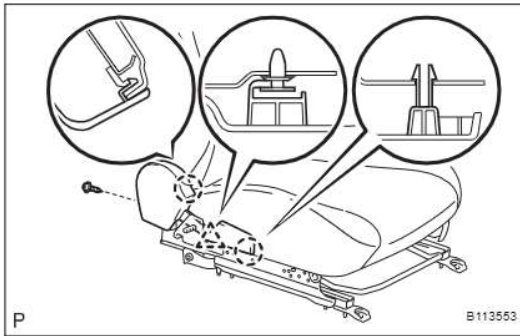**11. INSTALL FRONT SEAT CUSHION SHIELD INNER LH**

- (a) Attach the 2 claws and clip to install the cushion shield.
- (b) Install the screw.

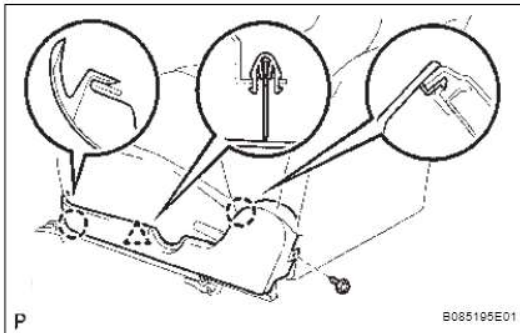12. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH (See page SB-6)**13. INSTALL FRONT SEAT CUSHION SHIELD LH**


- (a) Attach the 2 claws and clip to install the cushion shield.
- (b) Install the screw.

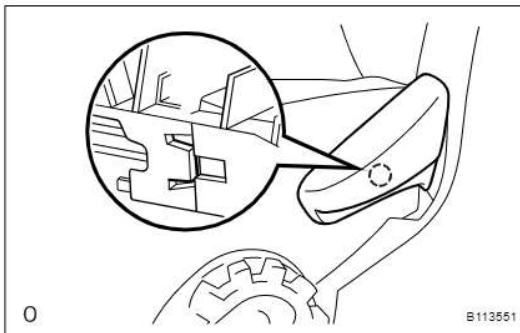**14. INSTALL RECLINING ADJUSTER RELEASE HANDLE LH**


- (a) Attach the claw to install the release handle.

15. INSTALL NO. 2 VERTICAL ADJUSTING HANDLE (for Driver Side)

- (a) Install the vertical adjusting handle with the 2 screws.

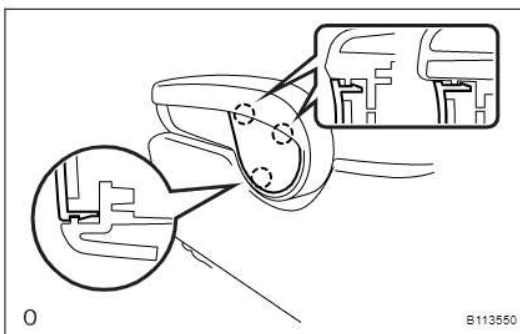

- (b) Attach the 3 claws to install the vertical seat adjuster knob cap.

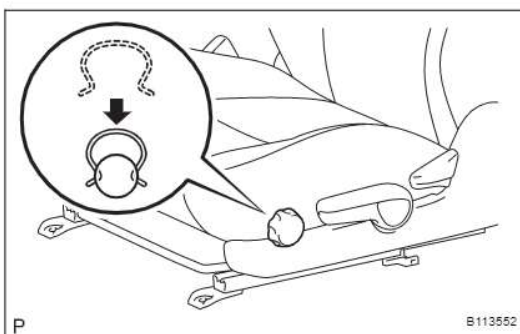**16. INSTALL VERTICAL SEAT ADJUSTER KNOB LH (for Driver Side)**

- (a) Install the knob with the snap ring.

SE


SE-12

SEAT – FRONT SEAT ASSEMBLY

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

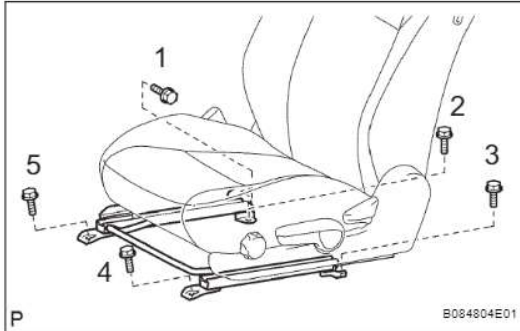

1. INSTALL FRONT SEAT ASSEMBLY

- Place the seat in the cabin.
- Connect the connectors under the seat.
- Tighten the 5 bolts in the order indicated in the illustration.

Torque: 40 N*m (408 kgf*cm, 30 ft.*lbf)

NOTICE:


Be careful not to damage the vehicle body.

2. INSPECT AND ADJUST SEAT SLIDE ADJUSTER LOCKS

- Check that during sliding operation of the front seat, the left and right adjusters move together smoothly and lock simultaneously.
If the adjusters do not lock simultaneously, loosen the seat fixation bolts to adjust the adjuster's positions.

3. INSTALL SEAT TRACK BRACKET COVER OUTER LH

- Attach the 2 claws to install the bracket cover.

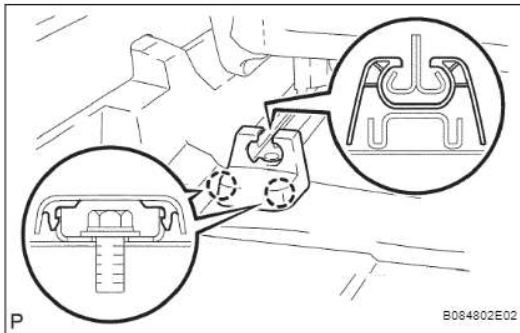

4. INSTALL SEAT TRACK BRACKET COVER INNER LH

- Attach the 3 claws to install the bracket cover.

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

6. PERFORM INITIALIZATION


- Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.


7. INSPECT SRS WARNING LIGHT

- Check the SRS warning light (see page [RS-11](#)).

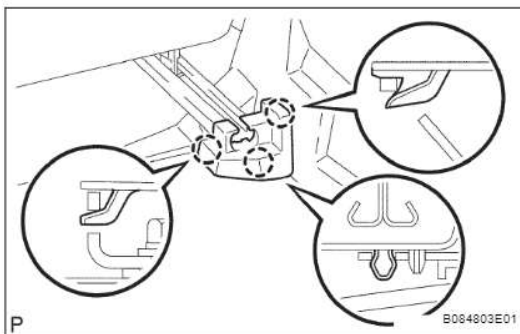

REAR SEAT ASSEMBLY

COMPONENTS

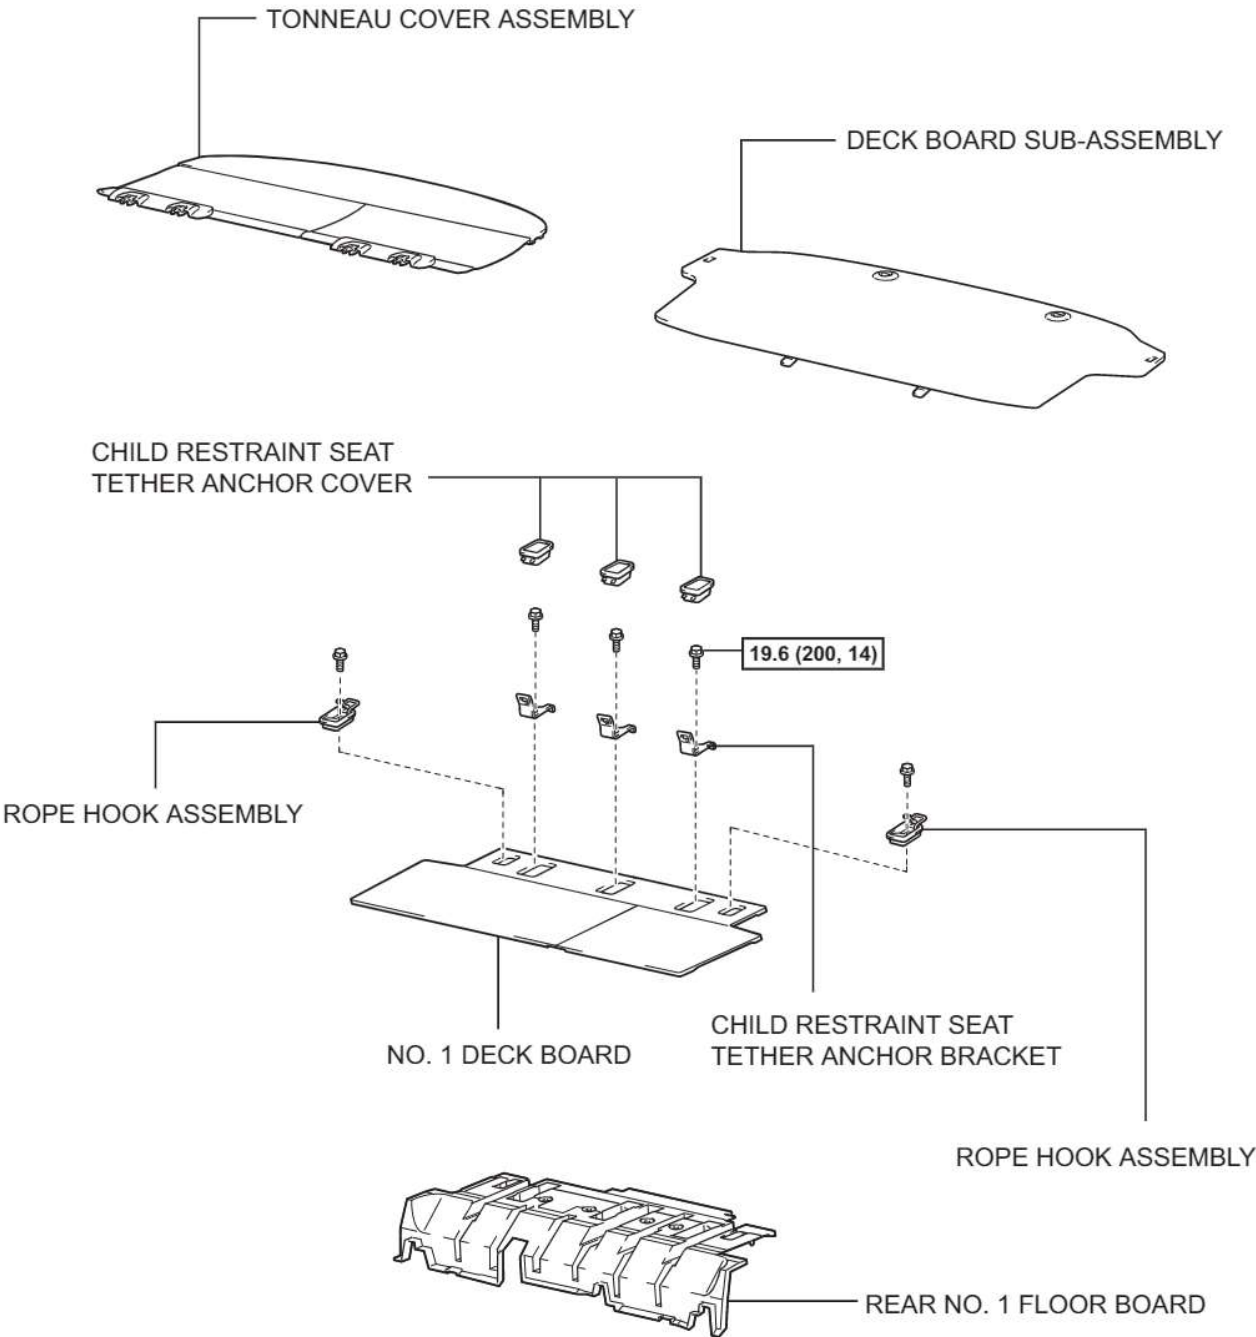


N*m (kgf*cm, ft.*lbf) : Specified torque


SE

SE-14

SEAT – REAR SEAT ASSEMBLY

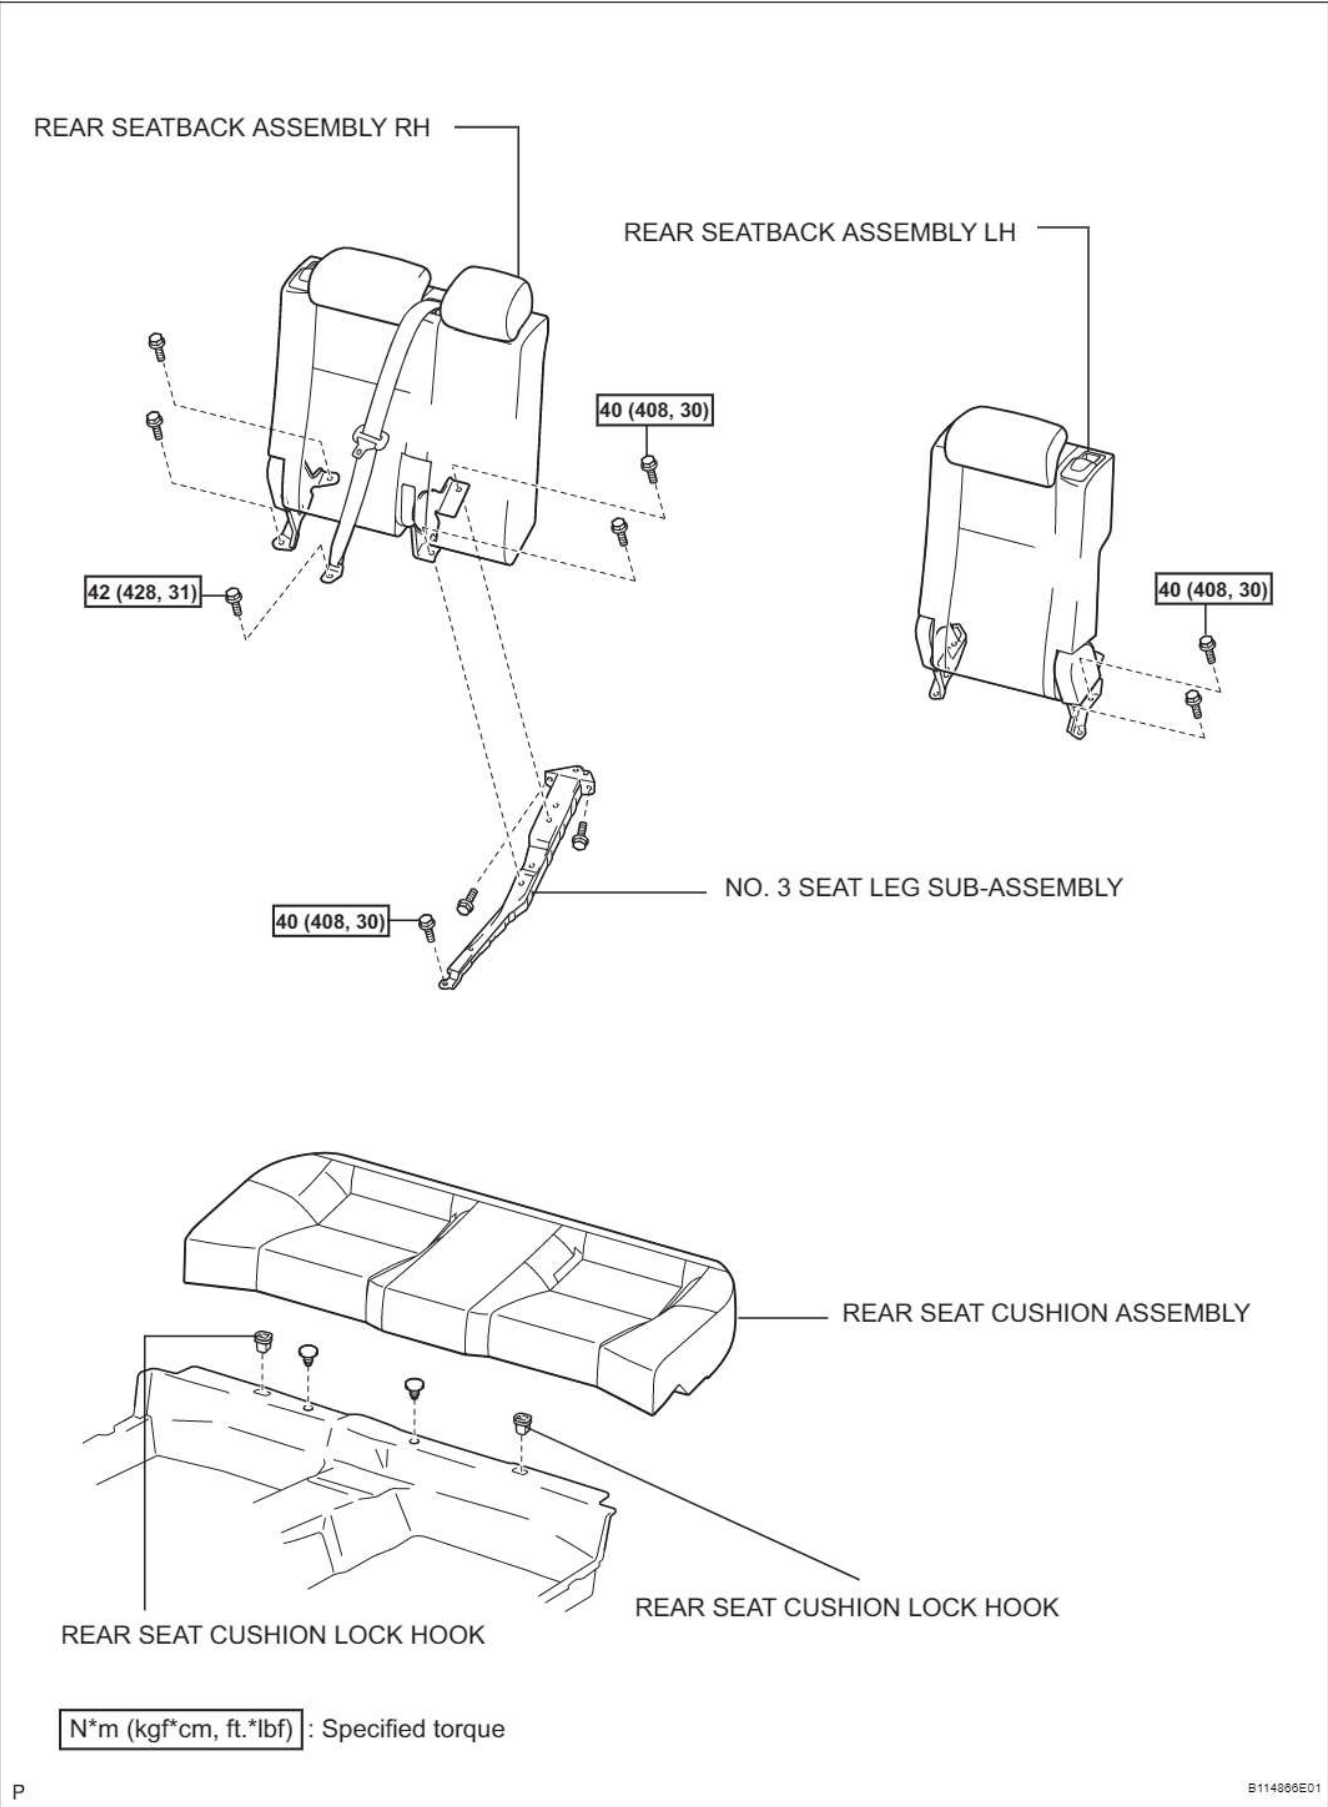


SEAT – REAR SEAT ASSEMBLY

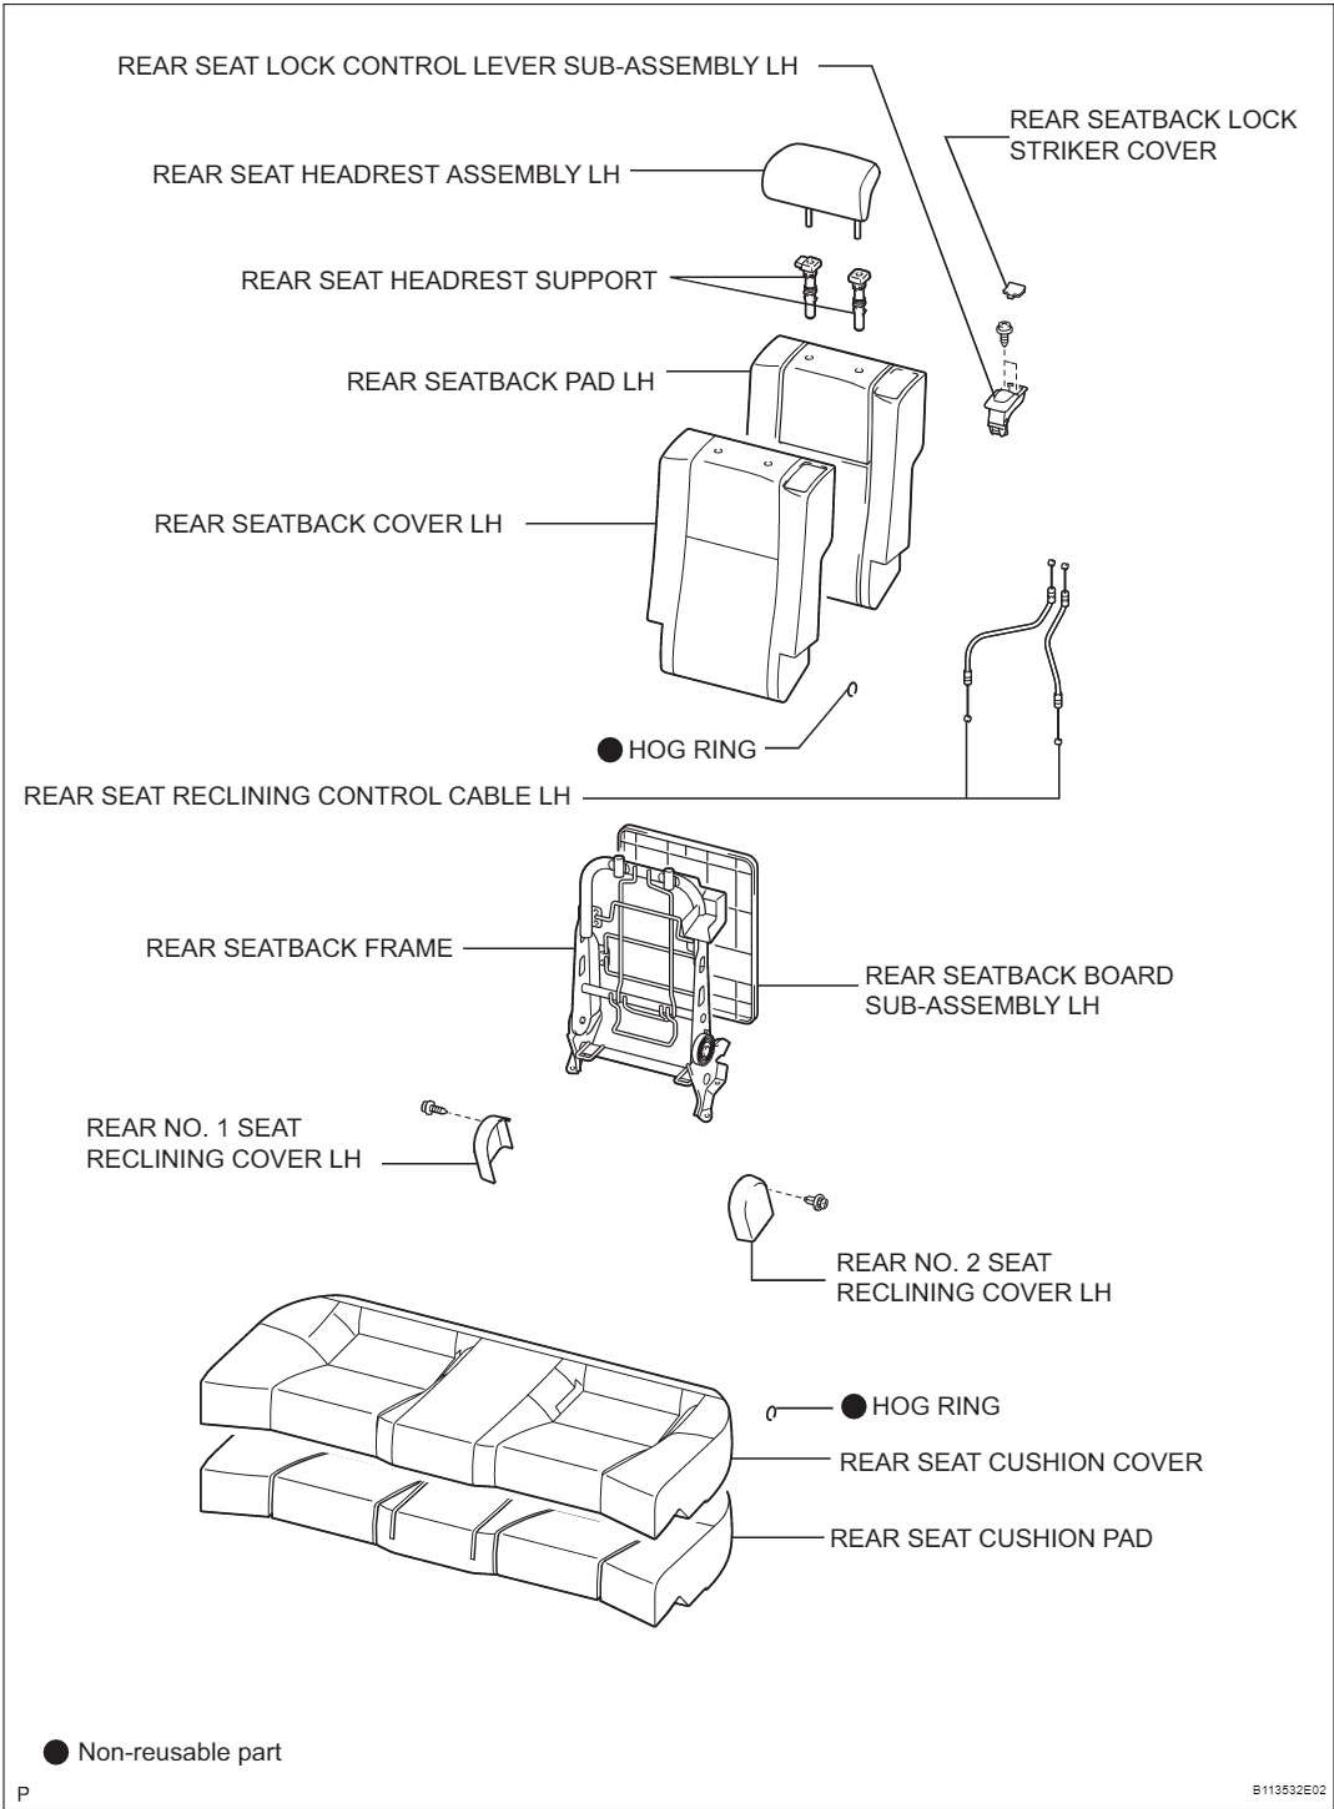

SE-16

SEAT – REAR SEAT ASSEMBLY

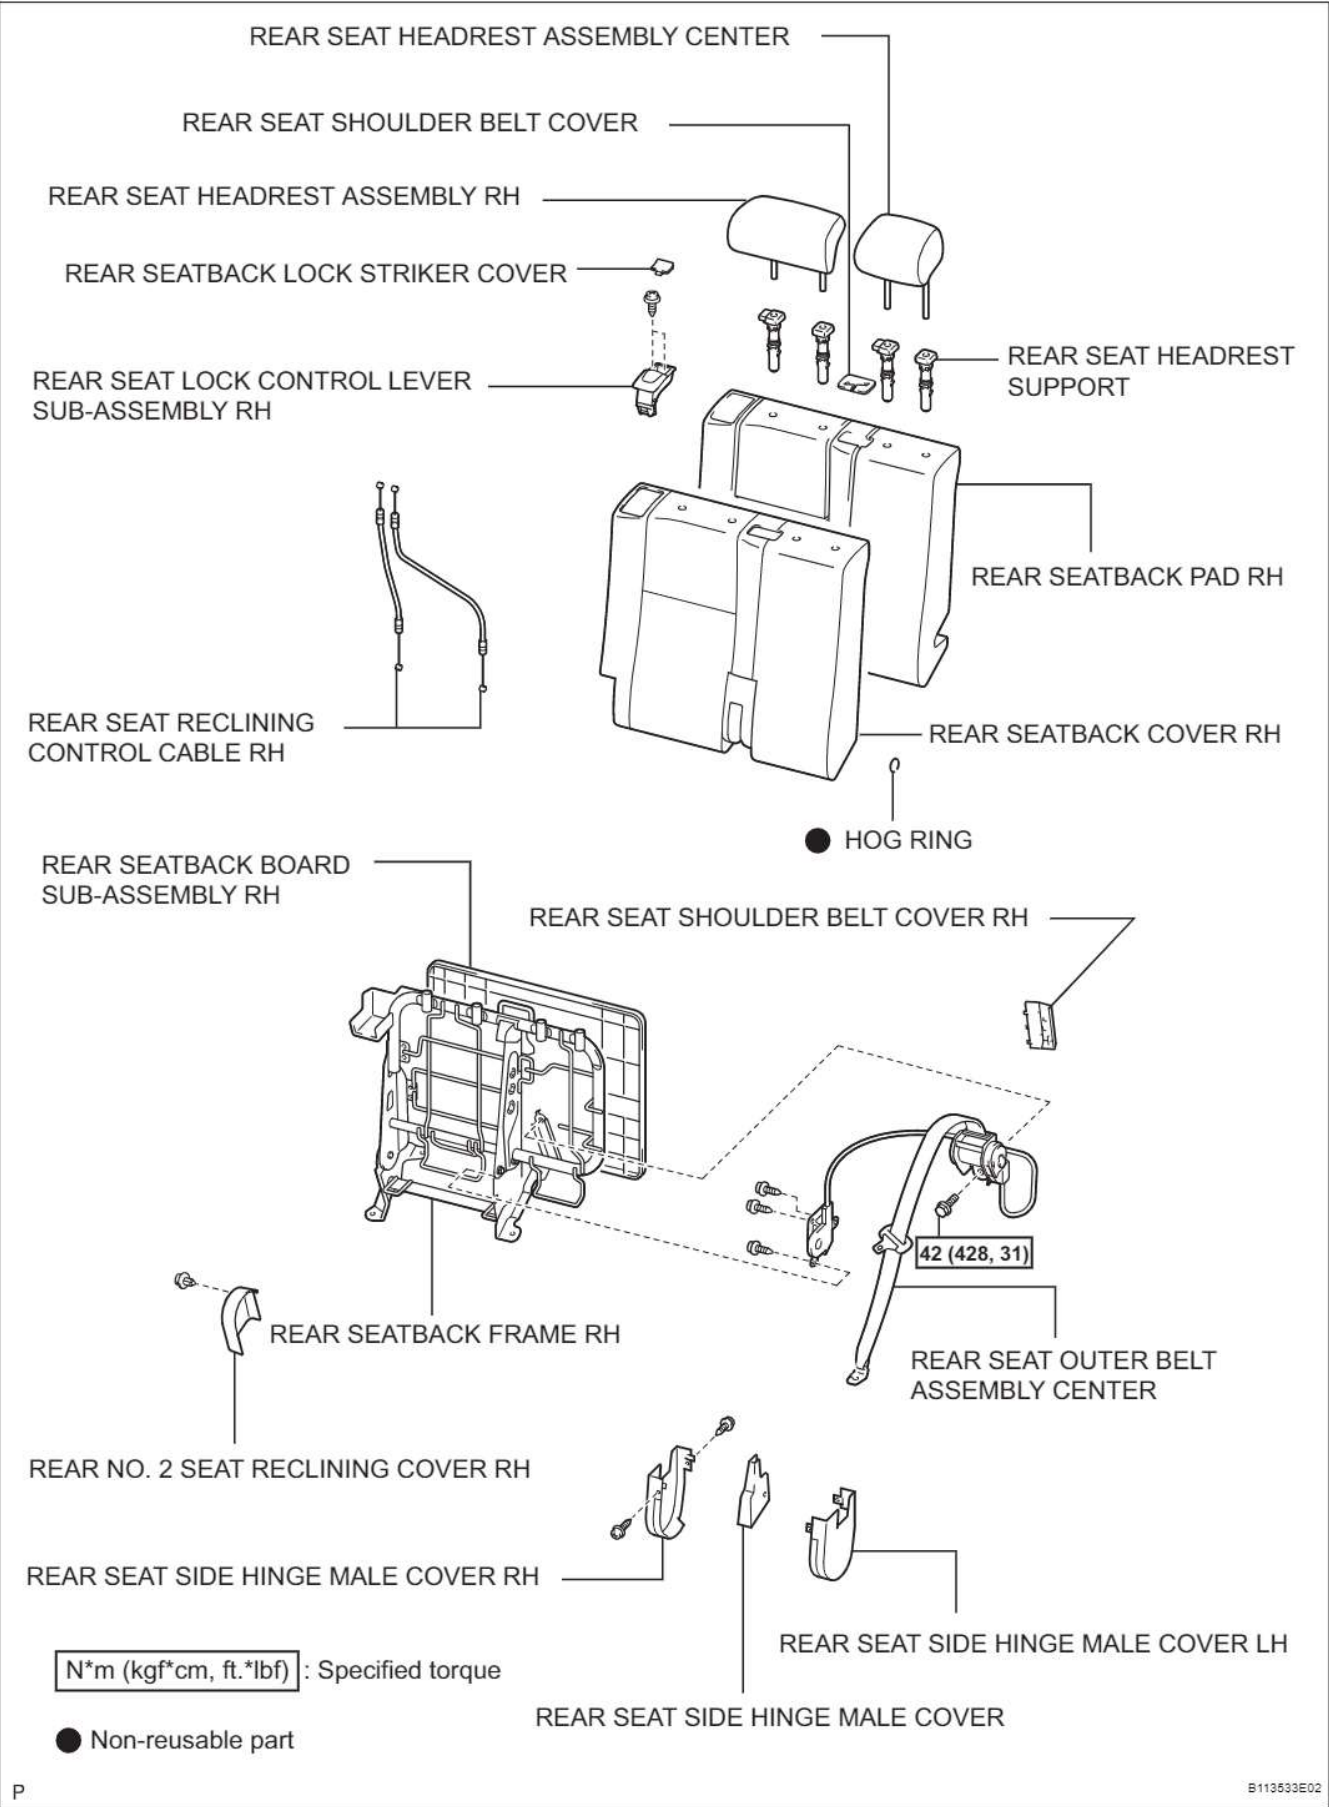

REMOVAL

1. REMOVE TONNEAU COVER ASSEMBLY

2. REMOVE DECK BOARD SUB-ASSEMBLY

3. REMOVE REAR SEAT CUSHION ASSEMBLY

- (a) Detach the seat cushion's 2 front hooks from the vehicle body.

NOTICE:

Follow the instructions below carefully as the cushion frame deforms easily.




- (1) Choose a hook to detach first. Place your hands near the hook as shown in the illustration. Then lift the seat cushion to detach the hook.

- (2) Repeat for the other hook.

- (b) Remove the inner belts through the slits on the seat cushion.

- (c) Detach the seat cushion's 2 rear hooks from the seatback. Then remove the seat cushion.

4. REMOVE NO. 1 DECK BOARD (See page [IR-8](#))

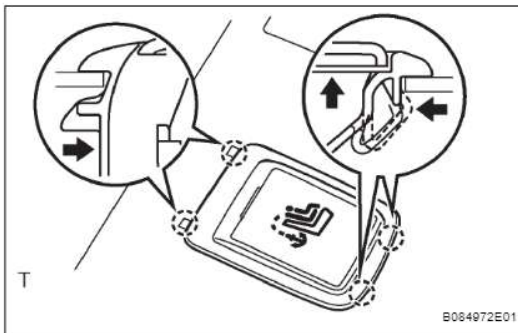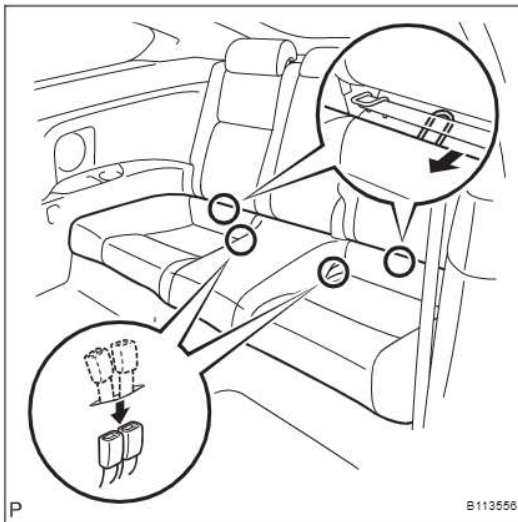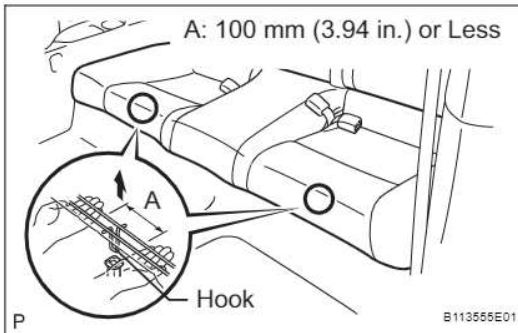

5. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR COVER

- (a) Detach the 12 claws and remove the 3 anchor covers as shown in the illustration.

6. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET

- (a) Remove the 3 bolts and 3 anchor brackets.


7. REMOVE REAR NO. 1 FLOOR BOARD (See page [IR-9](#))

8. REMOVE REAR SEATBACK ASSEMBLY LH


- (a) Fully fold the seatback forward.
 (b) Remove the 2 bolts on the rear side of the seatback.
 (c) Return the seatback to the upright position.
 (d) Remove the 2 bolts on the front side of the seatback. Then remove the seatback.

NOTICE:

Be careful not to damage the vehicle body.

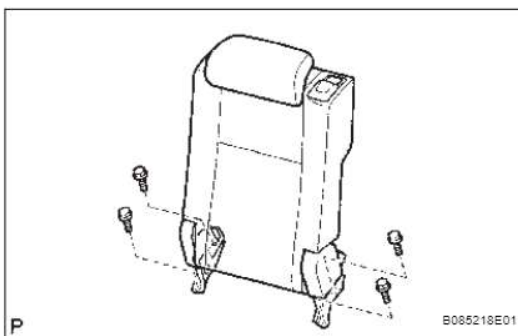

SE

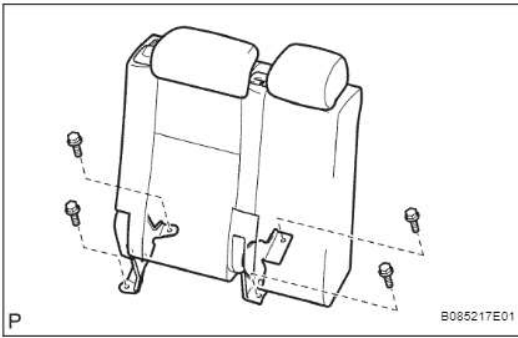SE-18**SEAT – REAR SEAT ASSEMBLY****9. REMOVE REAR SEATBACK ASSEMBLY RH**

- (a) Remove the bolt and rear seat outer belt floor anchor.
- (b) Fully fold the seatback forward.
- (c) Remove the 2 bolts on the rear side of the seatback.
- (d) Return the seatback to the upright position.
- (e) Remove the 2 bolts on the front side of the seatback. Then remove the seatback.

NOTICE:

Be careful not to damage the vehicle body.

10. REMOVE REAR SEAT CUSHION LOCK HOOK

- (a) Using a screwdriver, detach the claws and remove the 2 lock hooks.

HINT:

Tape the screwdriver tip before use.

11. REMOVE NO. 3 SEAT LEG SUB-ASSEMBLY

- (a) Using a clip remover, remove the 2 clips.
- (b) Partially remove the floor carpet, and remove the 4 bolts and seat leg.

DISASSEMBLY



CAUTION:

Wear protective gloves. Sharp areas on the seatback frame may injure your hands.

1. REMOVE REAR SEAT HEADREST ASSEMBLY LH
2. REMOVE REAR SEAT HEADREST ASSEMBLY RH
3. REMOVE REAR SEAT HEADREST ASSEMBLY CENTER
4. REMOVE REAR SEAT CUSHION COVER
 - (a) Remove the hog rings and seat cushion cover from the seat cushion pad.
5. REMOVE REAR NO. 2 SEAT RECLINING COVER LH
 - (a) Remove the clip and reclining cover in the direction indicated by the arrow in the illustration.
6. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

HINT:
Use the same procedures described for the rear No. 2 reclining cover LH.
7. REMOVE REAR NO. 2 SEAT RECLINING COVER RH


HINT:
Use the same procedures described for the LH side.
8. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH
 - (a) Using a screwdriver, detach the 2 claws and remove the rear seatback lock striker cover.
 - HINT:
Tape the screwdriver tip before use.
 - (b) Remove the 2 screws.

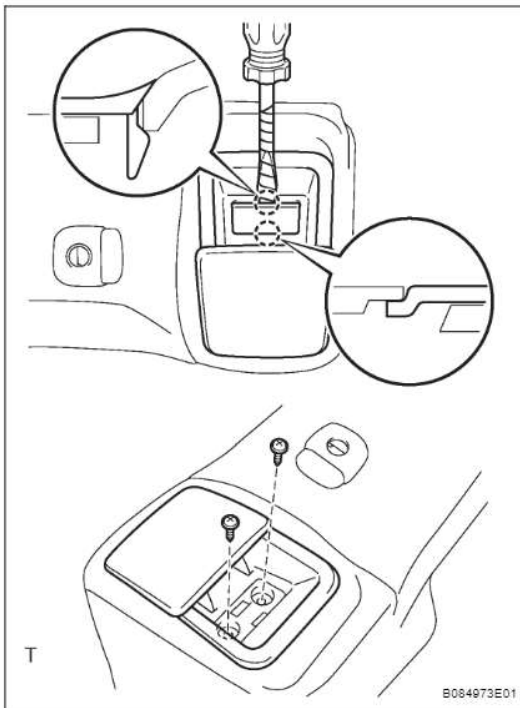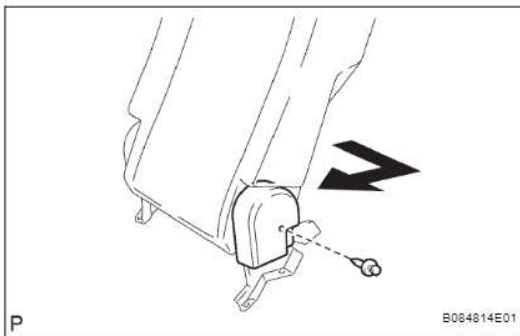


SE

SE-20

SEAT – REAR SEAT ASSEMBLY

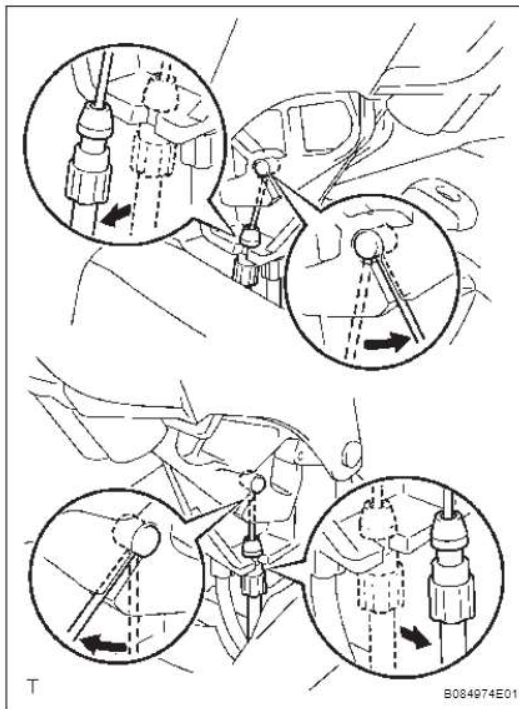


- (c) Remove the 2 reclining control cables as shown in the illustration. Then remove the control lever.

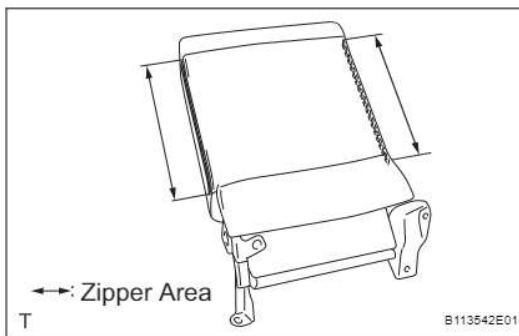


9. REMOVE REAR SEATBACK COVER LH


- (a) Remove the hog rings. Open the lower part of the seatback cover.
(b) Open the zipper.

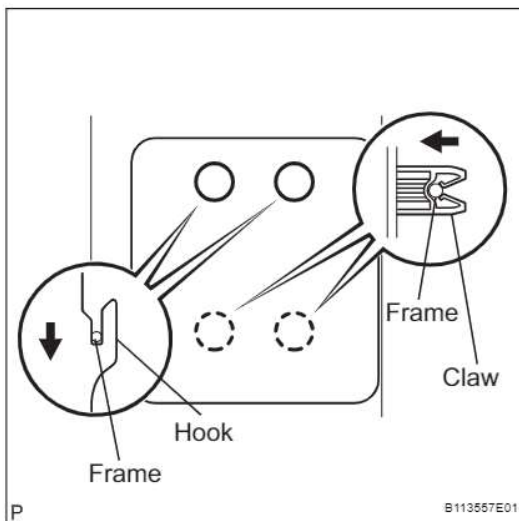

- (c) Pull the seatback board in the direction indicated by the arrow in the illustration to detach the 2 claws.
(d) Pull the seatback board in the direction indicated by the arrow in the illustration to detach the 2 hooks. Then, remove the seatback board.

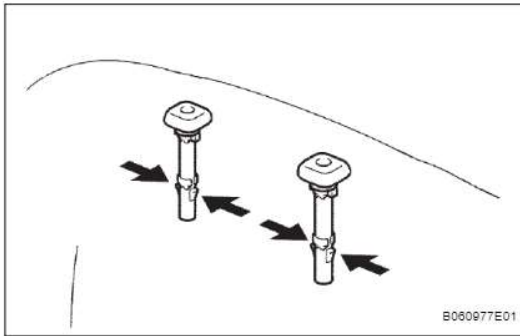SEAT – REAR SEAT ASSEMBLY**SE-21**


- (e) Detach the 4 claws and remove the 2 headrest supports.
- (f) Remove the seatback cover (with pad) from the seatback frame.
- (g) Remove the hog rings and seatback cover from the seatback pad.

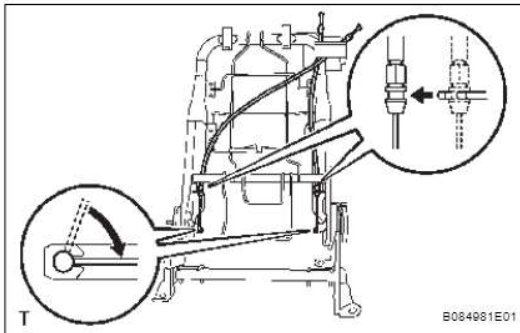**10. REMOVE REAR SEAT RECLINING CONTROL CABLE LH**


- (a) Remove the 2 control cables as shown in the illustration.

11. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH**HINT:**

Use the same procedures described for the LH side.

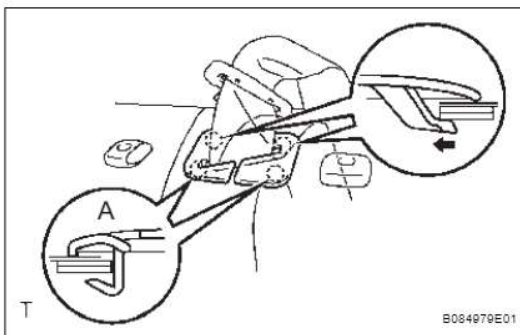**12. REMOVE REAR SEAT SHOULDER BELT GUIDE CENTER**

- (a) Using a screwdriver, detach the 2 claws labeled A.
HINT:
Tape the screwdriver tip before use.
- (b) Pull the inside cover in the direction indicated by the arrow in the illustration to detach the claw. Then, remove the shoulder belt guide.

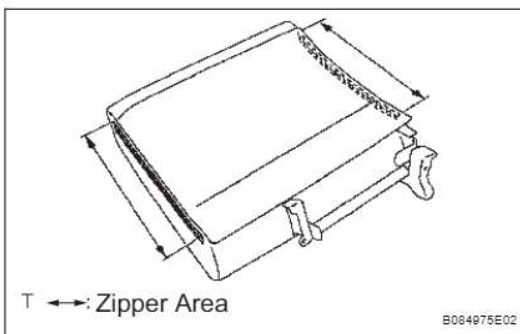
**13. REMOVE REAR SEATBACK COVER RH**

- (a) Remove the hog rings. Open the lower part of the seatback cover.
- (b) Open the zipper.


SE

SE-22


SEAT – REAR SEAT ASSEMBLY

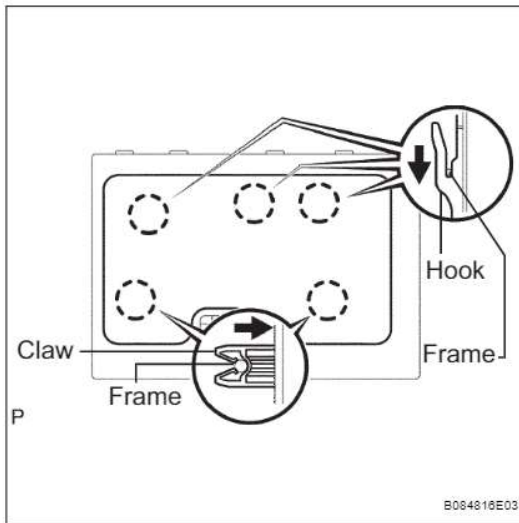

- (c) Pull the seatback board in the direction indicated by the arrow in the illustration to detach the 2 claws.
- (d) Pull the seatback board in the direction indicated by the arrow in the illustration to detach the 3 hooks. Then remove the seatback board.

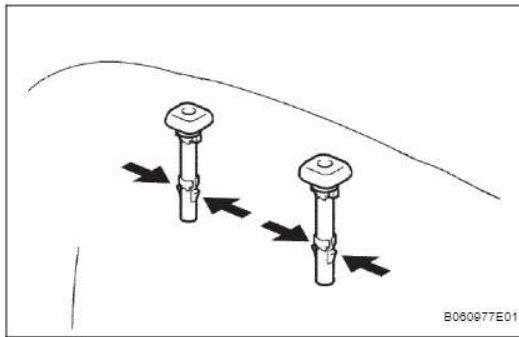


- (e) Detach the 8 claws and remove the 4 headrest supports.
- (f) Remove the seatback cover (with pad) from the seatback frame.
- (g) Remove the hog rings and seatback cover from the seatback pad.

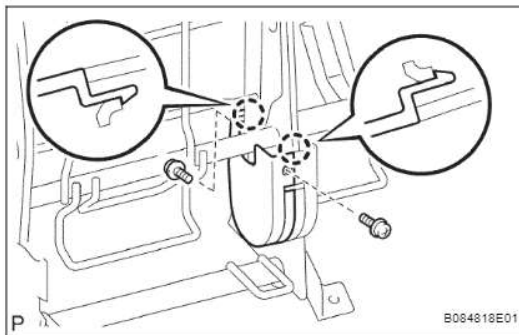**14. REMOVE REAR SEAT SIDE HINGE MALE COVER RH**

- (a) Remove the 2 screws.
- (b) Using a screwdriver, detach the 2 claws and remove the male cover.

HINT:

Tape the screwdriver tip before use.

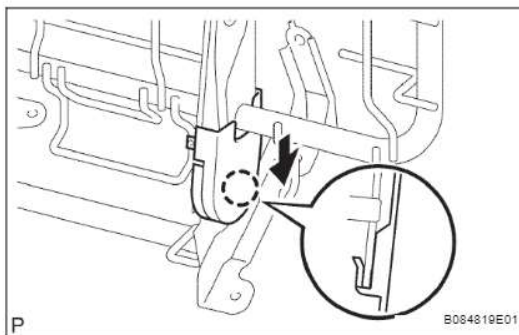**15. REMOVE REAR SEAT SIDE HINGE MALE COVER LH**

- (a) Remove the male cover in the direction indicated by the arrow in the illustration.


16. REMOVE REAR SEAT SIDE HINGE MALE COVER

- (a) Using a screwdriver, detach the claws and remove the male cover.


HINT:

Tape the screwdriver tip before use.


SE

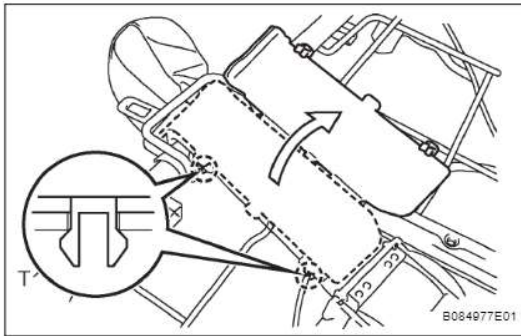SEAT – REAR SEAT ASSEMBLY**SE-23****17. REMOVE REAR SEAT OUTER BELT ASSEMBLY CENTER**

- (a) Detach the 2 claws and open the shoulder belt cover.

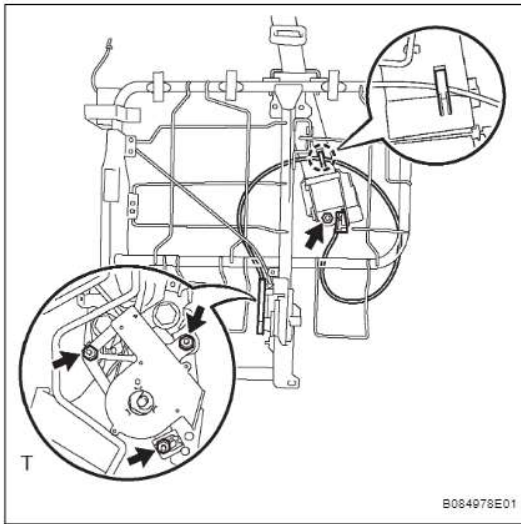

- (b) Detach the hook.
(c) Remove the 4 nuts and belt.

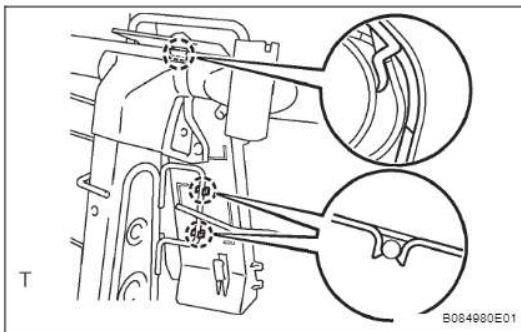**18. REMOVE REAR SEAT SHOULDER BELT COVER RH**

- (a) Detach the 3 claws and remove the belt cover.

19. REMOVE REAR SEAT RECLINING CONTROL CABLE RH**HINT:**

Use the same procedures described for the LH side.

SE

SE-24

SEAT – REAR SEAT ASSEMBLY


REASSEMBLY

CAUTION:

Wear protective gloves. Sharp areas on the seatback frame may injure your hands.

1. INSTALL REAR SEAT RECLINING CONTROL CABLE LH

- (a) Install the 2 control cables as shown in the illustration.

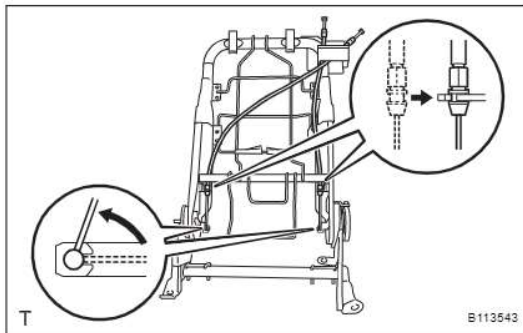


2. INSTALL REAR SEATBACK COVER LH


NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, avoid wrinkling the cover.


- (a) Using hog ring pliers, install the seatback cover to the seatback pad with new hog rings.
 (b) Install the seatback cover (with pad) to the seatback frame.

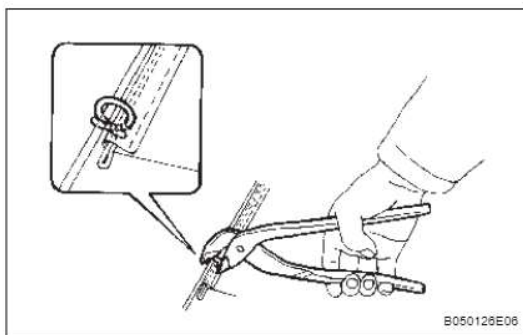


- (c) Attach the 4 claws to install the 2 headrest supports.

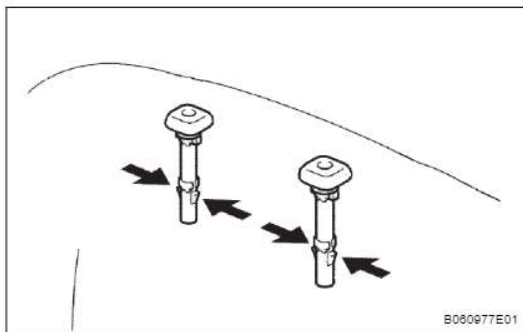

- (d) Attach the 2 hooks and 2 claws, and install the seatback board to the seatback frame.

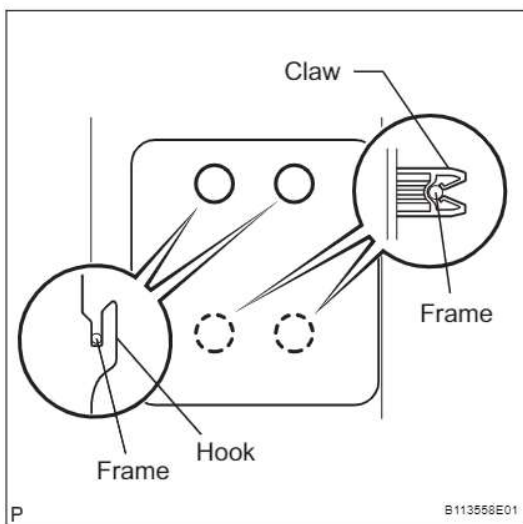


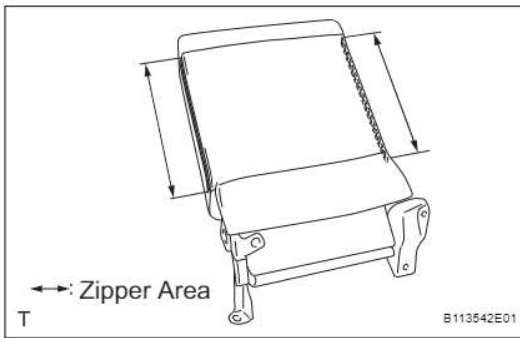SEAT – REAR SEAT ASSEMBLY**SE-25**

- (e) Close the zipper.
- (f) Using hog ring pliers, install the seatback cover (with pad) with new hog rings.

**3. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH**

- (a) Install the 2 reclining control cables as shown in the illustration.

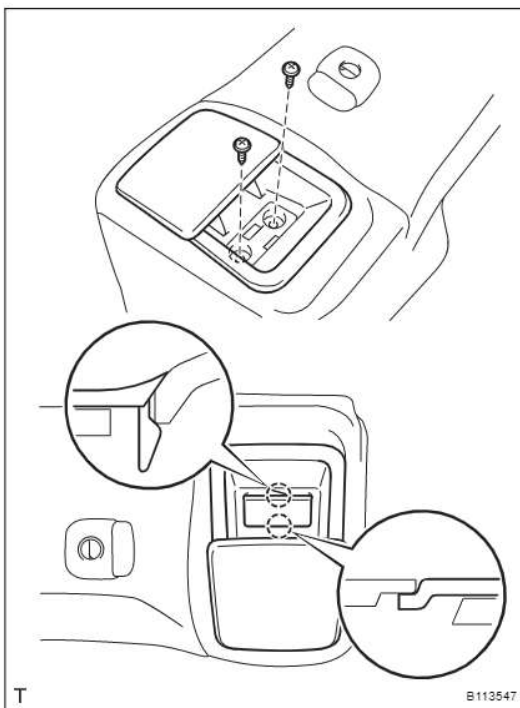

- (b) Install the control lever to the seatback with the 2 screws.
- (c) Attach the 2 claws to install the rear seatback lock striker cover.


4. INSTALL REAR SEAT RECLINING CONTROL CABLE RH**HINT:**

Use the same procedures described for the LH side.


SE

SE-26


SEAT – REAR SEAT ASSEMBLY

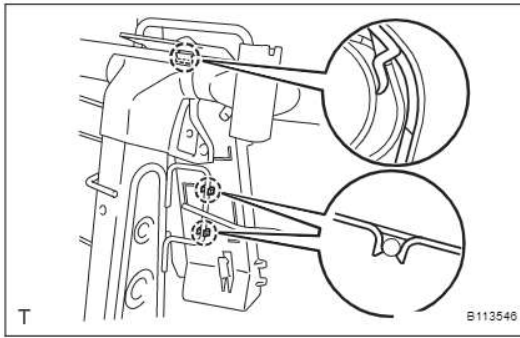**5. INSTALL REAR SEAT SHOULDER BELT COVER RH**


- (a) Attach the 3 claws to install the belt cover.

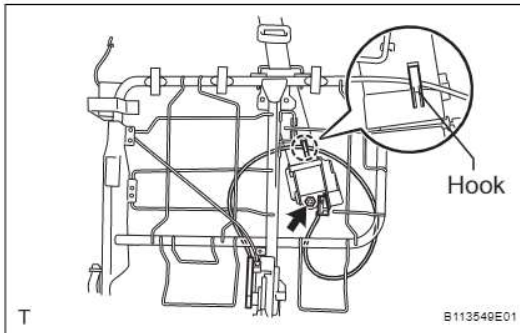**6. INSTALL REAR SEAT OUTER BELT ASSEMBLY CENTER**


- (a) Install the belt with the nut as shown in the illustration.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 (b) Attach the hook.

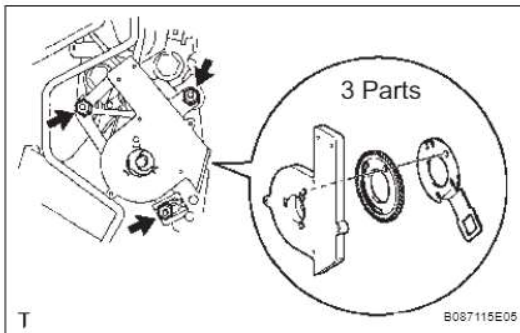

- (c) Align the holes of the 3 parts shown in the illustration, and then install the 3 nuts.

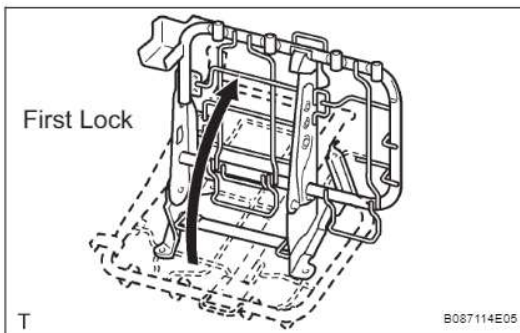**HINT:**

Before tightening the nuts, raise the seatback to the upright position and make sure the seatback stops in the first lock position of the frame.

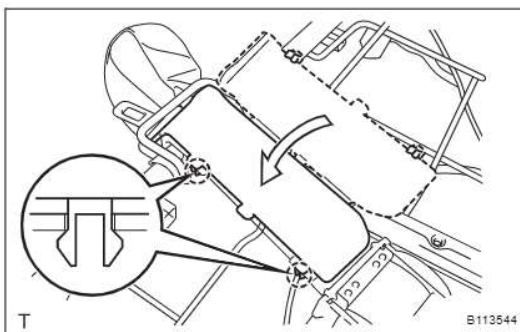


- (d) Attach the 2 claws to close the shoulder belt cover.

7. INSTALL REAR SEAT SIDE HINGE MALE COVER


- (a) Attach the 2 claws to install the male cover.

SEAT – REAR SEAT ASSEMBLY


SE-27

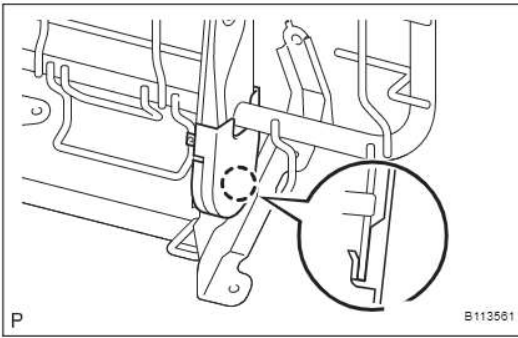**8. INSTALL REAR SEAT SIDE HINGE MALE COVER LH**

- (a) Attach the claw to install the male cover.

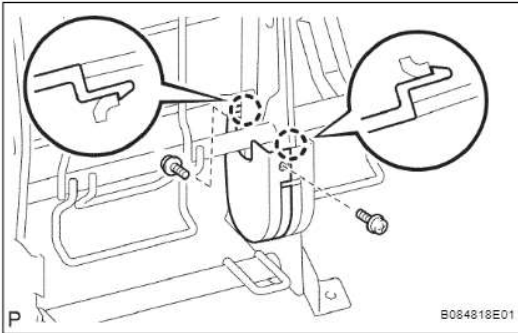
**9. INSTALL REAR SEAT SIDE HINGE MALE COVER RH**

- (a) Attach the 2 claws and install the male cover with the screws.

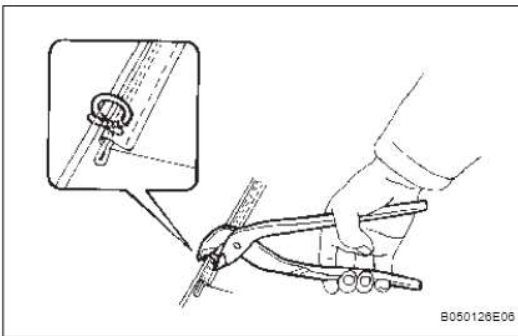**10. INSTALL REAR SEATBACK COVER RH****NOTICE:**

- Be careful not to damage the cover.
- When installing the hog rings, avoid wrinkling the cover.

- (a) Using hog ring pliers, install the seatback cover to the seatback pad with new hog rings.
- (b) Install the seatback cover (with pad) to the seatback frame.

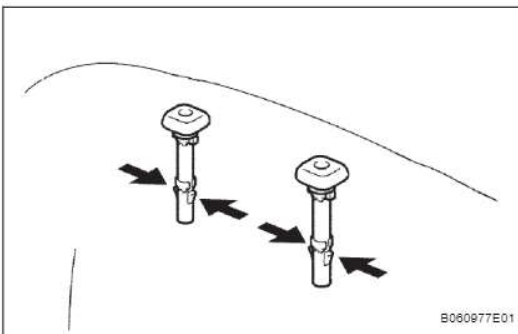


- (c) Attach the 4 claws to install the 2 headrest supports.


SE

SE-28

SEAT – REAR SEAT ASSEMBLY

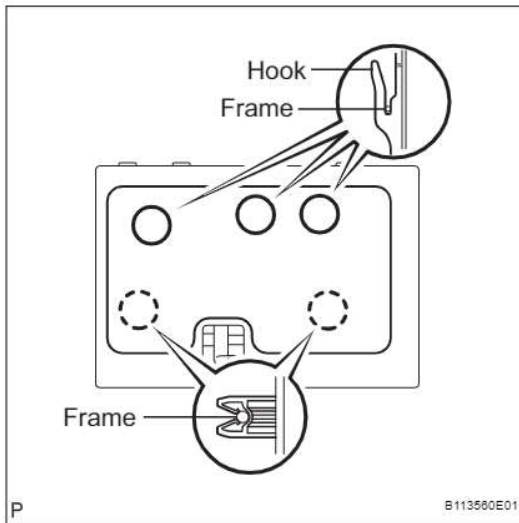


(d) Install the seatback board to the seatback frame.

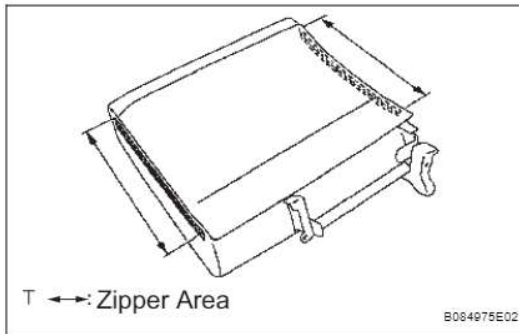

(e) Close the zipper.

(f) Using hog ring pliers, install the seatback cover (with pad) with new hog rings.

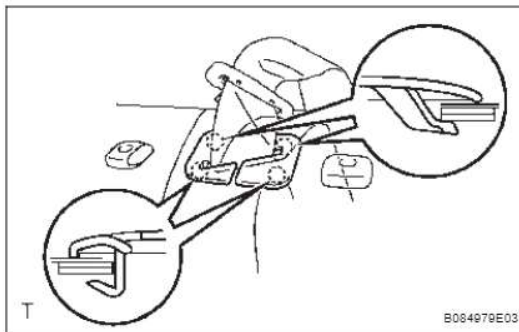


11. INSTALL REAR SEAT SHOULDER BELT GUIDE CENTER

(a) Attach the 4 claws to install the belt guide.

12. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side

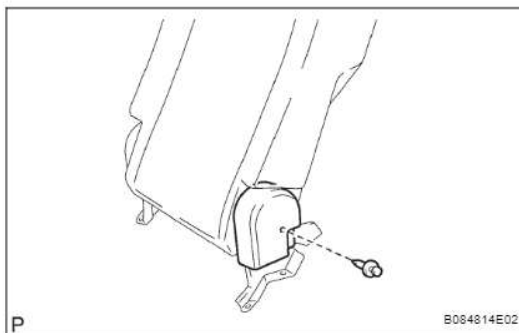

13. INSTALL REAR NO. 2 SEAT RECLINING COVER LH

(a) Install the reclining cover with the clip.

14. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

HINT:


Use the same procedures described for the rear No. 2 seat reclining cover LH .

15. INSTALL REAR NO. 2 SEAT RECLINING COVER RH

HINT:

Use the same procedures described for the LH side.

SE

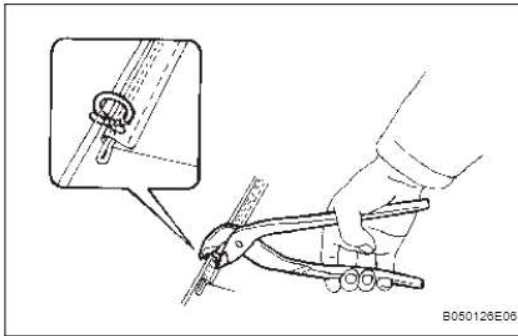SEAT – REAR SEAT ASSEMBLY**SE-29****16. INSTALL REAR SEAT CUSHION COVER**

- (a) Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, avoid wrinkling the cover.

17. INSTALL REAR SEAT HEADREST ASSEMBLY LH**18. INSTALL REAR SEAT HEADREST ASSEMBLY RH****19. INSTALL REAR SEAT HEADREST ASSEMBLY CENTER****SE**

SE-30

SEAT – REAR SEAT ASSEMBLY

INSTALLATION

1. INSTALL NO. 3 SEAT LEG SUB-ASSEMBLY

- (a) Install the seat leg with the 4 bolts.
Torque: 40 N*m (408 kgf*cm, 30 ft.*lbf)
- (b) Install the floor carpet with the 2 clips.

2. INSTALL REAR SEAT CUSHION LOCK HOOK

- (a) Attach the claws to install the 2 lock hooks.

3. INSTALL REAR SEATBACK ASSEMBLY LH



- (a) Place the seat in the cabin.

NOTICE:

Be careful not to damage the vehicle body.

- (b) Tighten the 4 bolts in the order indicated in the illustration.

Torque: 40 N*m (408 kgf*cm, 30 ft.*lbf)

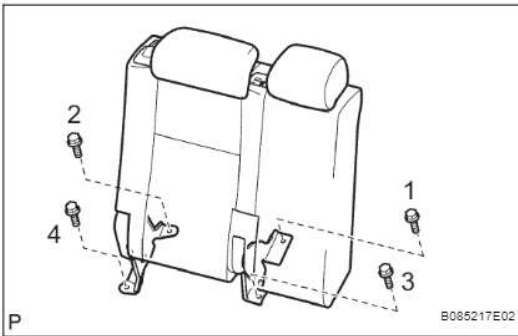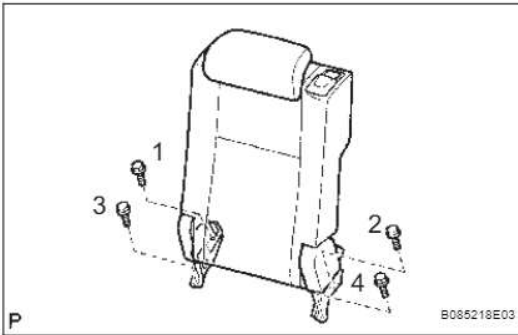

4. INSTALL REAR SEATBACK ASSEMBLY RH

- (a) Place the seat in the cabin.

NOTICE:

Be careful not to damage the vehicle body.

- (b) Tighten the 4 bolts in the order indicated in the illustration.

Torque: 40 N*m (408 kgf*cm, 30 ft.*lbf)

- (c) Install the rear seat outer belt floor anchor with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)


5. INSTALL REAR NO. 1 FLOOR BOARD (See page [IR-20](#))

6. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET


- (a) Install the 3 brackets with the 3 bolts.
Torque: 19.6 N*m (200 kgf*cm, 14 ft.*lbf)

7. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR COVER


- (a) Attach the 12 claws to install the 3 anchor covers.

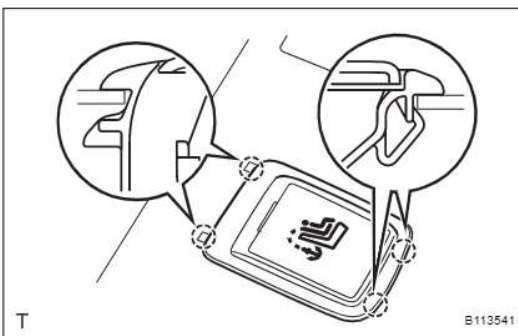8. INSTALL NO. 1 DECK BOARD (See page [IR-20](#))

SE

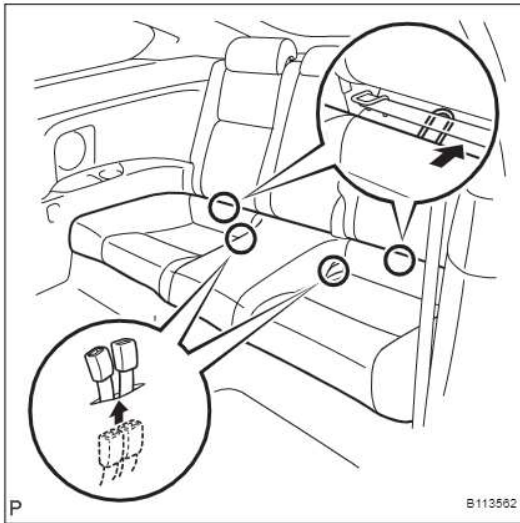SEAT – REAR SEAT ASSEMBLY**SE-31****9. INSTALL REAR SEAT CUSHION ASSEMBLY**

- (a) Attach the 2 seat cushion's rear hooks to the seatback frame.
- (b) Insert the inner belts through the slits on the seat cushion.

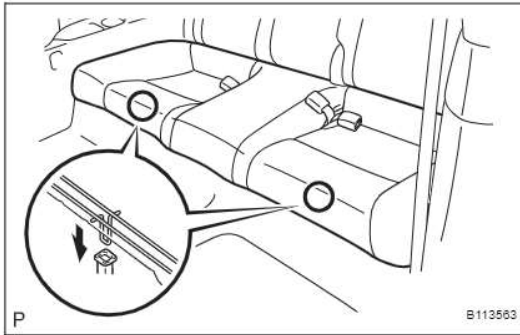

- (c) Attach the 2 seat cushion's front hooks to the rear seat cushion lock hooks.
- (d) Confirm that the seat cushion is firmly installed.

10. INSTALL DECK BOARD SUB-ASSEMBLY**11. INSTALL TONNEAU COVER ASSEMBLY****SE**