


Lincoln Blackwood 2002 – 2003 fuse box diagram

Passenger compartment fuse panel

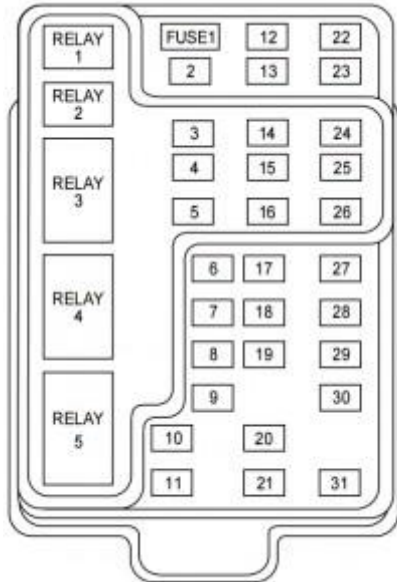

Lincoln Blackwood (2002) – fuse box – passenger

compartment


Fuse/relay	Ampere rating [A]	Description
1	15	Audio
2	5	Powertrain Control Module (PCM), Cluster
3	20	Cigar lighter, Data link connector
4	5	Power mirror switch, Mirror turn signal relays
5	15	Speed control module, Reverse lamp, Climate mode switch, Daytime Running Lamps (DRL) relay, Digital Transmission Range (DTR) sensor
6	5	Cluster, Brake shift interlock solenoid, GEM

7	—	Not used
8	5	Radio, Remote entry module, GEM, In-vehicle entertainment system (SuperCrew only)
9	—	Not used
10	—	Not used
11	30	Front washer pump relay, Wiper run/park relay, Wiper HI/LO relay, Windshield wiper motor
12	—	Not used
13	20	Stop lamp switch (Lamps), Turn/Hazard flasher
14	15	Battery saver relay, Interior lamp relay
15	5	Stop lamp switch (speed control, brake shift interlock), GEM, Rear Anti-lock Brake System (RABS) module
16	20	Headlamps (hi beams), Cluster (hi beam indicator)
17	—	Not used
18	5	Instrument illumination (dimmer switch power)
19	—	Not used
20	5	Audio, GEM, PCM, Transmission range sensor

21	15	DTR sensor, Clutch switch, Starter relay, I/P fuse 20
22	10	Air bag module, Passenger air bag deactivation module
23	10	Trailer tow battery Charge relay, Turn/Hazard flasher, 4×4 solenoids, 4×4 relays, Overhead console, 4–Wheel Anti-lock Brake System (4WABS) module, EC mirror, Heated seats
24	10	Function selector switch assembly
25	10	Heated mirrors
26	10	Right-hand low beam headlamp
27	5	Foglamp relay and foglamp indicator, Main light switch (upstream)
28	10	Left-hand low beam headlamp
29	5	Autolamp module, Transmission overdrive control switch, Central security module, Beltminder
30	30	Passive Anti-theft transceiver, Cluster, Ignition coils, PCM relay, Coil on plugs, Radio noise capacitor, ECC diode
31	—	Not used
Relay 1	—	Interior lamp relay
Relay 2	—	Battery saver relay
Relay 3	—	Not used

Relay 4	—	One-touch down window relay
Relay 5	—	Accessory delay relay

Power distribution box

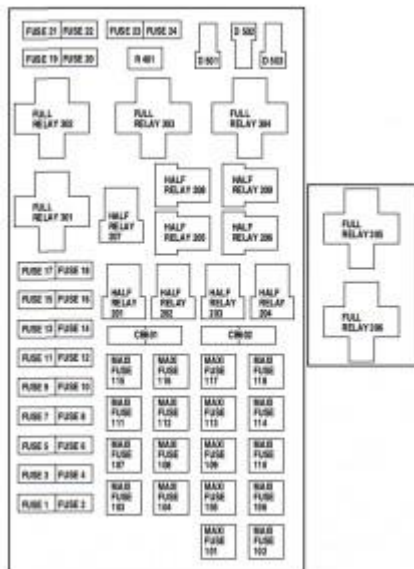

Lincoln Blackwood (2002) – fuse box – power

distribution box

Fuse/relay	Ampere rating [A]	Description
1	20*	Power Point
2	30*	Powertrain Control Module
3	30*	Main light switch, Headlamp relay, Multifunction switch
4	20*	Console power point (Harley Davidson only)
5	20*	Trailer tow back-up/park lamps

6	15	Main light switch, Park lamp relay
7	20*	Horn
8	15*	Power door locks, Central Security Module (CSM), Lock relays (not used on SuperCrew)
9	15*	Daytime Running Lamps (DRL), Fog lamps
10	20*	Fuel pump
11	20*	Alternator field
12	20*	Rear auxiliary power point (SuperCrew only)
13	15*	A/C clutch
14	—	Not used
15	10*	Running board lamps
16	15*	Bi-fuel injector module, fuel selector switch and alternative fuel injectors (Bi-fuel vehicles only)
17	—	Not used
18	15*	PCM, Fuel injectors, Fuel pump relay, Mass air flow sensor
19	10*	Trailer/Camper adapter (right stop/turn lamp)

20	10*	Trailer/Camper adapter (left stop/turn lamp)
21	—	Not used
22	—	Not used
23	15*	HEGO sensor, Automatic transmission
24	—	Not used
101	30**	Trailer tow battery charge
102	50/20**	Four-wheel Anti-lock Brake System (4WABS) module/Rear-wheel Anti-lock Brake System (RABS) module, Ignition switch
103	50**	Central junction box
104	30**	4×4 shift motor & clutch
105	40**	Climate control front blower
106	20**	Intercooler pump (supercharged engine only)
107	—	Not used
108	30**	Trailer tow electric brake
109	—	Not used
110	30**	Accessory delay relay (Not used on SuperCrew)

111	40**	Ignition switch battery feed (start and run circuits)
112	30**	Drivers power seat, Adjustable pedal switch
113	40**	Ignition switch battery feed (run and accessory circuits)
114	—	Not used
115	20**	Power door locks (SuperCrew only)
116	40**	Heated backlight
117	40**	Audiophile radio (SuperCrew only)
118	30**	Heated seats
201	—	Trailer tow park lamp relay
202	—	Front wiper run/park relay
203	—	Trailer tow backup lamp relay
204	—	A/C clutch relay
205	—	Horn relay
206	—	Fog lamp relay
207	—	Front washer pump relay

208	—	Intercooler pump relay (supercharged engine only)
209	—	Front wiper HI/LO relay
301	—	Fuel pump relay
302	—	Trailer tow battery charge relay
303	—	Heated backlight relay (SuperCrew only)
304	—	PCM relay
305	—	Fuel pump HI/LO relay (supercharged engine only)
306	—	Inertia switch relay (supercharged engine only)
401	—	Not used
501	—	PCM diode
502	—	A/C compressor diode
503	—	Not used
601	CB	Power windows, Moonroof (SuperCrew only)
602	—	Not used

*Mini fuses

**Maxi fuses