


ACCESSORIES & EQUIPMENT

Seat Heater System (Inspection) - Sienna

SEAT HEATER SYSTEM

PARTS LOCATION

ILLUSTRATION

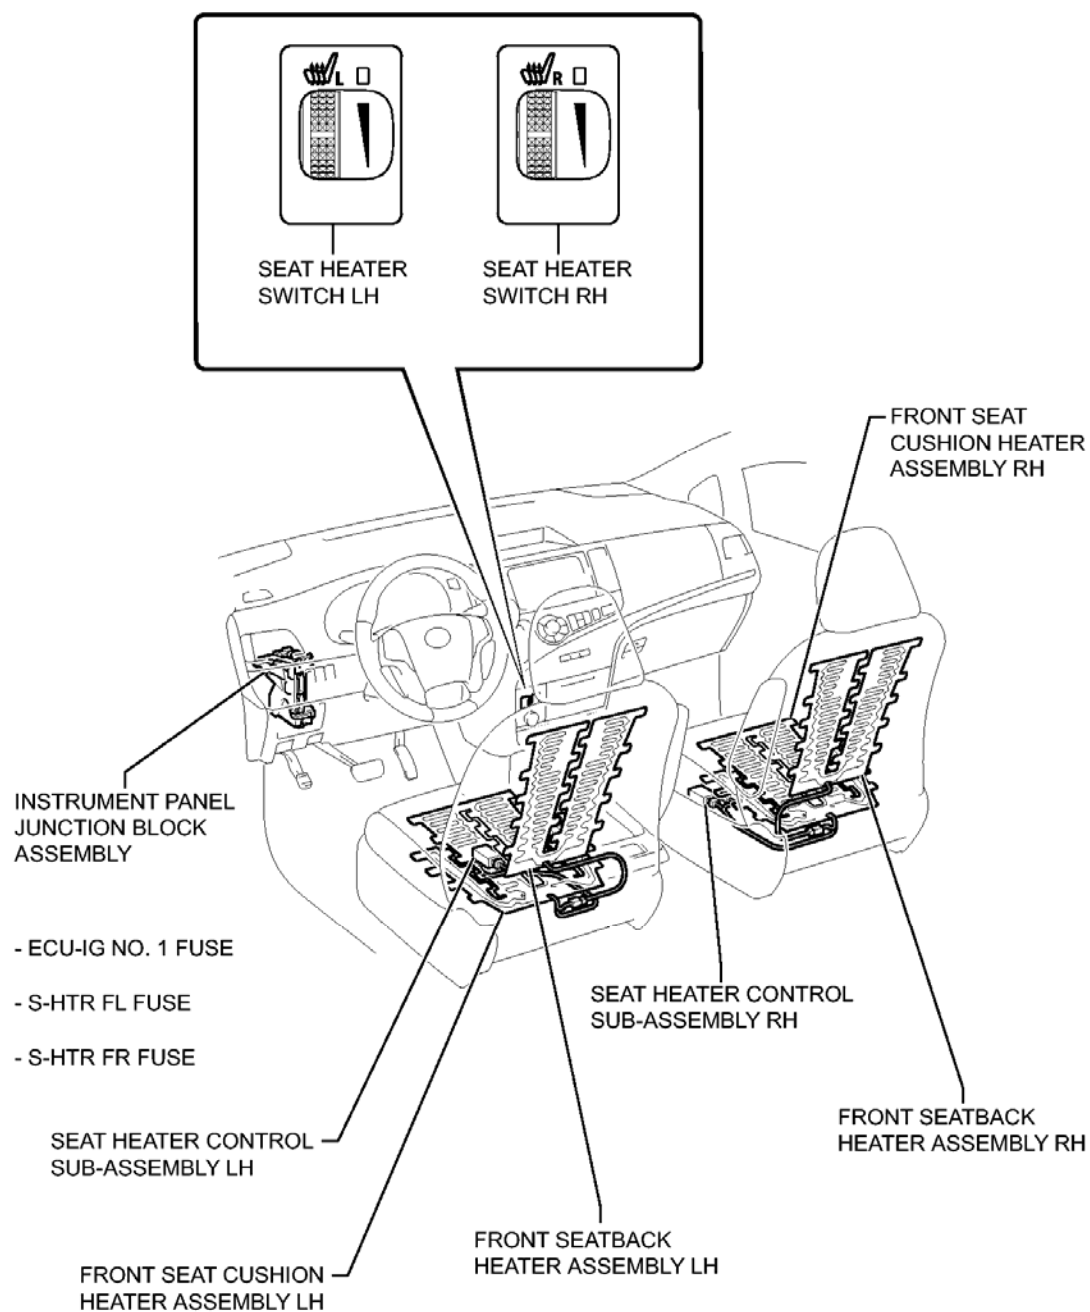

P

Fig. 1: Seat Heater System Components Location
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

SYSTEM DIAGRAM

SYSTEM DIAGRAM

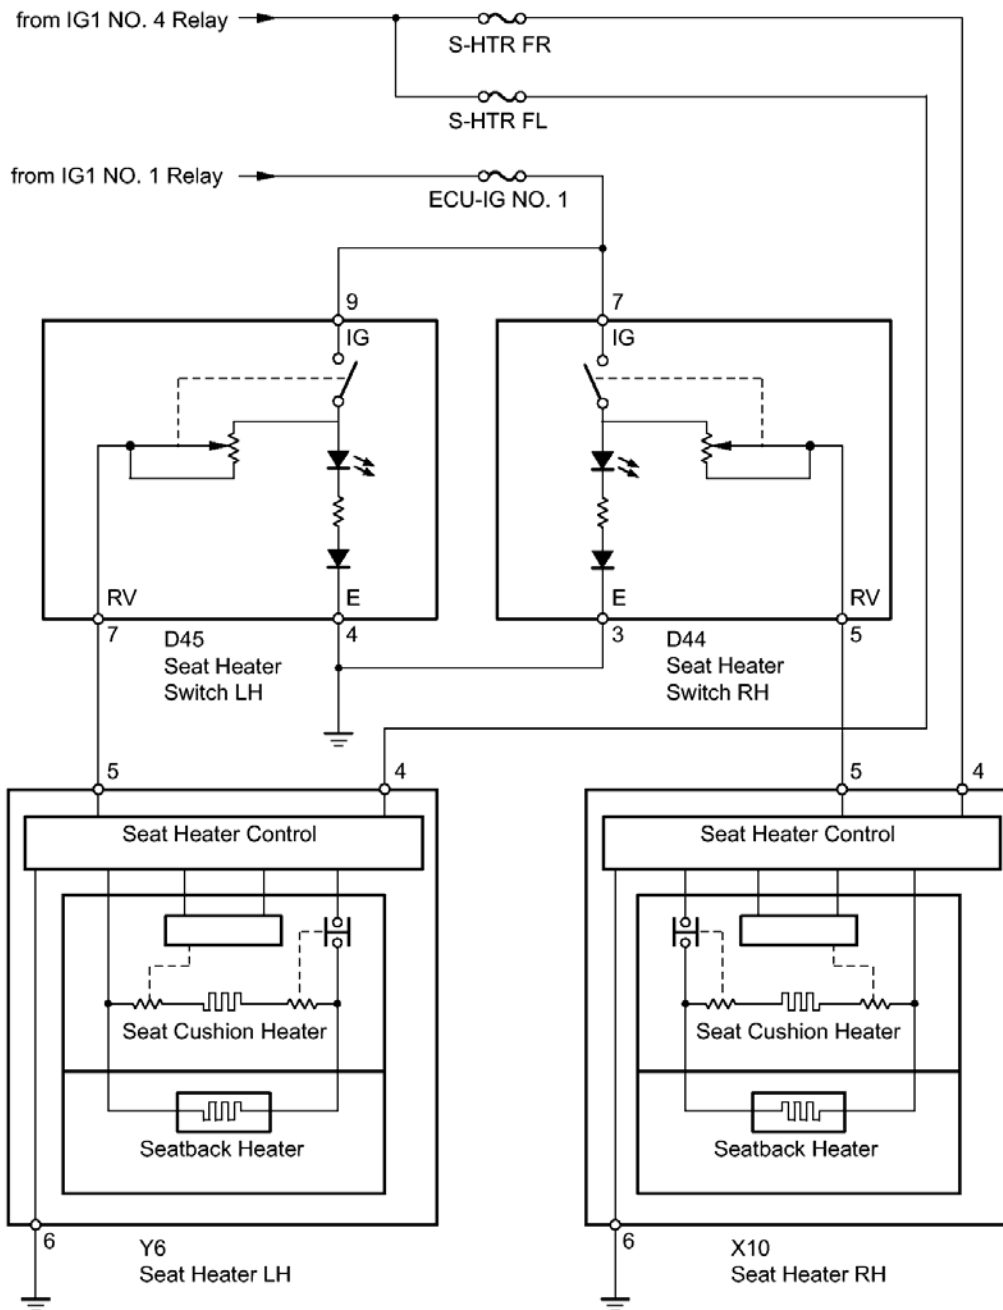


Fig. 2: Seat Heater System Diagram
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

SYSTEM DESCRIPTION

SYSTEM DESCRIPTION

1. GENERAL DESCRIPTION

- a. By operating the seat heater switch, which is located in the No. 1 switch hole base, the temperature can be controlled within the range of 30 to 40°C (86 to 104°F).
- b. The seat heater switch indicator light provides seat heater on/off status.
- c. The seat heaters of both seats are controlled by the seat heater controls, which are located under the respective seat.

PROBLEM SYMPTOMS TABLE

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

SEAT HEATER SYSTEM

Symptom	Suspected Area	See
Seat heater does not operate (Front LH side)	ECU-IG NO. 1 fuse	-
	S-HTR FL fuse	-
	Seat heater switch	Refer to <u>INSPECTION</u>
	Front seat cushion heater assembly LH	Refer to <u>INSPECTION</u>
	Front seatback heater assembly LH	Refer to <u>INSPECTION</u>
	Seat heater control sub-assembly LH	-
	Wire harness or connector	-
Seat heater does not operate (Front RH side)	ECU-IG NO. 1 fuse	-
	S-HTR FR fuse	-
	Seat heater switch	Refer to <u>INSPECTION</u>
	Front seat cushion heater assembly RH	Refer to <u>INSPECTION</u>
	Front seatback heater assembly RH	Refer to <u>INSPECTION</u>
	Seat heater control sub-assembly RH	-
	Wire harness or connector	-