


Chrysler LHS 1998 – 2004 fuse box diagram

Passenger Compartment Fuse Box

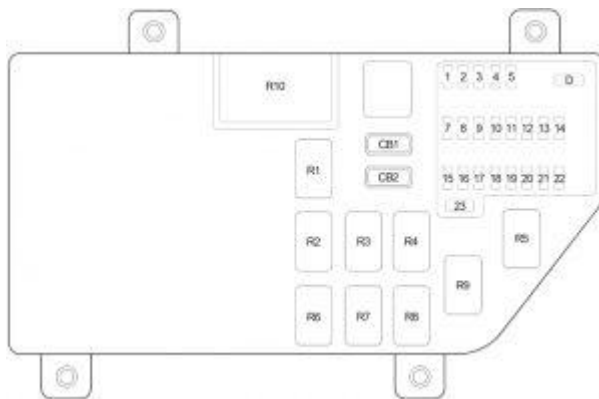

Chrysler LHS – fuse box diagram – passenger compartment


No	A	Protected Component
1	10	Powertrain Control Module, Cluster, Data Link Connector, Autostick Switch (300M/Intrepid)
2	10	Right Headlamp (High Beam), Daytime Running Lamp Module (except Export), Headlamp Flasher (Police)
3	10	Left Headlamp (High Beam), Headlamp Flasher (Police)
4	10	Radio
5	10	Wiper Switch, Headlamp Flasher (Police), Body Control Module
6	15	Cigar Lighter, Decklid Release Switch (Police)
7	20	Cluster, Headlamp Dimmer Switch, Park Lamp Relay (Front Park/Turn Signal Lamp, Front Side Marker Lamp (Concorde/LHS), Body Control Module, License Lamp, Tail/Stop Lamp or Tail Lamp or Tail/Turn Signal Lamp)
8	10	Airbag Control Module

9	1 0	Combination Flasher (Turn Signal)
10	1 5	?→'04: Right Headlamp (Low Beam)
	1 0	'99-'01: Right Headlamp (Low Beam)
11	2 0	Headlamp Dimmer Switch
12	1 5	?→'04: Left Headlamp (Low Beam), Daytime Running Lamp Module (except Export)
	1 0	'99-'01: Left Headlamp (Low Beam), Daytime Running Lamp Module (except Export)
13	1 0	Fuel Pump Relay, Powertrain Control Module
14	1 0	Cluster, Brake Transmission Shift Interlock Solenoid, Sentry Key Immobilizer Module, Overhead Travel Information System, Automatic Day/Night Mirror, Sunroof Control Module, Body Control Module, Power Mirror Switch, Driver/Passenger Heated Seat Switch
15	1 0	Daytime Running Lamp Module (except Export)
16	2 0	Headlamp Switch, Front Fog Lamp Relay, Body Control Module
17	1 0	Transmission Range Sensor, ABS, Manual/Automatic Temperature Control Head, Daytime Running Lamp Module (except Export)
18	2 0	Horn Relay, Data Link Connector, Power Amplifier

19	1 5	?→'04: Glove Box Lamp, Trunk Lamp, Body Control Module, Auxillary Lighting (Police), Driver Cylinder Lock Switch, Power Mirror Switch, Driver Power Door Lock Switch, Cluster, Analog Clock, Automatic Temperature Control Head, Sun Sensor/VTSS LED, Radio, Sentry Key Immobilizer Module, Decklid Release Switch (Police), Left/Right Visor Vanity Lamp, Overhead Map/Courtesy Lamp, Reading/Courtesy Lamp, Overhead Travel Information System, Passenger Power Window Switch, Door Courtesy Lamp
	1 0	'99-'01: Glove Box Lamp, Trunk Lamp, Body Control Module, Auxillary Lighting (Police), Driver Cylinder Lock Switch, Power Mirror Switch, Driver Power Door Lock Switch, Cluster, Analog Clock, Automatic Temperature Control Head, Sun Sensor/VTSS LED, Radio, Sentry Key Immobilizer Module, Decklid Release Switch (Police), Left/Right Visor Vanity Lamp, Overhead Map/Courtesy Lamp, Reading/Courtesy Lamp, Overhead Travel Information System, Passenger Power Window Switch, Door Courtesy Lamp
20	2 0	Stop Lamp Switch
21	1 0	Air Conditioner Compressor Clutch Relay, Radiator Fan Relay (High Speed), Radiator Fan Relay (Low Speed)
22	1 0	Airbag Control Module, Left/Right Side Impact Airbag Control Module
23	3 0	Blower Motor Power Module (ATC), Blower Motor Resistor Block (MTC)
Circuit Breaker		
CB 1	2 0	Driver Power Window Switch
CB 2	2 0	Driver/Passenger Power Seat Switch, Memory Heated Seat/Mirror Module, Door Lock relay, Door Unlock Relay, Driver Door Unlock Relay
Relay		

R1	Park Lamp
R2	Headlamp (High Beam)
R3	Headlamp (Low Beam)
R4	Front Fog Lamp
R5	Horn
R6	Door Unlock
R7	Door Lock
R8	Driver Door Unlock
R9	Spare
R10	Daytime Running Lamp Module

Engine Compartment Fuse Box

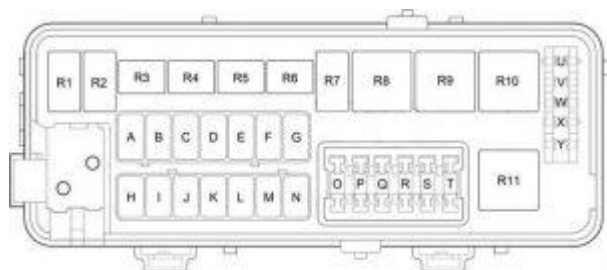

Chrysler LHS – fuse box diagram –

engine compartment


No	A	Protected Component
.		

A	5 0	Rear Window Defogger Relay, Body Control Module, Manual Temperature Control Head
B	4 0	?→'04: Air Conditioner Compressor Clutch Relay, Radiator Fan Relay (High Speed)
	3 0	'99-'01: Air Conditioner Compressor Clutch Relay, Radiator Fan Relay (High Speed)
C	3 0	High Beam Headlamp Relay (Fuse: "2", "3"), Fuse: "15", "16"
D	4 0	Low Beam Headlamp Relay (Fuse: "10", "11", "12"), "CB2", Dorr Lock Relay, Door Unlock Relay, Driver Door Unlock Relay
E	4 0	Radiator Fan Relay (Low Speed)
F	3 0	LHS, 300M (→'04): Fuse "Y", "X"
	2 0	Intrepid, Concorde: Spare Relay (LHS, 300M ('98→'01→?))
	5 0	Police: Fuse: "U", "X", "Y"
G	4 0	Starter Relay, Fuel Pump Relay, Ignition Switch (Fuse: "1", "4", "5", "6", "13", "14", "21", "22", "V")
H	3 0	ABS
I	3 0	Fuse: "19", "20"
J	4 0	Ignition Switch (Fuse: "8", "9", "17", "23", "CB1")
K	4 0	ABS
L	4 0	Fuse: "7", "18"

M	4 0	Front Wiper On/Off Relay, Front Wiper High/Low Relay, Body Control Module
N	3 0	Automatic Shut Down Relay, Powertrain Control Module
O	2 0	Combination Flasher (Hazard)
P	3 0	Export: Headlamp Washer Relay, Body Control Module
	3 0	Police: Police Accessory
Q	2 0	Transmission Control Relay
R	2 0	Export: Rear Fog Lamp Relay
	3 0	Police: Police Accessory
S	2 0	Fuel Injector, Ignition Coil, Capacitor, Short Runner Valve Solenoid (3.5 L), Manifold Tuning Valve
T	2 0	Powertrain Control Module
U	2 0	Police: Police Accessory
V	1 0	Starter Relay, Powertrain Control Module
W	1 0	Automatic Shut Down Relay
X	2 0	LHS, 300M: Spare Relay
	2 0	Police: Spot Lamp No.1

Y	1 5	LHS, 300M: Power Outlet
	2 0	Police: Spot Lamp No.2, Underhood Lamp
Relay		
R1	Fuel Pump	
R2	Front Wiper On/Off	
R3	Transmission Control	
R4	Starter	
R5	Export: Rear Fog Lamp	
R6	Air Conditioner Compressor Clutch	
R7	Front Wiper High/Low	
R8	Export: Headlamp Washer	
R9	Radiator Fan (Low Speed)	
R1 0	Automatic Shut Down	
R1 1	Radiator Fan (High Speed)	

Additional Fuse Box (Police)

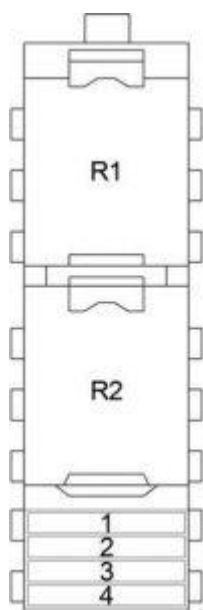

Chrysler LHS – fuse box diagram – additional fuse box

No	A	Protected Component
.		
1	2 0	Police Accessory
2	2 0	Police Accessory
3	2 0	Police Accessory
4	–	–
Relay		
R1	ISO No.1	
R2	ISO No.2	