



# Fiat Sedici 2006 – 2014 fuse box diagram

Fuse box in engine compartment

Petrol engine

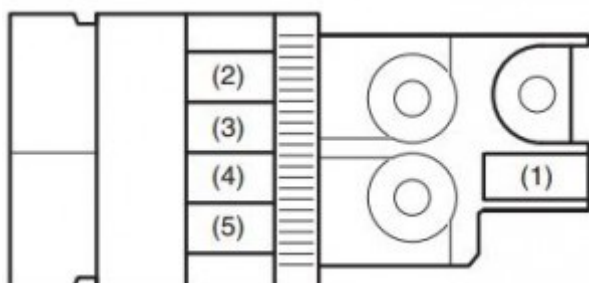

Fiat Sedici -fuse box – engine compartment (petrol)

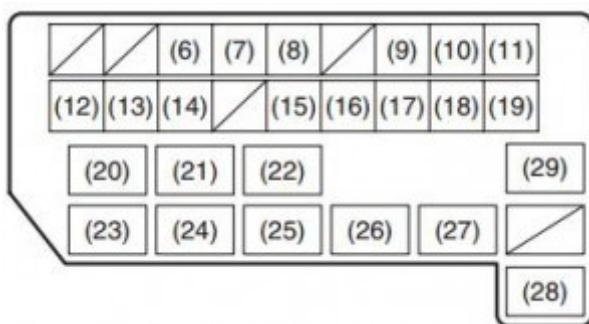


Fiat Sedici – fuse box – engine compartment

(petrol)


| Fuse | Ampere rating [A] | Description                                              |
|------|-------------------|----------------------------------------------------------|
| (1)  | 80                | All electric load                                        |
| (2)  | 50                | Power window, Ignition Wiper, Starter                    |
| (3)  | 50                | Tail light, Rear defogger, Door lock, Hazard/ Horn, Dome |
| (4)  | 80                | Heater, Air compressor, Power steering                   |
| (5)  | 15                | Radiator fan, Front fog light, Head light                |
| (6)  | 15                | Head light (Right) fuse                                  |
| (7)  | 15                | Head light (Left) fuse                                   |
| (8)  | 20                | Front fog light fuse                                     |
| (9)  | 60                | Power steering control module fuse                       |
| (10) | 40                | ABS control module fuse                                  |
| (11) | 30                | Radiator fan fuse                                        |
| (12) | 30                | ABS control module fuse                                  |
| (13) | 30                | Starting motor fuse                                      |
| (14) | 50                | Ignition switch fuse                                     |
| (15) | 30                | Blower fan fuse                                          |
| (16) | 20                | Air compressor fuse                                      |
| (17) | 15                | Throttle motor fuse                                      |

|      |    |                                        |
|------|----|----------------------------------------|
| (18) | 15 | Automatic transaxle fuse (if equipped) |
| (19) | 15 | Fuel injection fuse                    |
| (20) | —  | Automatic transaxle fuse (if equipped) |
| (21) | —  | Air compressor relay                   |
| (22) | —  | Fuel pump relay                        |
| (23) | —  | Condenser fan relay                    |
| (24) | —  | Front fog light relay                  |
| (25) | —  | Throttle motor relay                   |
| (26) | —  | FI MAIN                                |
| (27) | —  | Starting motor relay                   |
| (28) | —  | Radiator fan relay                     |

## Diesel engine

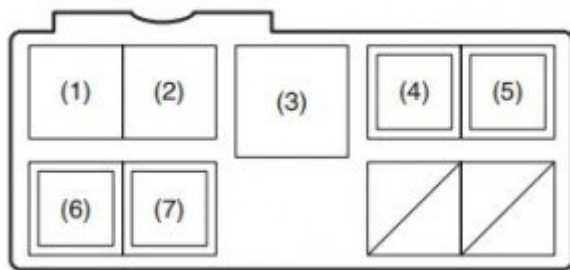


Fiat Sedici – fuse box – engine compartment

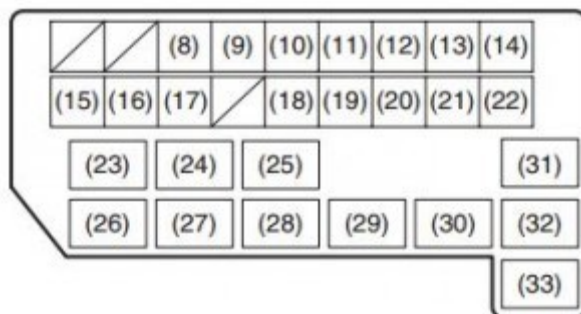

(diesel)

Fiat Sedici – fuse box – engine

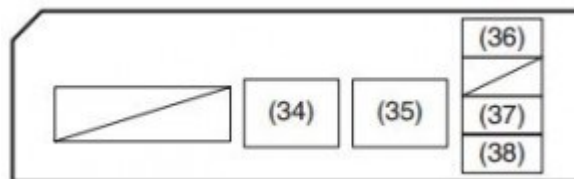


compartment (diesel)  
engine compartment (diesel)

Fiat Sedici – fuse box –

| Fuse | Ampere rating [A] | Description       |
|------|-------------------|-------------------|
| (1)  | 80                | Glow              |
| (2)  | 30                | Fuel heater       |
| (3)  | 140               | All electric load |
| (4)  | 50                | Light             |
| (5)  | 30                | Sub heater        |
| (6)  | 30                | Sub heater        |
| (7)  | 30                | Sub heater        |

|      |    |                                    |
|------|----|------------------------------------|
| (8)  | 15 | Head light (Right) fuse            |
| (9)  | 15 | Head light (Left) fuse             |
| (10) | 20 | Front fog light fuse               |
| (11) | 50 | Ignition                           |
| (12) | 60 | Power steering control module fuse |
| (13) | 40 | ABS control module fuse            |
| (14) | 30 | Radiator fan fuse                  |
| (15) | 30 | ABS control module fuse            |
| (16) | 30 | Starting motor fuse                |
| (17) | 50 | Ignition                           |
| (18) | 30 | Blower fan fuse                    |
| (19) | 10 | Air compressor fuse                |
| (20) | 20 | Fuel pump fuse                     |
| (21) | 30 | Condenser fan fuse                 |
| (22) | 20 | Fuel injection fuse                |
| (23) | —  | Sub heater relay 3                 |
| (24) | —  | Air compressor relay               |
| (25) | —  | Fuel pump relay                    |
| (26) | —  | Condenser fan relay                |
| (27) | —  | Front fog light relay              |
| (28) | —  | Sub heater relay 2                 |
| (29) | —  | Sub heater relay                   |
| (30) | —  | Starting motor relay               |
| (31) | —  | Radiator fan relay                 |
| (32) | —  | Radiator fan relay                 |
| (33) | —  | Radiator fan relay                 |
| (34) | —  | Fuel heater                        |
| (35) | —  | Fuel injection main                |
| (36) | 10 | EPI                                |
| (37) | 10 | Fuel injection                     |
| (38) | 15 | INJ DVR                            |

Fuse box under the dashboard

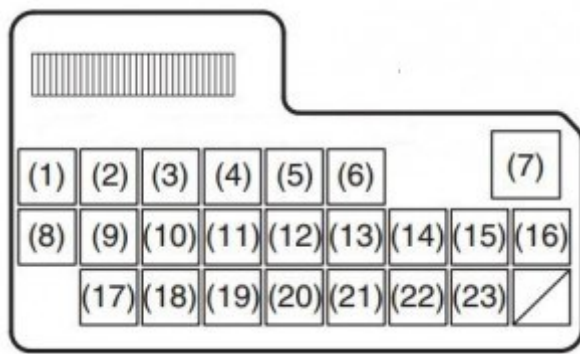

Fiat Sedici – fuse box – dashboard

| Fuse | Ampere rating [A] | Description                           |
|------|-------------------|---------------------------------------|
| (1)  | 15                | Rear wiper                            |
| (2)  | 15                | Ignition coil                         |
| (3)  | 10                | Back-up light                         |
| (4)  | 10                | Meter                                 |
| (5)  | 15                | Accessory                             |
| (6)  | 15                | Accessory 2                           |
| (7)  | 30                | Power window                          |
| (8)  | 30                | Wiper                                 |
| (9)  | 10                | IG1 SIG                               |
| (10) | 15                | Air bag                               |
| (11) | 10                | Anti-lock brake system                |
| (12) | 10                | Tail light                            |
| (13) | 10                | Stop light                            |
| (14) | 20                | Door lock                             |
| (15) | 15                | 4WD light                             |
| (16) | 10                | ST SIG                                |
| (17) | 15                | Seat heater                           |
| (18) | 10                | IG 2 SIG                              |
| (19) | 10                | Rear fog lamp                         |
| (20) | 15                | Dome                                  |
| (21) | 30                | Rear defogger                         |
| (22) | 15                | Horn / Hazard                         |
| (23) | 10                | Horn / Hazard Fiat CODE (Immobilizer) |