

Oldsmobile Silhouette 2001 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located to the right of the glove box.

CIGARETTE LIGHTER DISJONCTEUR	6	15	24	33	42
1	7	16	25	34	43
2	8	17	26	35	44
3	9	18	27	36	45
4	10	19	28	37	46
5	11	20	29	38	47
	12	21	30	39	48
	13	22	31	40	49
	14	23	32	41	50

Oldsmobile Silhouette –

fuse box – instrument panel


Circuit breakers	Circuitry
1	DRL Control Module, Headlamp and Instrument Panel Dimmer Switch
2	Power Sliding Door
3	Front Power Windows
4	6-Way Power Seat(s) and Rear Side Door Actuator Motor
5	Blower Motor Hi Speed Relay Module

Fuses	Circuitry
6	Steering Wheel Radio Control Switches (Illumination)
7	Instrument Cluster to PRNDL Indicators
8	Power Remote Control Mirror Switch
9	Cruise Control Module, Switch and Release Switch
10	Not Used
11	Powertrain Control Module (PCM), Ignition Crank
12	PASS-Key III System
13	Body Control Module (BCM)
14	Heated Mirrors
15	Not Used
16	Not Used
17	Cigarette Lighter, Driver Information Center (DIC), Front Auxiliary Power Outlets
18	Turn Signal Switch
19	Indicator Lamp and Multifunction Switch (Power Vent Switch)
20	Windshield Wiper/Washer Motor and Switch
21	Turn Signal Switch
22	Rear Electric Accessory Plug Housing
23	Daytime Running Lamp (DRL) Control Module
24	Not Used

25	Rear Window Defogger Relay, Heated Mirrors
26	OnStar
27	Inflatable Restraint Control Module
28	Heater-A/C Control
29	Instrument Cluster, BCM, Electronic Level Control (ELC) Sensor and Relay
30	Stoplamp Switch
31	Module/Electronic Brake Control Module/Electronic Brake Traction Control Module (EBCM/EBTCM)
32	Evaporative Emissions (EVAP) Canister Vent Solenoid Valve
33	Not Used
34	Electronic Level Control (ELC) Air Compressor and ELC Relay, Trailer Harness
35	Courtesy Lamp
36	BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Control Module, Rear Windows
37	Rear HVAC-A/C Control
38	Rear Window Wiper Motor, Rear Window Wiper/Washer and Multifunction Switch (Rear Window Wiper/Washer Switch)
39	Not Used
40	Not Used
41	Not Used
42	Not Used
43	Not Used
44	Retained Accessory Power (RAP) Relay
45	Not Used
46	Air Inlet Actuator, DIC Display, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Relay
47	BCM Programming
48	Not Used
49	Not Used
50	IGN MAIN Relay and PCM, Electronic Break Control Module

Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir.

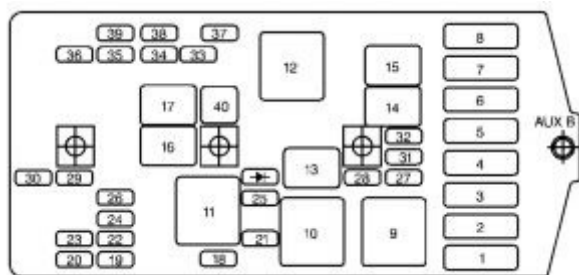

Oldsmobile Silhouette –

fuse box – underhood

fuse and relay center

Maxi Fuse	Circuitry
1 COOL FAN 2	Coolant Fans
2 —	Not Used
3 HEADLAMP	Circuit Breakers: FRT HVAC HI BLWR, and HEADLAMP Fuses (Instrument Panel): HAZARD and STOPLAMP
4 BATT MAIN 2	Circuit Breaker: PWR SEAT/PSD. Fuses (UP): ELC and RR DEFOG
5 IGN MAIN 1	Ignition Switch to Fuses (Instrument Panel): ABS/TCS IGN, CRUISE, DRL, ELEC PRNDL, IGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK IGN, IGN 1-U/H, INJ, TCC)]
6 COOL FAN I	Coolant Fans
7 BATT MAIN 1	Fuses (Instrument Panel): ABS MOD BATT, CIGAR/DLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT
8 IGN MAIN 2	Ignition Switch to Fuses (I/P): Ignition Switch to Fuses (I/P): BCM PRGRM, FRT HVACLOW/MED BLWR, FRTWPR/WSHR, HVAC/DRL, MALL/RADIO/DIC, PWRQRT VENT, RR HVAC, RRWPR/WSHR, SWC ACCY and PWR WDO Circuit Breaker

Mini Relays	Circuitry
9 COOL FAN	RH FAN 1, LH FAN 2
10 COOL FAN 2	LH FAN 2
11 IGN MAIN	FUSES: A/C CLU, IGN I-U/H, INS, ELEK IGN, TCC
12 COOL FAN 1	RH FAN 1, LH FAN 2

Micro Relays	Circuitry
13 A/C CLU	A/C Clutch
14 FUEL PUMP	Fuel Pump
15 F/PMP SPD CONT	Not Used
16 HORN	Horn
17 FOG LAMP	LH Fog Lamp, RH Fog Lamp, Fog Lamp Indicator

Mini Fuse	Circuitry
18 INJ	Fuel Injectors 1-6
19 SPARE	Not Used
20 SPARE	Not Used
21 IGNI-UH	Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor
22 SPARE	Not Used
23 SPARE	Not Used
24 SPARE	Not Used
25 ELEK IGN	Ignition Control Module (ICM)
26 SPARE	Not Used
27 B/U LAMP	Transaxle Range Switch to Back-up Lamps
28 A/C CLU	A/C CLU to A/C Compressor Clutch Oil
29 RADIO	Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft-Deterrent Shock Sensor
30 ALT SENSE	Generator
31 TCC	Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM
32 FUEL PUMP	Fuel Pump Relay
33 ECM SENSE	Powertrain Control Module (PCM)
34 —	Not Used
35 FOG LP	Fog Lamp Relay
36 HORN	Horn Relay
37 PARK LP	Daytime Running Lamps (DRL) Control Module, Headlamps Switch Theft Deterrent Relay to Headlamps
38 —	Not Used
39 AIR	Not Used

Diode	Circuitry
 A/C CLU DIODE	Air Conditioning Clutch Diode

40		Mini Fuse Puller
----	--	------------------