


Lincoln LS 2000 – 2006 fuse box diagram

Passenger compartment fuse panel

The fuse panel is located on the right hand side kick panel.

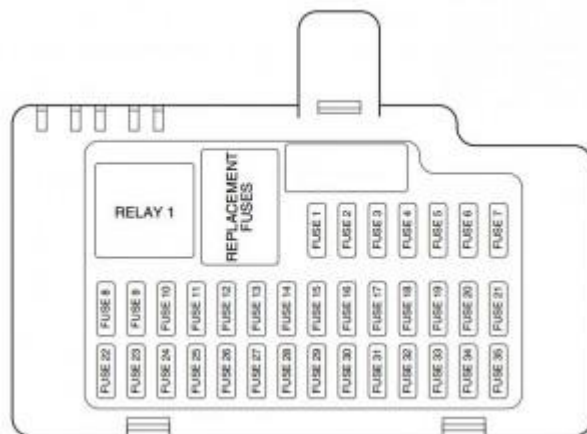

Lincoln LS – fuse box – passenger

compartment


Fuse/relay location	Ampere rating [A]	Description
1	5	Starter Relay Coil
2	5	Radio
3	5	ABS/TCS/AdvanceTrac
4	5	Cluster, PCM Relay, Fuel Pump Relay, REM, Transit Relay
5	5	T/A Switch, O/D Cancel Switch, Autolamp Sensor, Heated Seat Modules
6	10	OBD II

7	5	DDM, DSM, Anti-theft LED, Security Horn, PCM, Power Mirror
8	5	Right Front Turn, Right Front Repeater, Right Front Sidemarker, Right Front Park Lamps
9	10	Right Front Low Beam
10	5	Left Front Turn, Left Front Repeater, Left Front Sidemarker, Left Front Park Lamps
11	10	Left Front High Beam
12	—	Not used
13	5	Cluster
14	10	RCM, DATC
15	5	Not Used (Spare)
16	5	E/C Mirror, Heated Seat Controls, RSM (Rain Sensor Module)
17	5	RCM, Alternator Warning Lamp
18	20	Radio, CIA
19	15	Tilt/Tele Motors
20	10	FEM, DATC, Cluster, Brake Shift Interlock, REM

21	10	Power Folding Mirrors
22	10	DDM
23	10	Right Front High Beam
24	5	PATS
25	10	Left Front Low Beam
26	10	Wiper Relay, Windshield Washer
27	10	Radio, Cellphone
28	5	Security Horn
29	5	Trailer Tow Ignition Sense, VEMS, FEM
30	5	FEM
31	—	Not used
32	20	Cigar Lighter
33	10	Switch Backlighting
34	10	Not Used (Spare)
35	10	Stop Lamp Signal

Front power distribution box

The front power distribution box is located in the engine compartment.

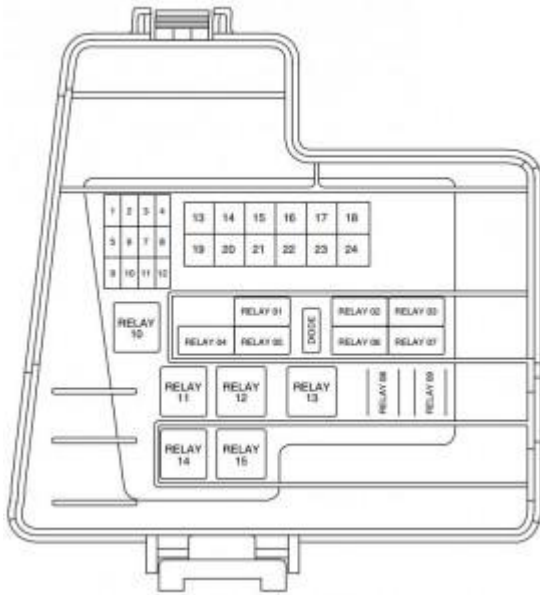

Lincoln LS – fuse box – power distribution

box

Fuse/relay	Ampere rating [A]	Description
1	10*	A/C Clutch
2	—	Not Used
3	15*	Fog Lamp
4	15*	Horn
5	20*	Fuel Injectors
6	15*	Transmission Solenoid
7	—	Not Used
8	—	Not Used


9	—	Not Used
10	—	Not Used
11	15*	HEGO's
12	10*	COP's
13	30**	Heated Wiper Park
14	30**	ABS Module
15	—	Not Used
16	30**	Blower Motor
17	20**	Thermactor Air Pump (Low Emission Vehicles Only)
18	40**	PCM
19	—	Not used
20	30**	Wiper Motor
21	30**	Starter Solenoid
22	30**	ABS Motor
23	—	Not Used (Fuse Plug)

24	—	Not used
Relay 01	—	Wiper Hi/Lo
Relay 02	—	Wiper Park
Relay 03	—	COP's and HEGO's
Relay 04	—	Not Used
Relay 05	—	Auxiliary Coolant Pump (V8)
Relay 06	—	Horn
Relay 07	—	Fog Lamps
Relay 08	—	A/C Clutch
Relay 09	—	Wiper Run/Acc
Relay 10	—	Blower Motor
Relay 11	—	Not Used
Relay 12	—	Heated Wiper Park
Relay 13	—	Not Used
Relay 14	—	PCM Power

Relay 15	—	Starter Motor
Diode	—	PCM
*Mini fuses **Cartridge fuses		

Rear power distribution box

The rear power distribution box is located in the luggage compartment under the spare tire well cover.

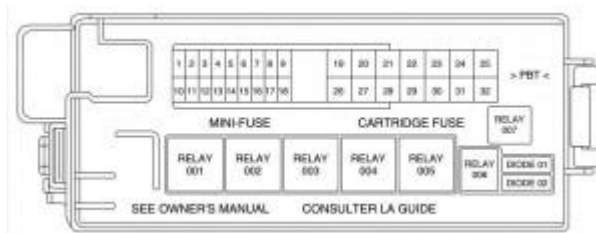

Lincoln LS – fuse box – rear power

distribution box

Fuse/relay location	Ampere rating [A]	Description
1	15*	Decklid Release Solenoid
2	10*	Right Rear Turn Lamp
3	5*	Left Rear Stop Lamp
4	10*	Fuel Door Release Solenoid
5	10*	Courtesy and Map Lamps
6	10*	Left Rear Turn and Back-up Lamps

7	5*	Right Rear Stop Lamp
8	10*	Center High Mounted Stop Lamp
9	5*	Heated Mirror
10	20*	Powerpoint
11	15*	Heated Seats
12	5*	Transit Relay (if equipped)
13	—	Not used
14	5*	Phone, CD, VEMS
15	5*	Alternator Sense
16	20*	Moonroof
17	15*	Fuel Pump
18	20*	Subwoofer Amplifier
19	20**	REM – Left Rear Window
20	20**	DDM – Driver Window
21	20**	Driver Lumbar, Power Seats

22	20**	Ignition Switch
23	30**	SSP4
24	30**	SSP3
25	40**	P-J/B
26	20**	FEM – Front Passenger Window
27	30**	SSP1
28	20**	Passenger Lumbar, Power Seats
29	30**	Rear Defroster
30	20**	REM – Right Rear Window
31	20**	Ignition Switch (V6 manual trans)
32	30**	SSP2
Relay 001	—	SSP1
Relay 002	—	SSP4
Relay 003	—	Rear Defroster
Relay 004	—	SSP3

Relay 005	—	SSP2
Relay 006	—	Not used
Relay 007	—	Fuel pump
Diode 01	—	Not used
Diode 02	—	Fuel pump motor
*Mini fuses **Maxi fuses		