


Lincoln Blackwood 2001 fuse box diagram

Passenger compartment fuse panel

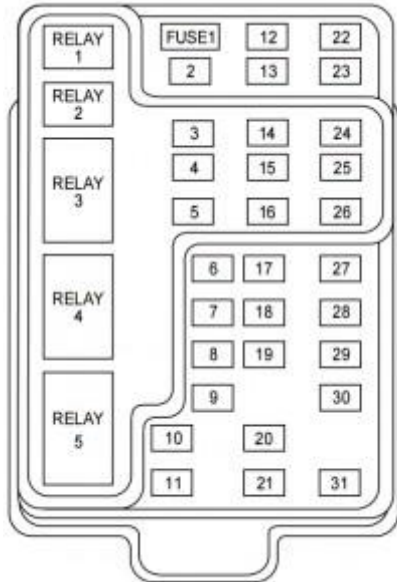

Lincoln Blackwood (2001) – fuse box – passenger

compartment

Fuse/relay	Ampere rating [A]	Description
1	25	Radio, Amplifier, I/P fuse 31
2	5	Powertrain Control Module (PCM), Instrument Cluster, Electronic Automatic Temperature Control (EATC), Overhead Trip Computer Module (OTC), Navigation Module, Clock
3	20	Cigar Lighter, Data Link Connector
4	7,5	Mirrors, Seats, Pedals, (memory)
5	15	Speed Control Module, Reverse Lamp, Reverse Sensing System (RSS), E/C Mirror, Central Security Module, Navigation Module

6	5	Cluster, Brake Shift Interlock Solenoid, Generic Electronic Module (GEM), RSS, Air Suspension, OTC, Compass, Automatic Parking Brake Release
7	5	Console Blower Relay
8	5	E/C mirror, Navigation Module, Clock, GEM
9	—	Not Used
10	—	Not Used
11	30	Front Washer Pump Relay, Wiper Run/Park Relay, Wiper Hi/LO Relay, Windshield Wiper Motor
12	15	Air Suspension
13	20	Stop Lamp Switch (Lamps), Turn/Hazard Flasher, Trailer Brake, Radio Frequency Interference Module (RFI)
14	15	Battery Saver Relay, Interior Lamp Relay, Accessory Delay Relay (Power Windows)
15	5	Stop Lamp Switch, (Speed Control, Brake Shift Interlock, Anti-lock Brake System (ABS), PCM Module Inputs, Traction Control, Air Suspension, Central Security Module, GEM Module
16	20	Headlamps (Hi Beams), Cluster (Hi Beam Indicator)
17	10	Heated Mirrors, Rear Defrost
18	5	Instrument Illumination (Dimmer Switch Power)

19	—	Not used
20	5	GEM, Power Tonneau Cover, Air Suspension, Memory
21	15	Starter Relay, Fuse 20 of the Fuse Panel , Radio
22	10	Air Bag Module
23	10	Trailer Tow Battery Charge Relay, Turn/Hazard Flasher, Rear Console Controls, Climate Control Seats, Traction Control Module
24	10	I/P Fuse 7, EATC, Blower Relay
25	—	Not used
26	10	Right Side Low Beam Headlamp
27	5	Fog lamp Relay and Fog lamp Indicator
28	10	Left Side Low Beam Headlamp
29	5	Autolamp Module, Transmission Overdrive Control Switch, Central Security Module, Power Tonneau
30	30	Passive Anti Theft Transceiver, Instrument Cluster, Ignition Coils, Powertrain Control Module Relay
31	10	CD Changer, Rear Console Controls
Relay 1	—	Interior Lamp Relay

4	20*	Console Power Point
5	20*	Trailer Tow Backup/Park Lamps
6	15*	Parklamps/Autolamps, Passenger Fuse Panel Feed Fuse #18
7	20*	Horn
8	30*	Power Door Locks
9	15*	Fog Lamps, Power Tonneau
10	20*	Fuel Pump
11	20*	Alternator Field
12	20*	Rear Auxiliary Power Point
13	15*	A/C Clutch
14	20*	Box Power Point
15	—	Not Used
16	—	Not Used
17	10*	Delayed ACC
18	15*	Powertrain Control Module, Fuel Injectors, Fuel Pump Relay, Idle Air Control, Mass Air Flow Sensor

19	10*	Trailer Tow Stop and Right Turn Lamp
20	10*	Trailer Tow Stop and Left Turn Lamp
21	—	Not Used
22	—	Not Used
23	15*	HEGO Sensor, Canister Vent, Automatic Transmission, CMS Sensor
24	—	Not Used
101	30**	Trailer Tow Battery Charge
102	50**	Four Wheel Antilock Brake Module, Traction Control
103	50**	Junction Block Battery Feed
104	—	Not used
105	40**	Climate Control Front Blower
106	—	Not used
107	30**	Passenger Power Seat
108	30**	Trailer Tow Electric Brake
109	50**	Air Suspension

111	40**	Ignition Switch Battery Feed (Start and Run Circuits)
112	30**	Drivers Power Seat, Adjustable Pedals
113	40**	Ignition Switch Battery Feed (Run and Accessory Circuits)
114	—	Not Used
115	—	Not Used
116	40**	Heated Grid / Mirrors
117	—	Not Used
118	—	Not Used
201	—	Trailer Tow Park Lamp Relay
202	—	Front Wiper Run/Park Relay
203	—	Trailer Tow Backup Lamp Relay
204	—	A/C Clutch Relay
205	—	Not Used
206	—	Fog Lamp Relay
207	—	Front Washer Pump Relay

208	—	Not Used
209	—	Not Used
301	—	Fuel Pump Relay
302	—	Trailer Tow Battery Charge Relay
303	—	Wiper High / Low Relay
304	—	Powertrain Control Module Relay
401	—	Not Used
501	—	Powertrain Control Module Diode
502	—	A/C Compressor Diode
503	—	Auto Park Brake Diode
601	30 CB	Power Windows, Moonroof
602	50**	Power Tonneau
*Mini fuses **Maxi fuses		