



D RELAY LOCATIONS


[Engine Compartment]

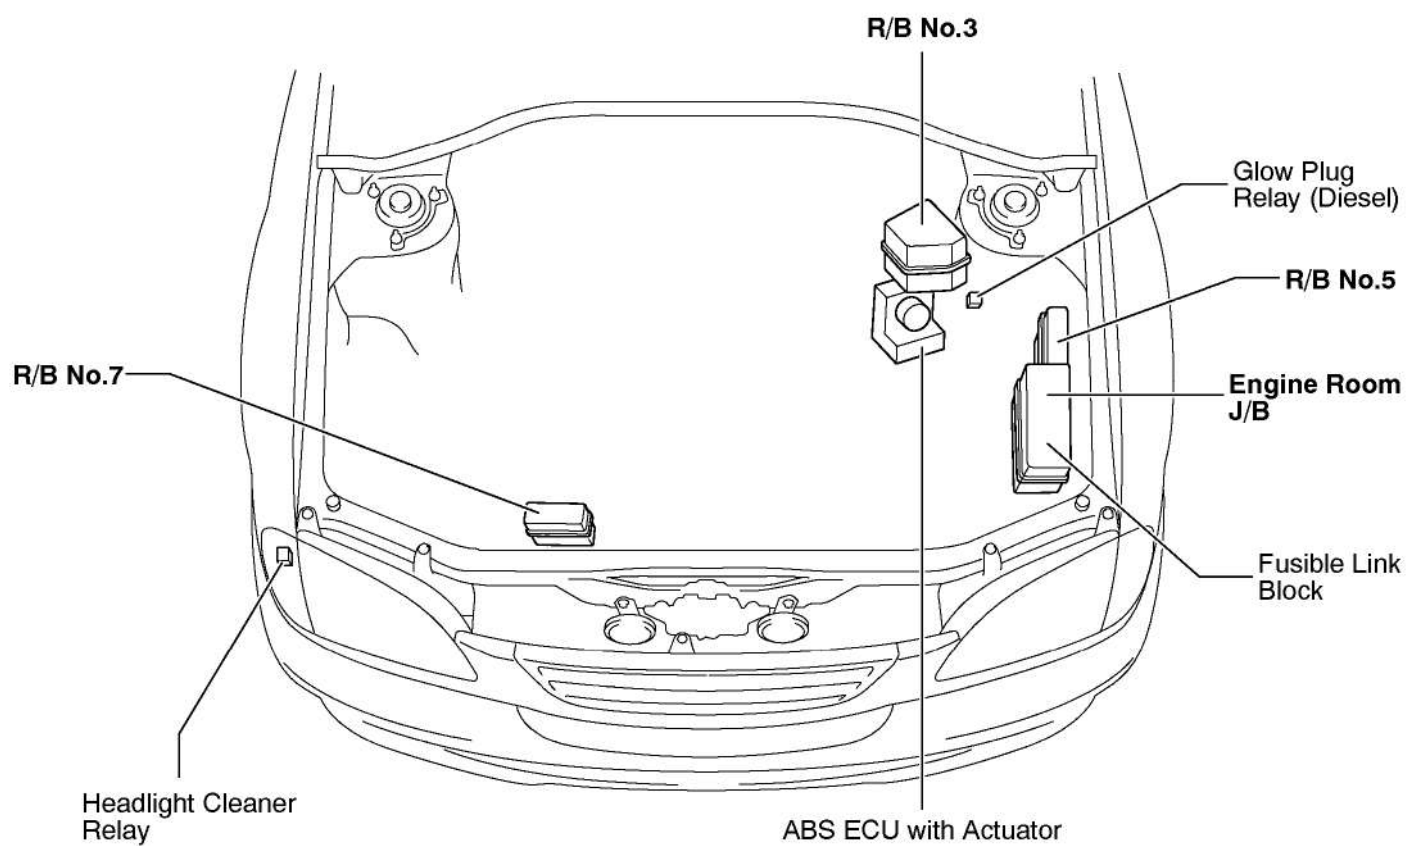

[Instrument Panel] (LHD)

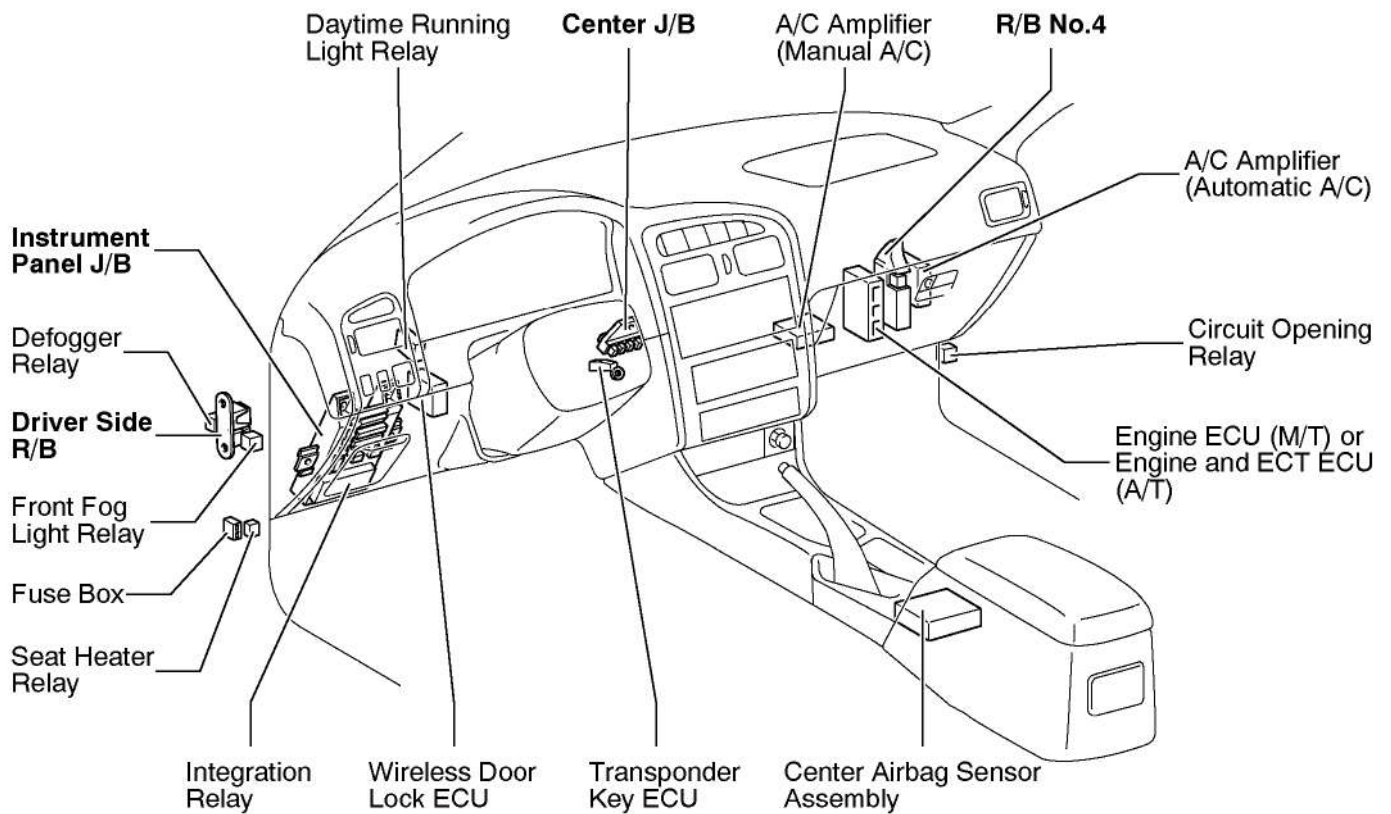


(RHD)

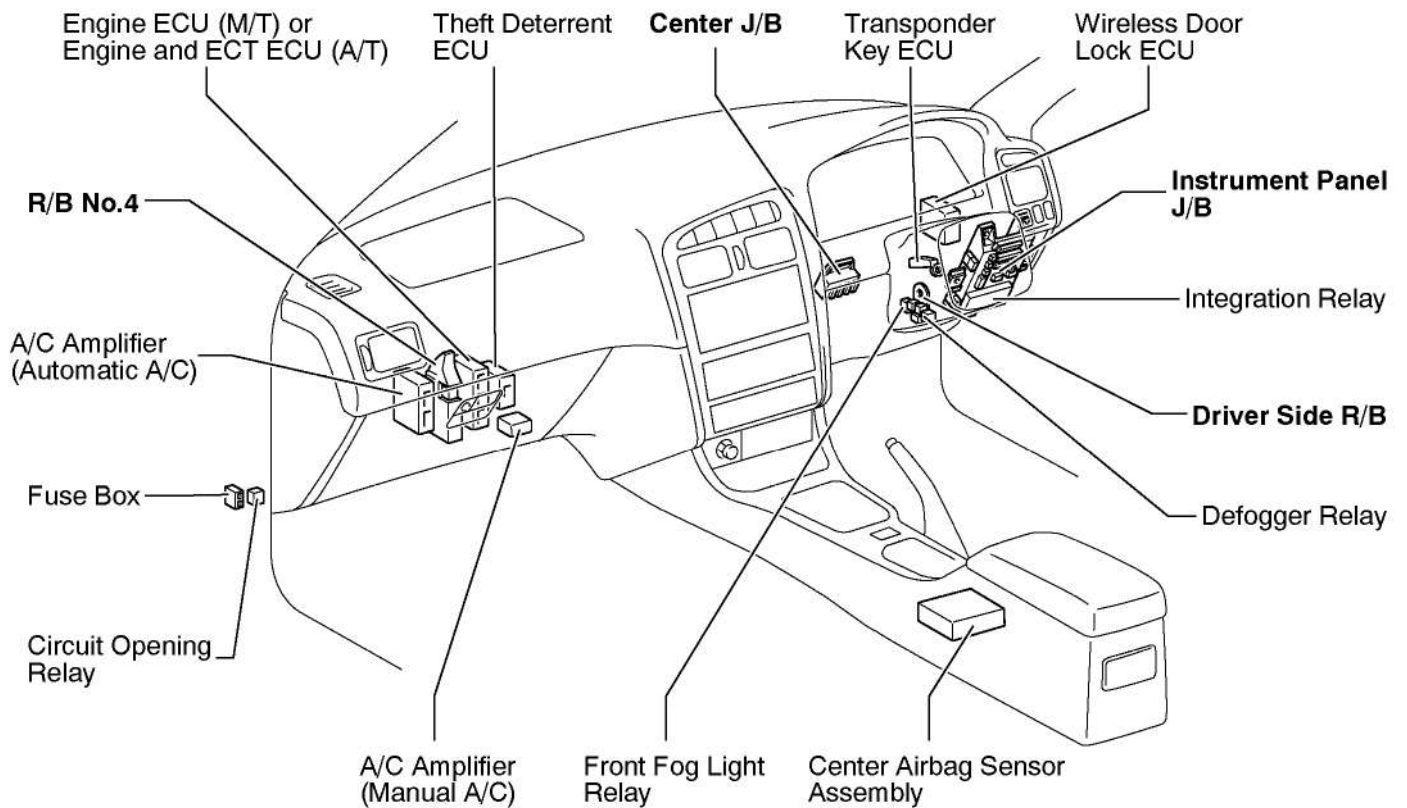


D RELAY LOCATIONS


[Body]
(S/D)

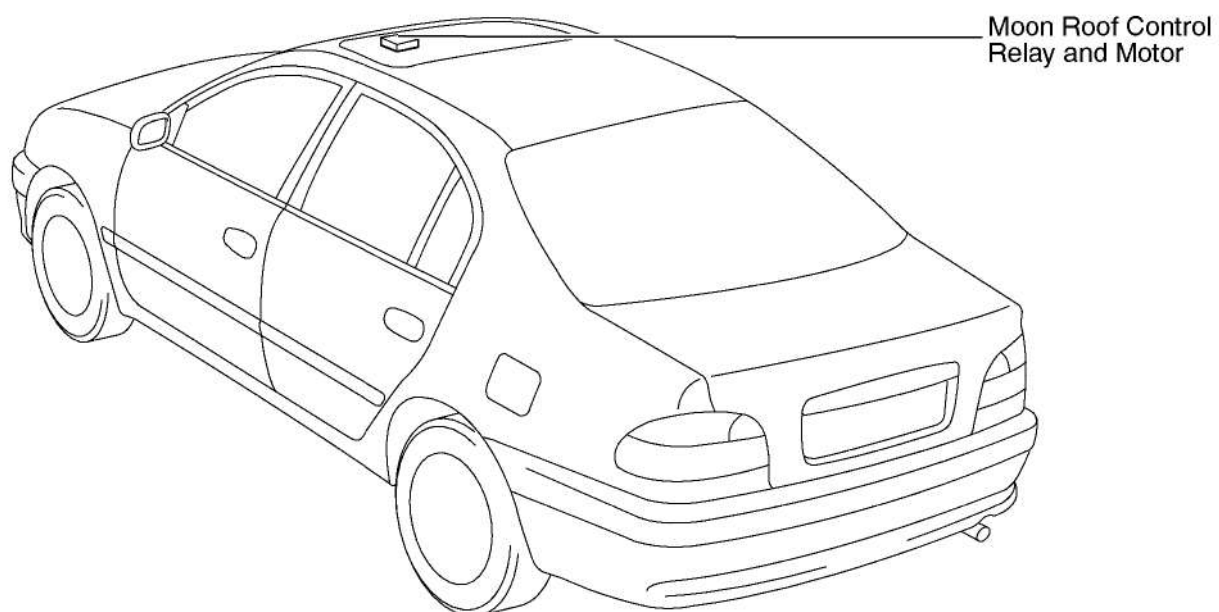

(L/B)

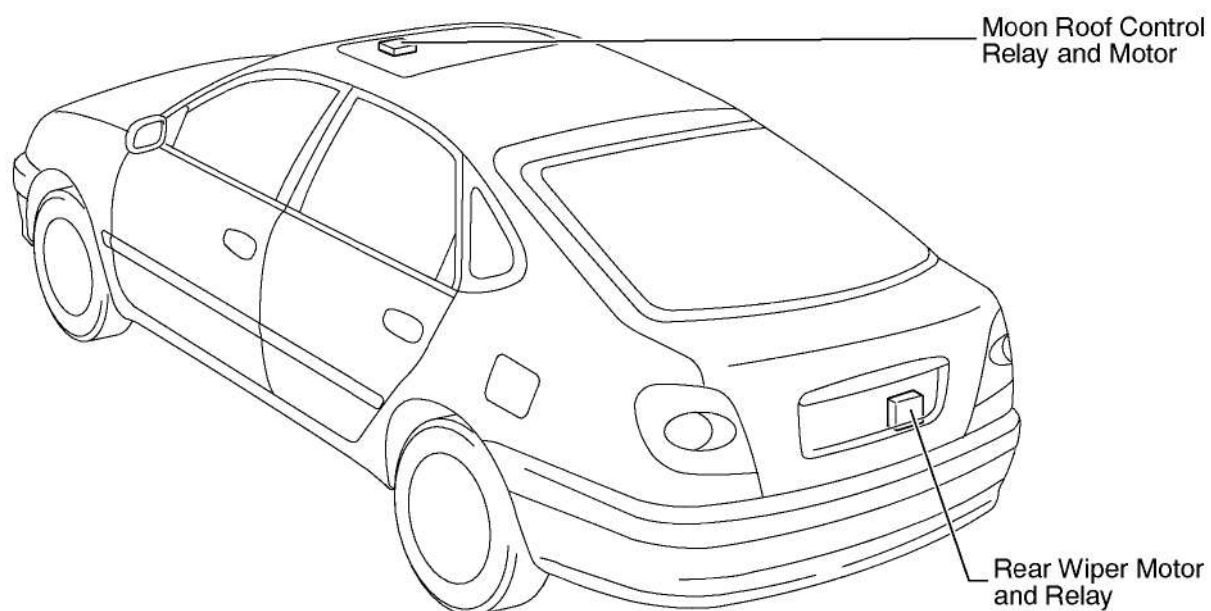


(W/G)

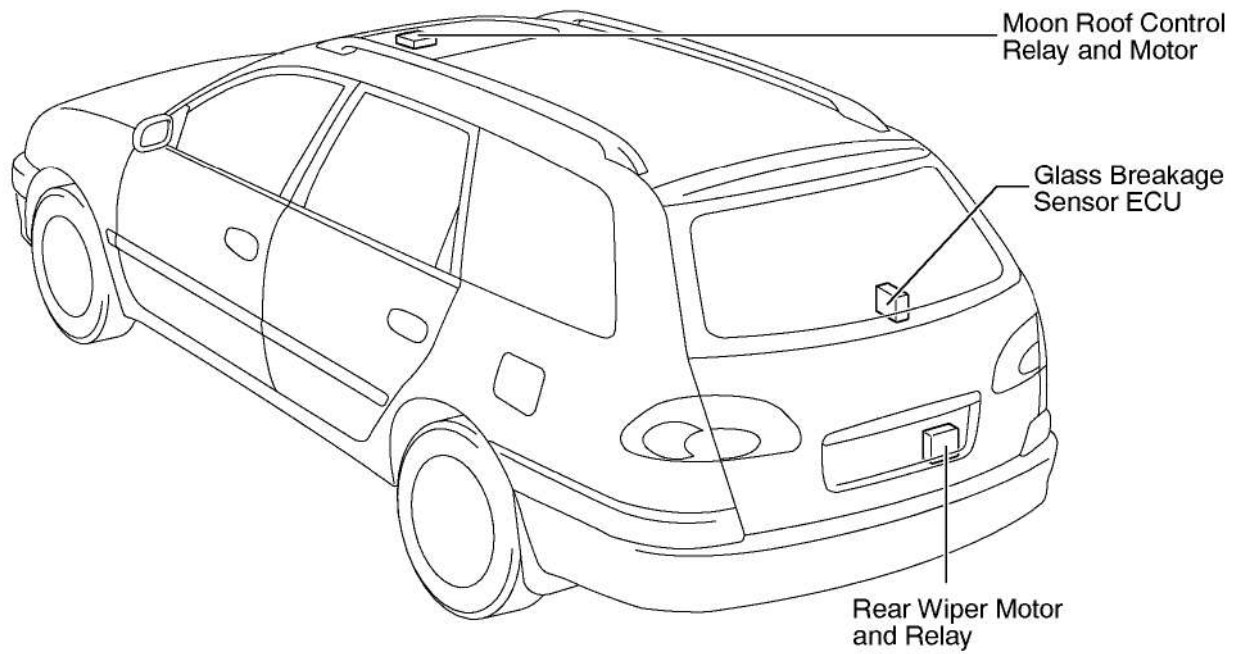


D RELAY LOCATIONS

① : Driver Side R/B	LHD : Left Kick Panel (See Page 21)
	RHD : Right Kick Panel (See Page 21)

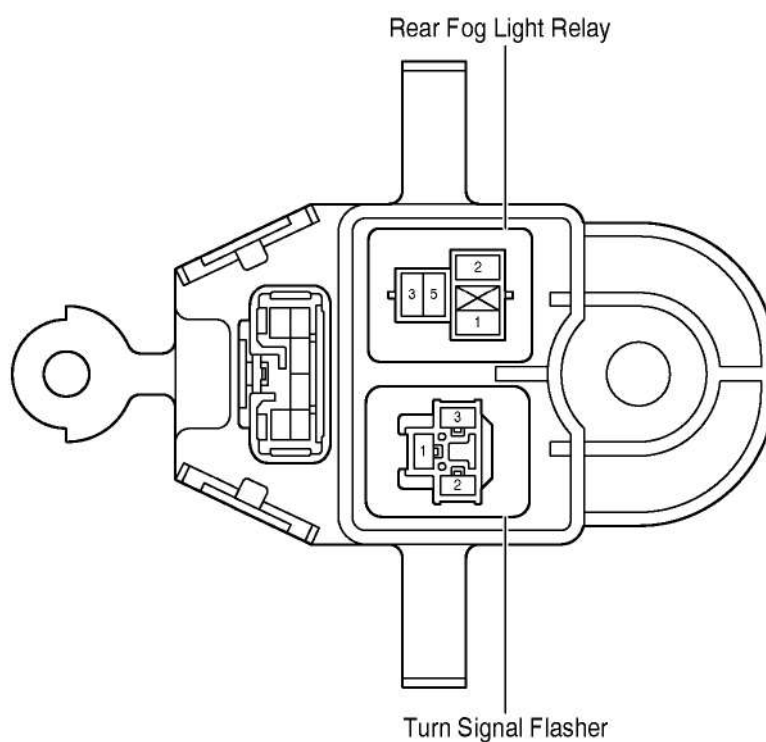


④ : R/B No.4	Passenger Side Dash Panel (See Page 21)
--------------	---

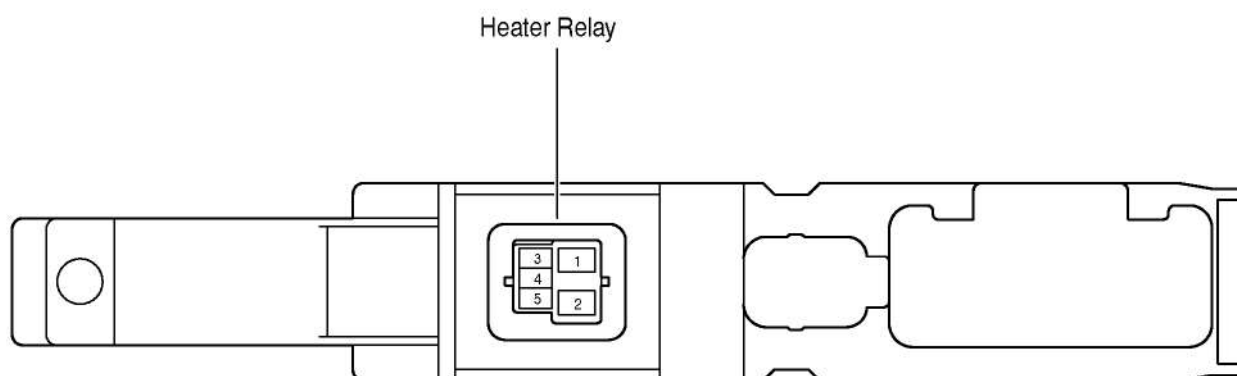


③ : R/B No.3

Engine Compartment Left (See Page 20)

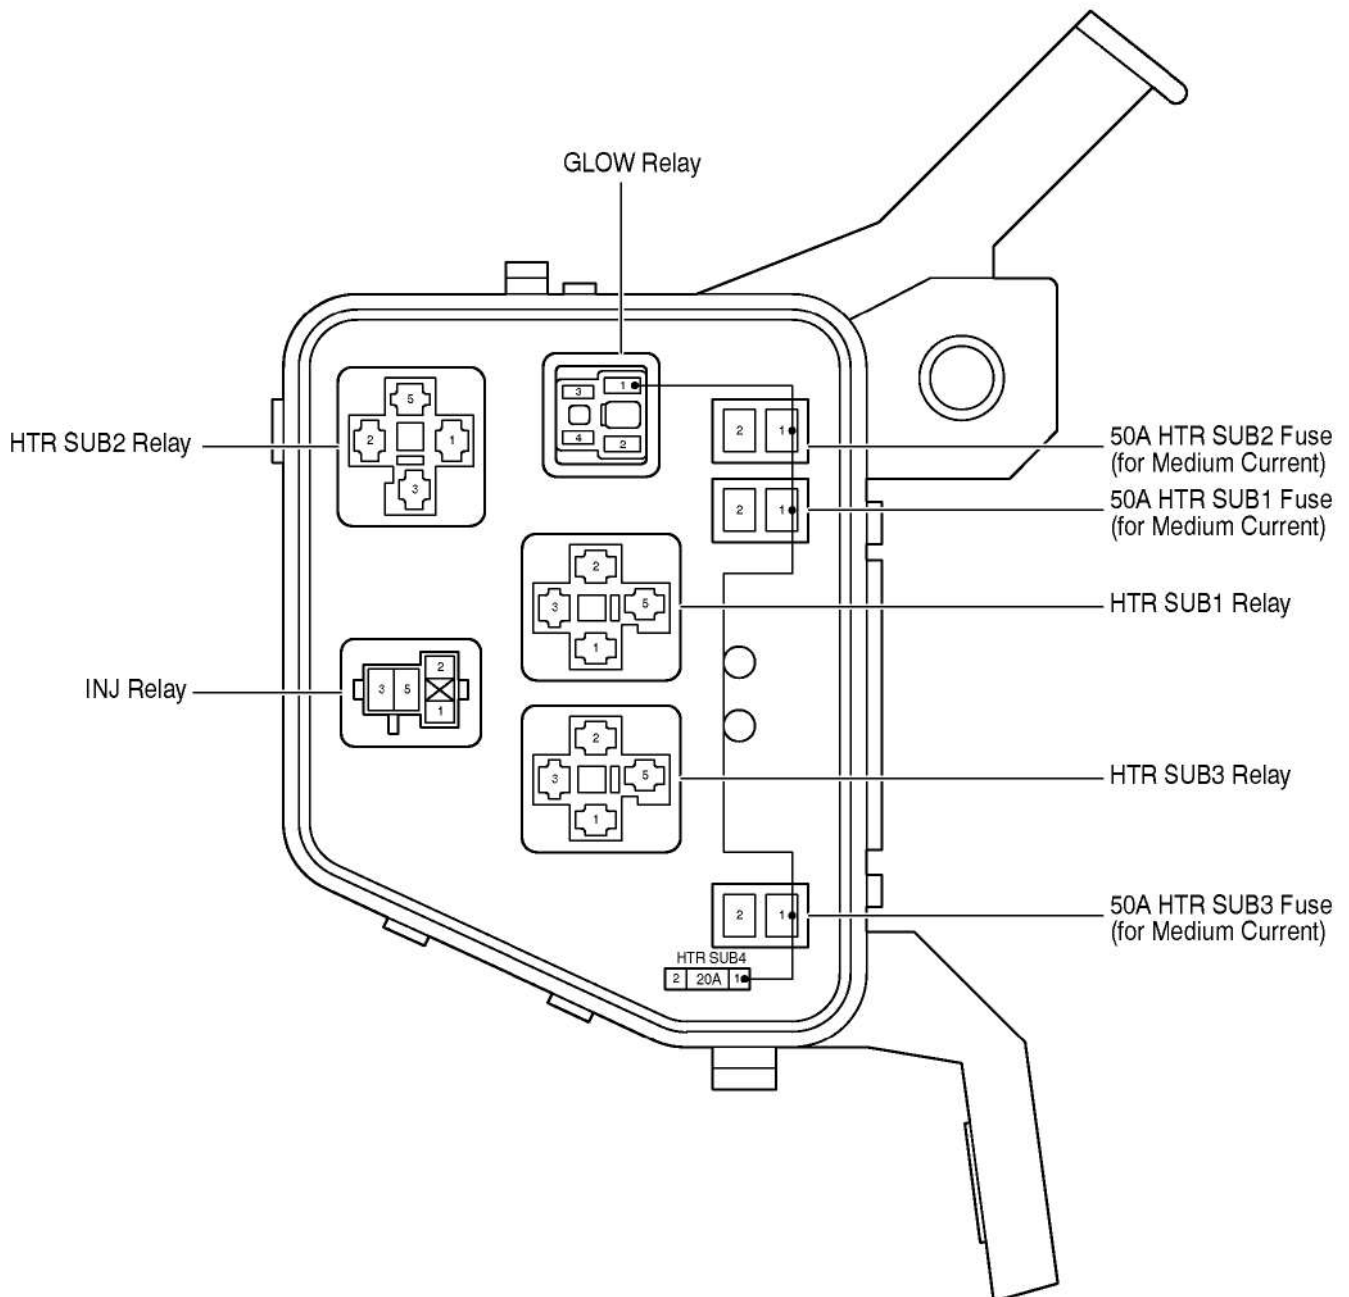



D RELAY LOCATIONS

⑤ : Engine Room R/B	Engine Compartment Left (See Page 20) (Inside Engine Room J/B)
---------------------	---

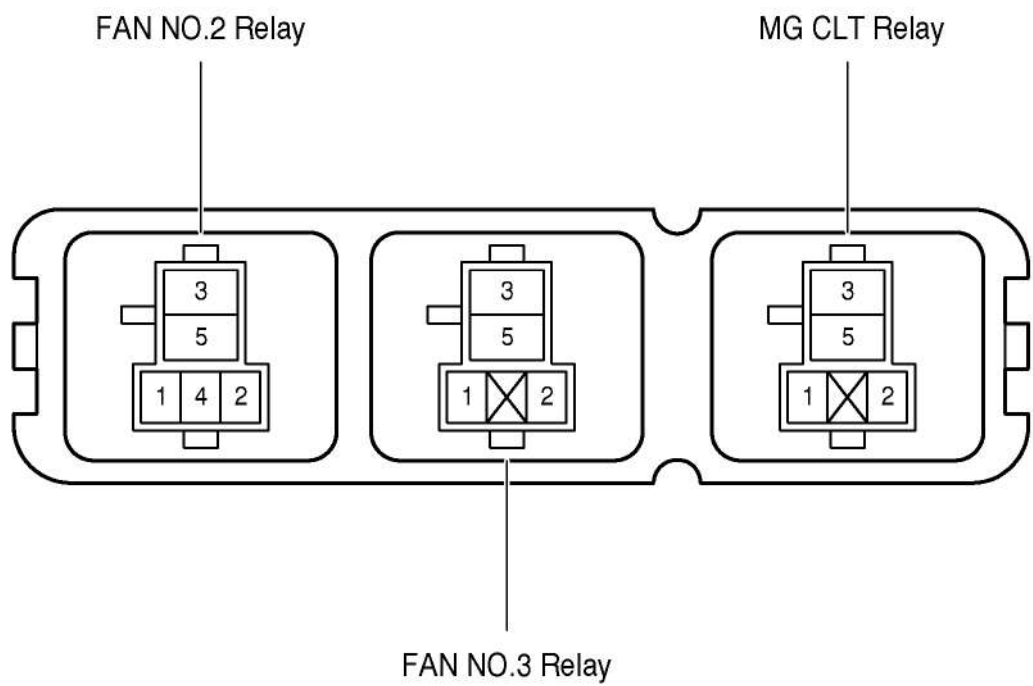


⑦ : R/B No.7 (w/ Daytime Running Light)	Radiator Upper Support RH (See Page 20)
--	---

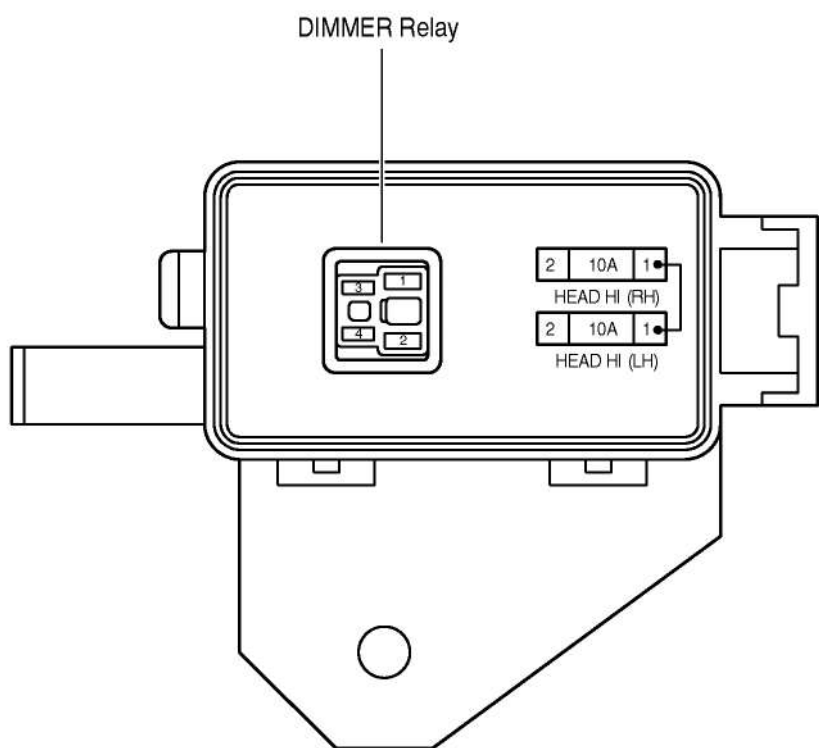

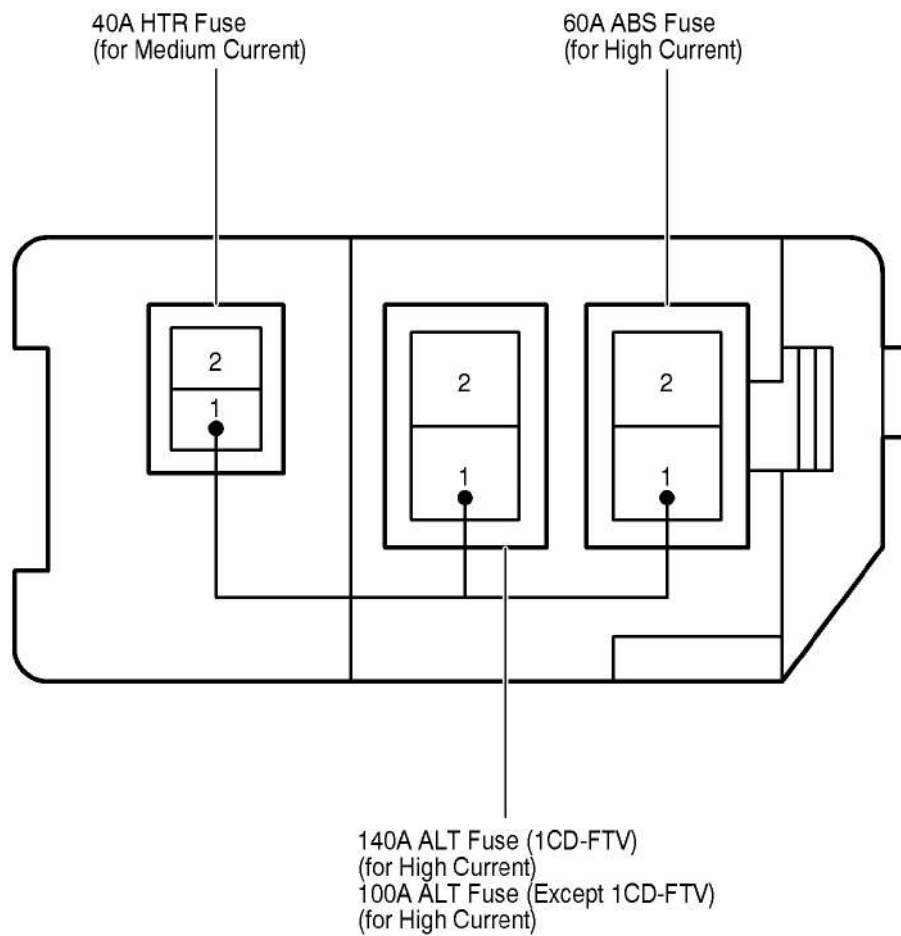
Fusible Link Block**Engine Compartment Left (See Page 20)
(Inside Engine Room J/B)**

D RELAY LOCATIONS

 : Engine Room J/B	Engine Compartment Left (See Page 20)
---	---------------------------------------

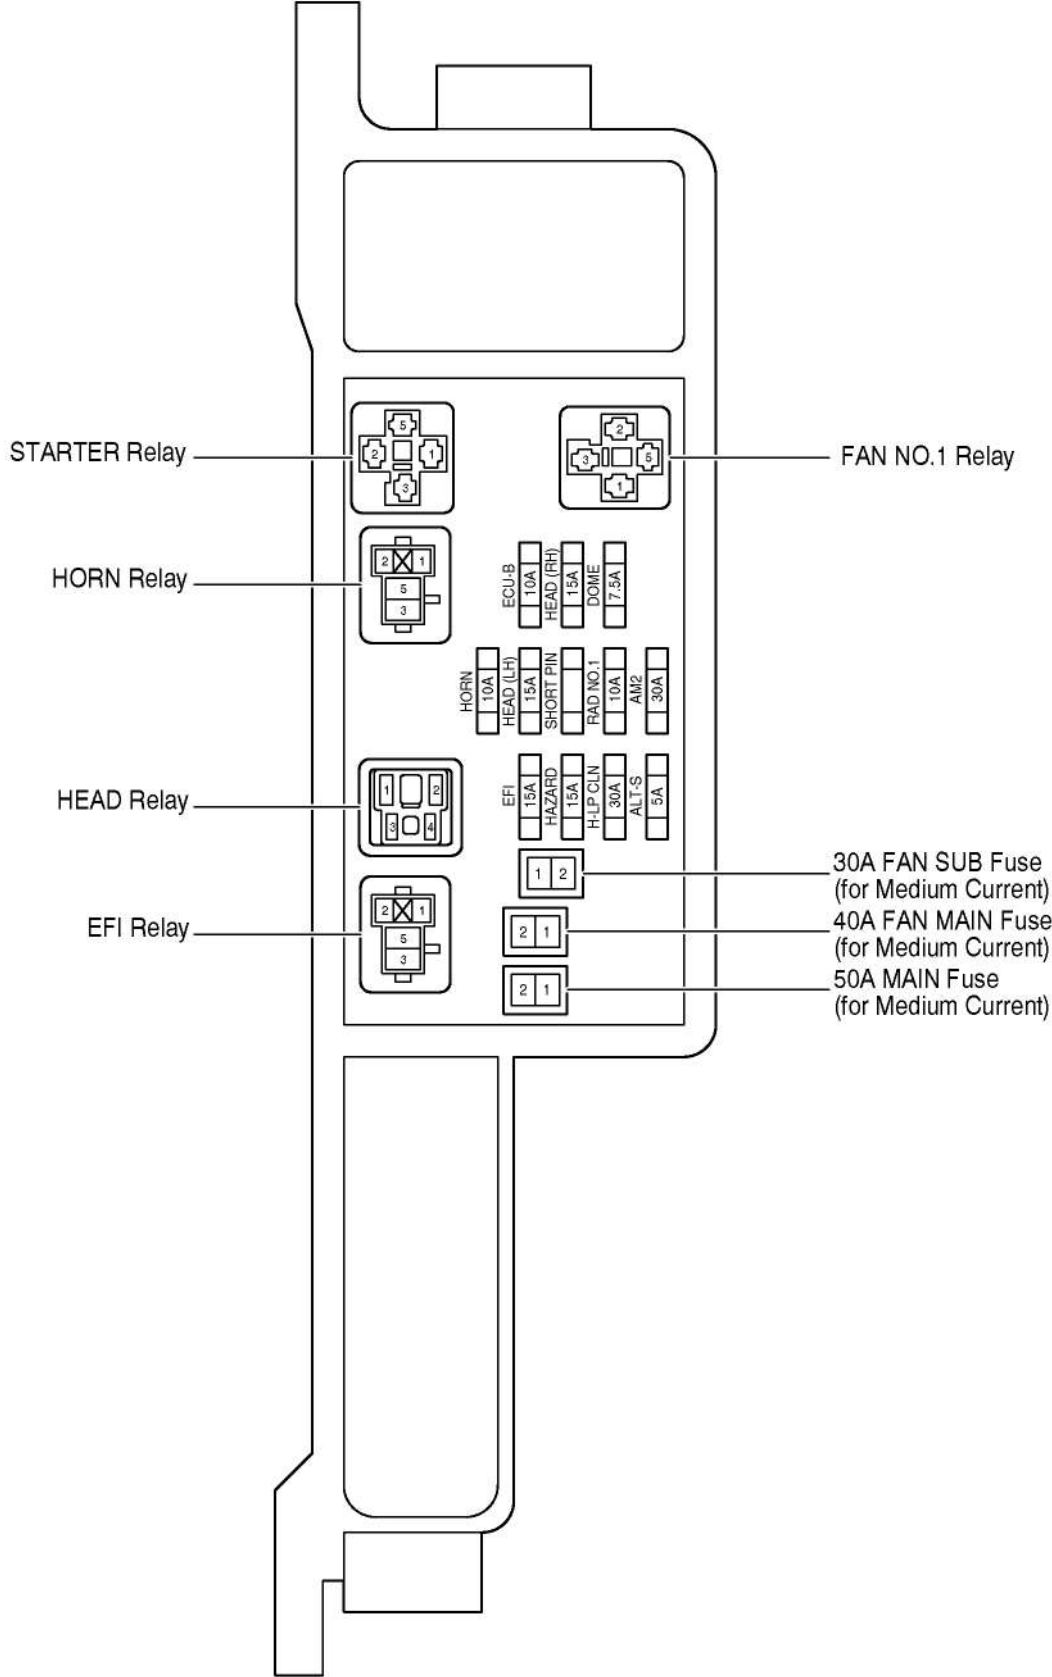


(Inner Circuit : See Page 34)

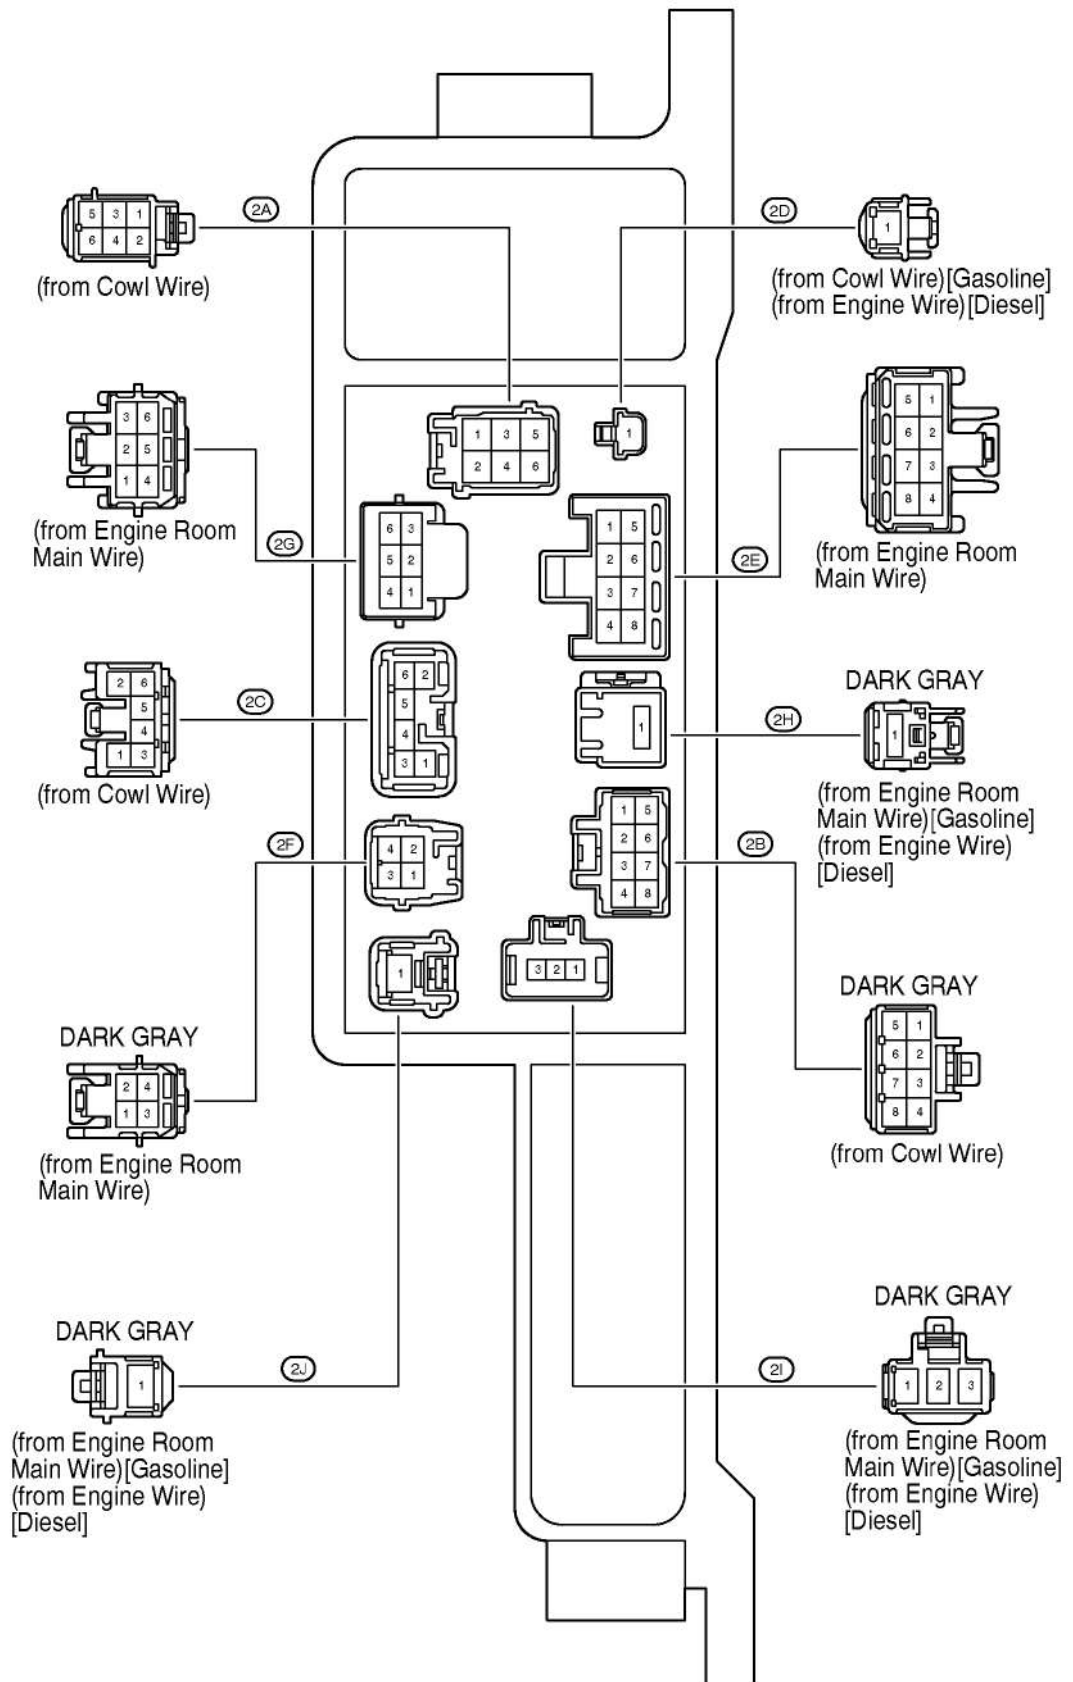


D RELAY LOCATIONS

 : Instrument Panel J/B Lower Finish Panel (See Page 21)

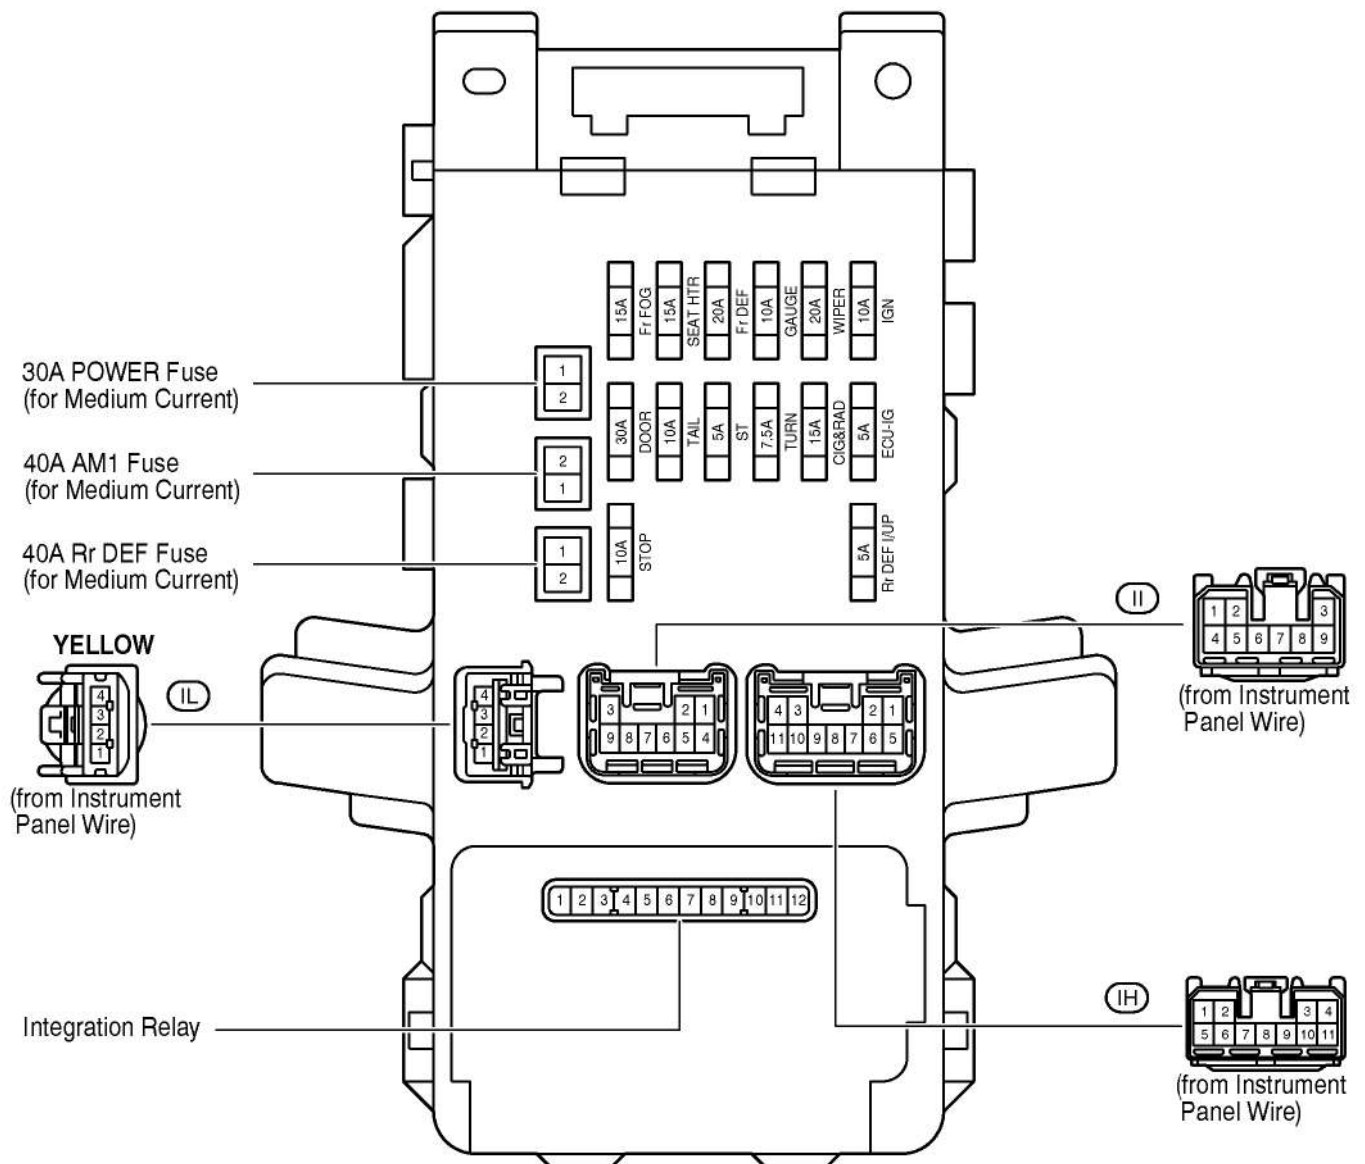


(Inner Circuit : See Page 35)

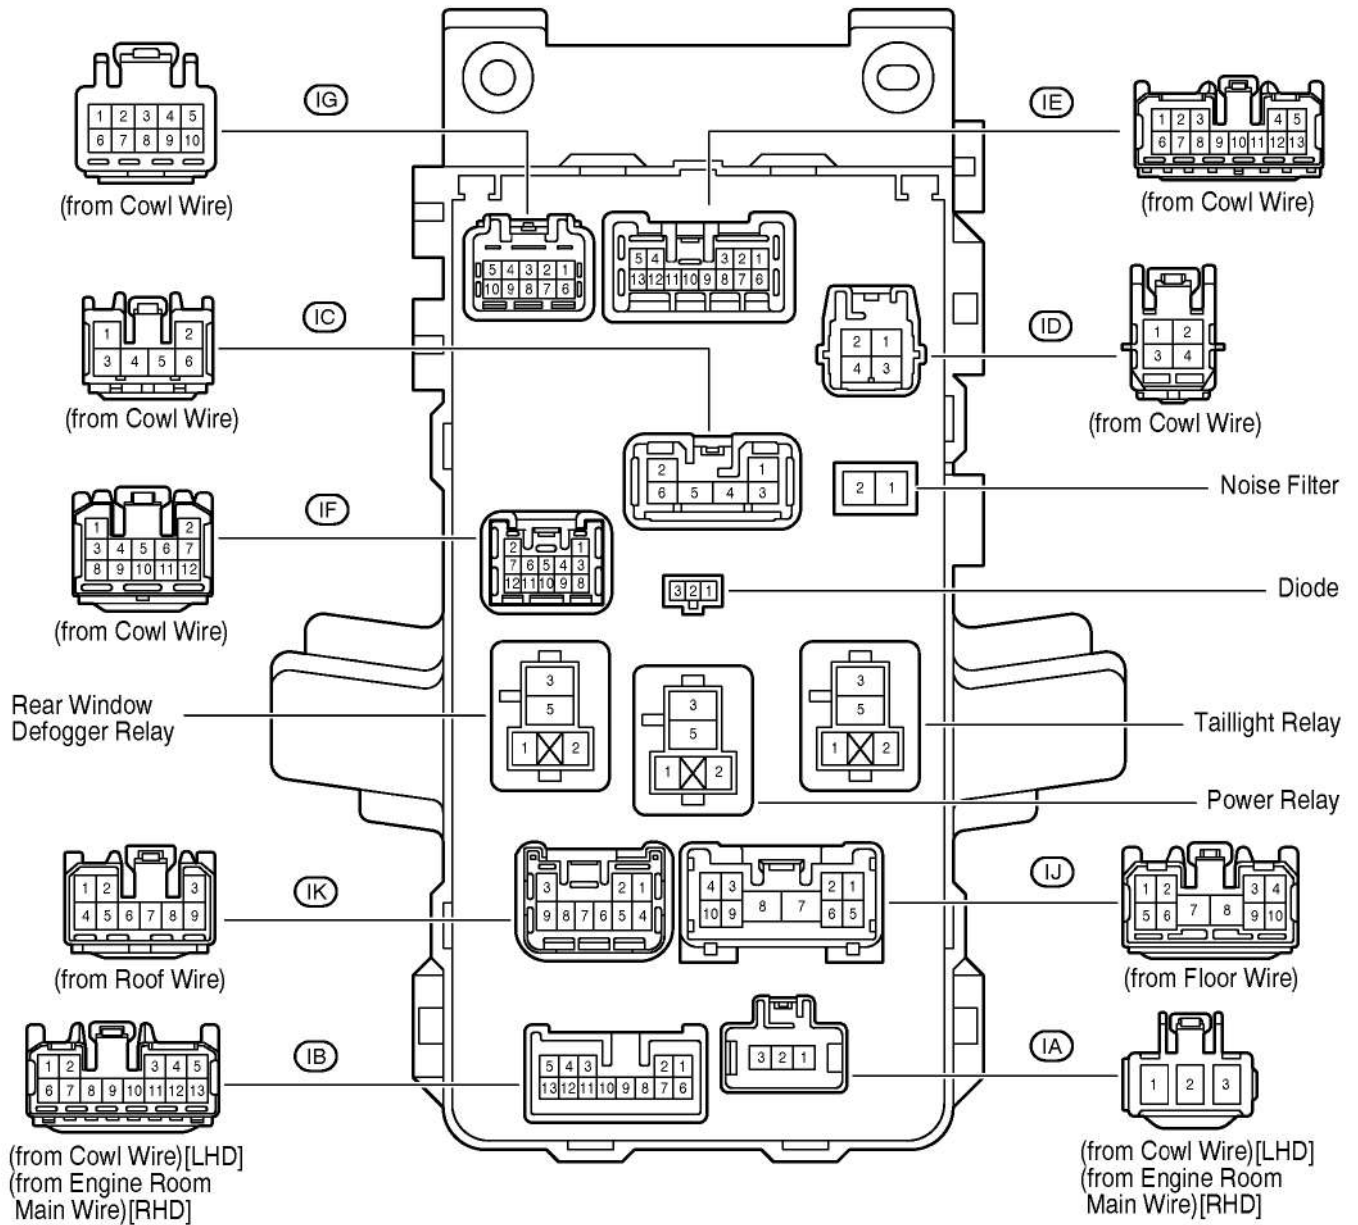


D RELAY LOCATIONS

 : Center J/B	LHD : Left Side of Heater Unit (See Page 21)
	RHD : Right Side of Heater Unit (See Page 21)

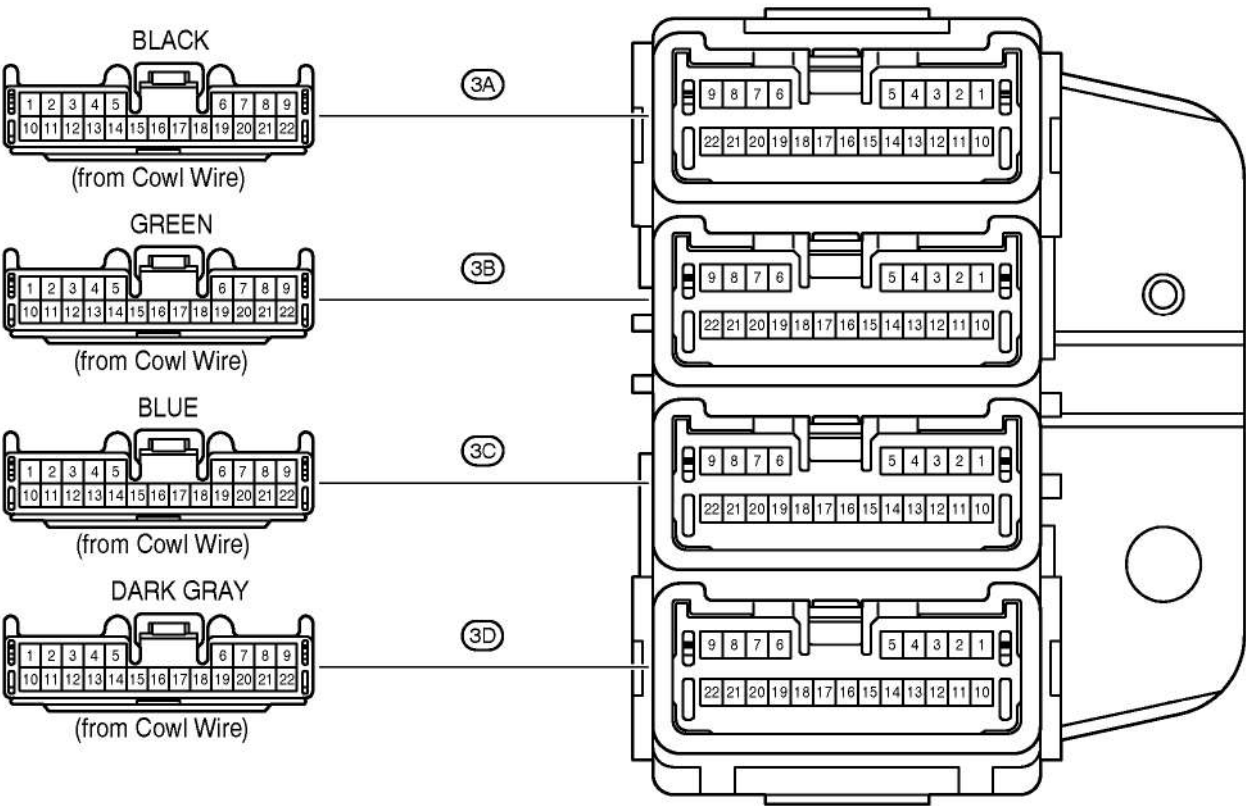


(Inner Circuit : See Page 36)

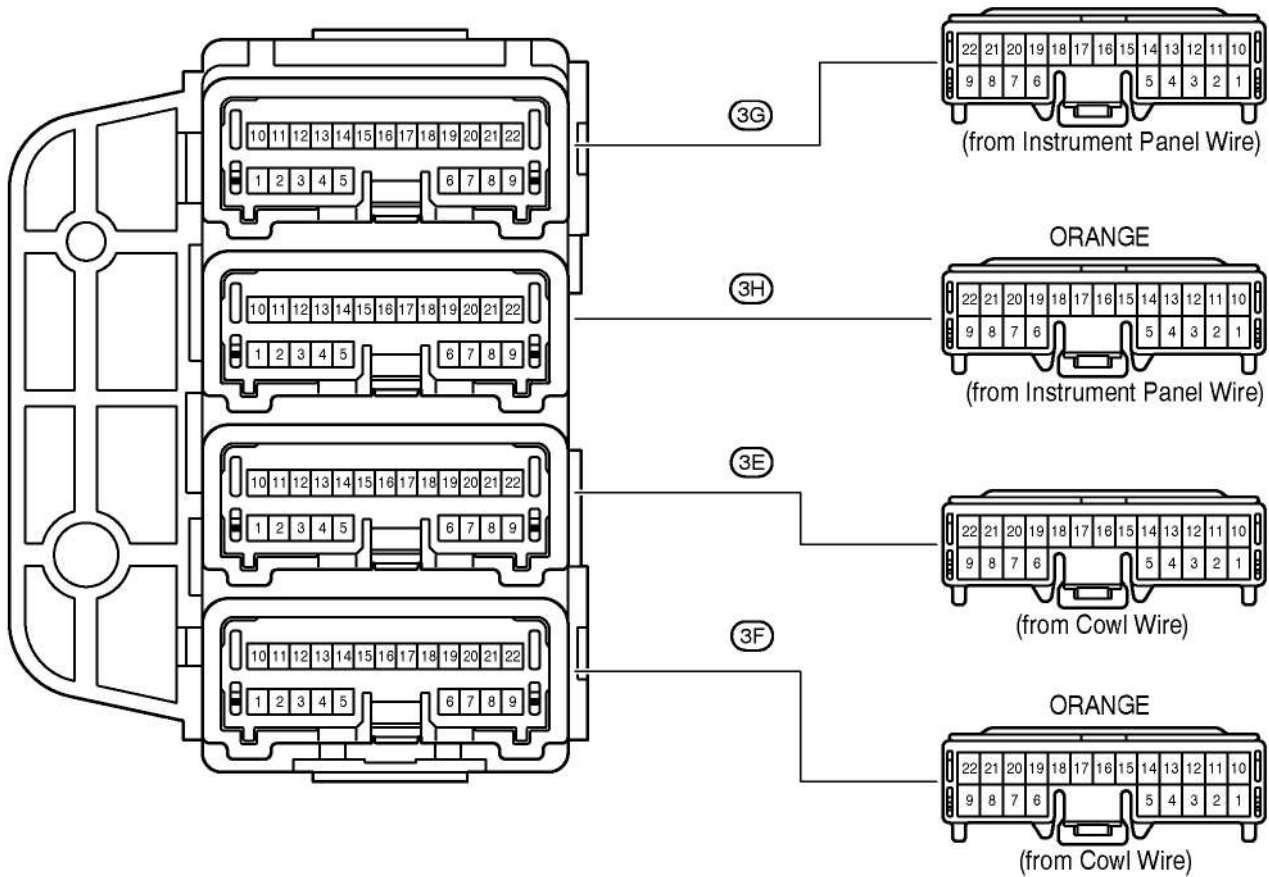


D RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

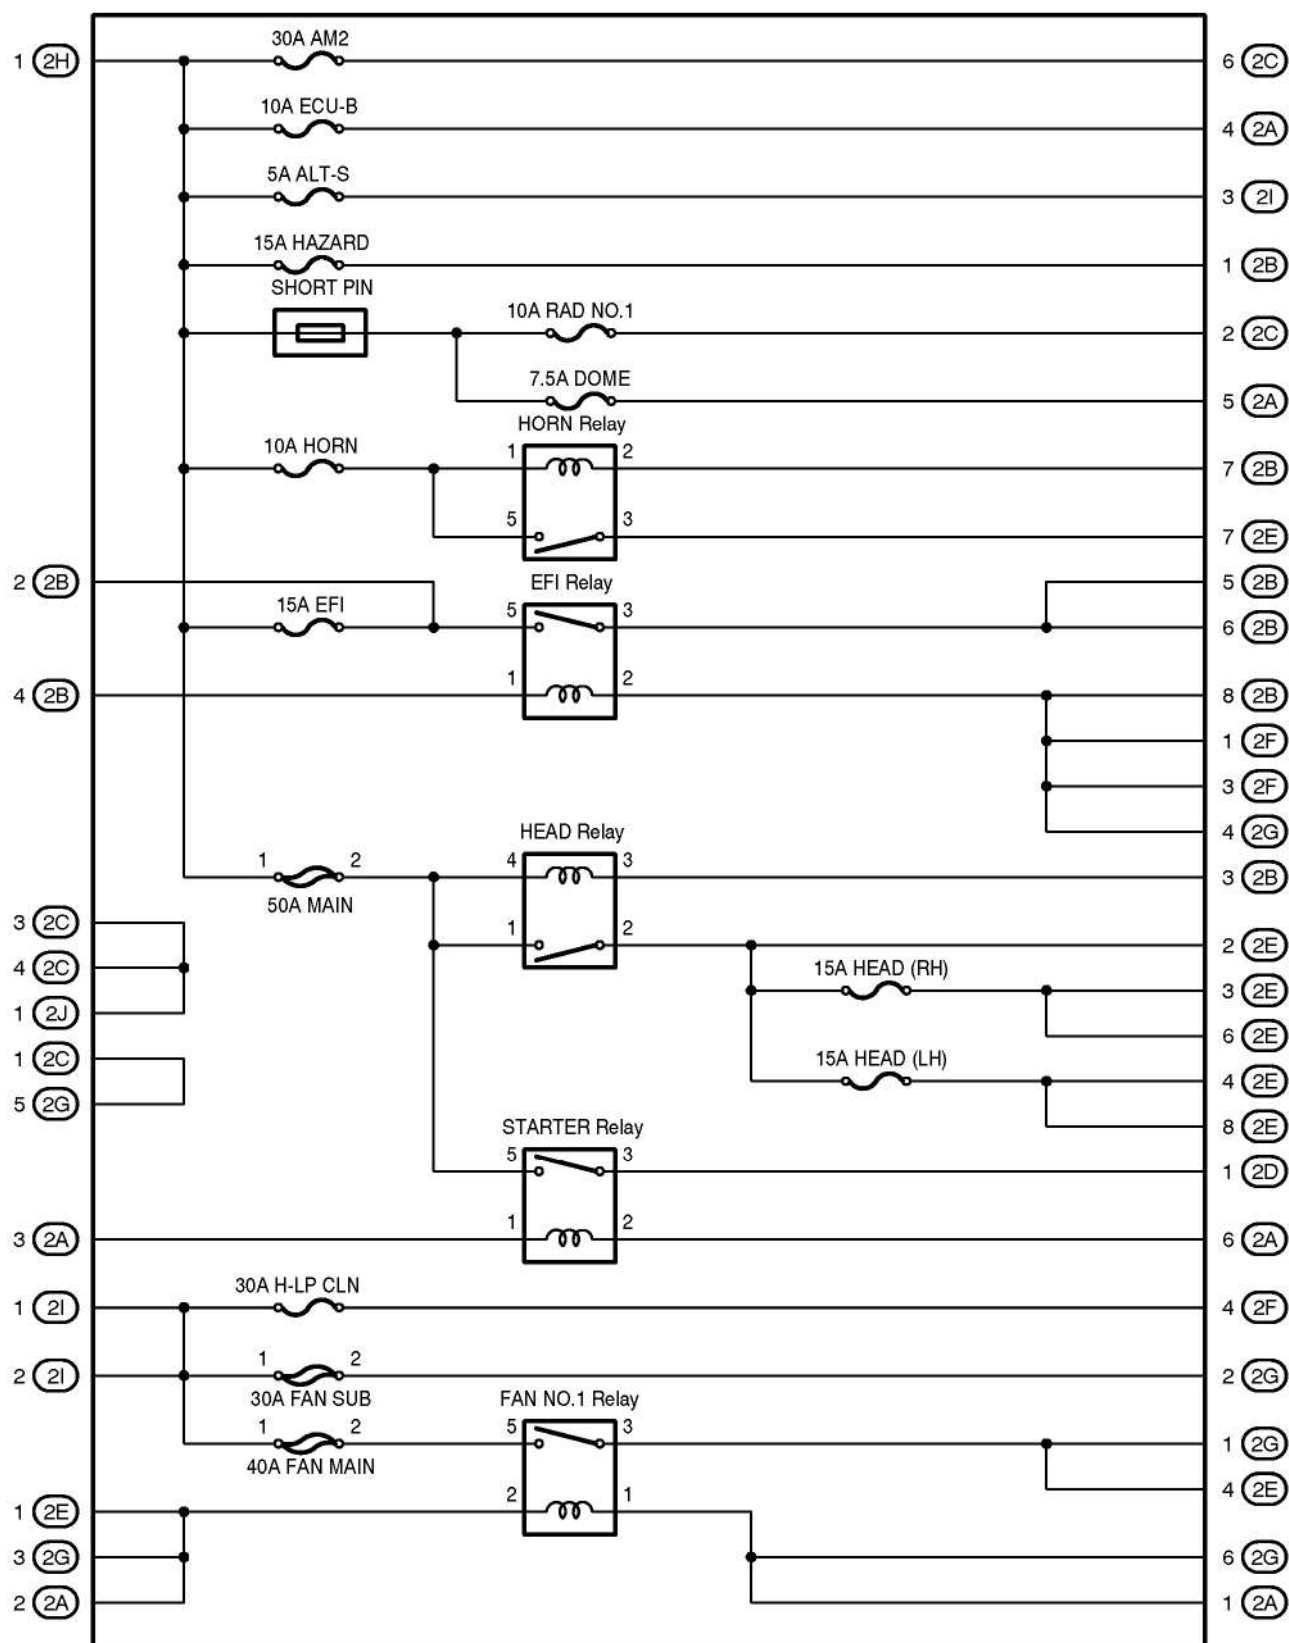

[Instrument Panel J/B Inner Circuit]

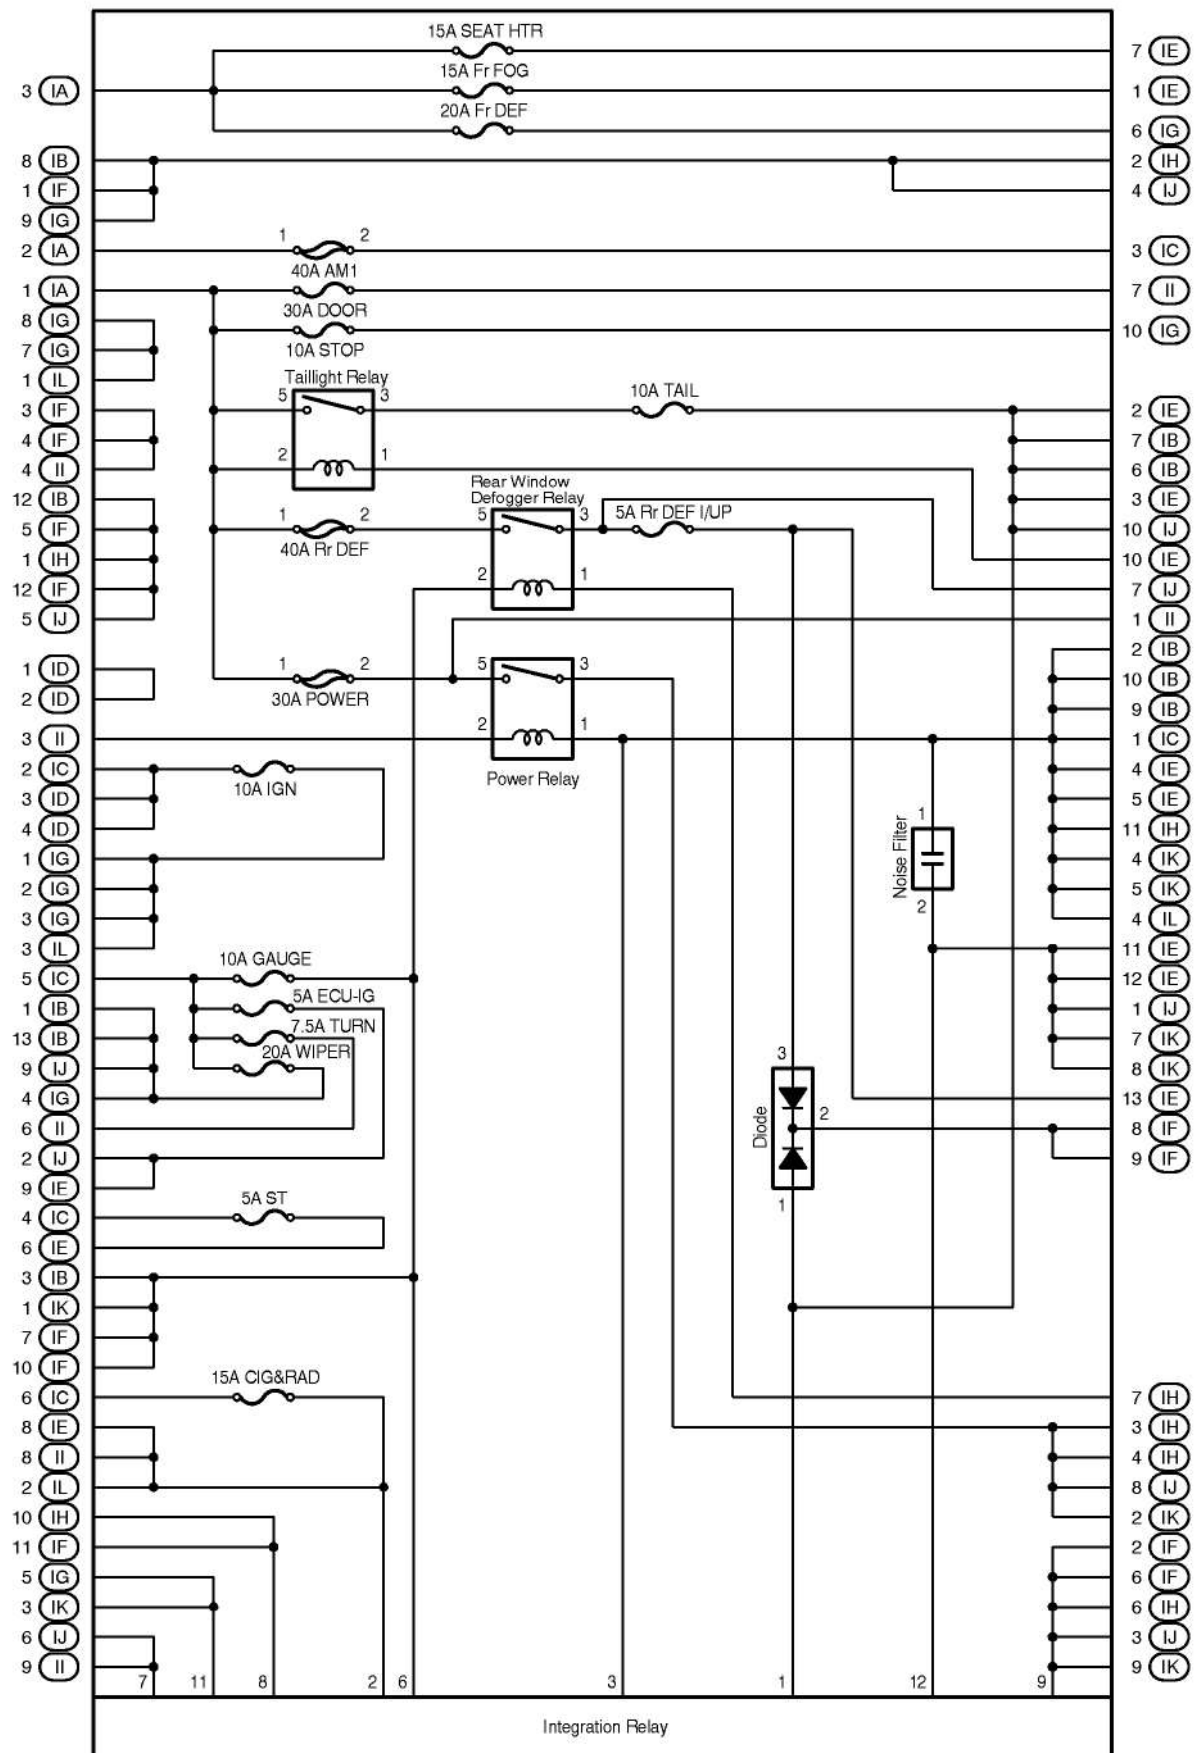

D RELAY LOCATIONS

[Center J/B Inner Circuit]

