


Daihatsu Rocky 1992 fuse box diagram

Fuse box diagram

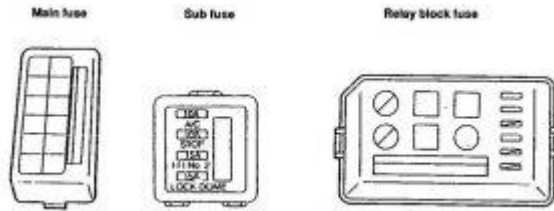

Daihatsu Rocky – fuse box diagram

Fuse	A	Function
HEADLAMP (AH)	15	Headlamp (RH), High-beam indicator
HEADLAMP (LH)	15	Headlamp (LH), EFI ECU
HEATER	30	Front heater relay. Rear heater relay
ENGINE	10	Alternator, key reminder buzzer
HORN	20	Horn relay, Hazzard warning switch
CIG	15	Cigar lighter. Radio, clock
WIPER	15	Front washer motor, Front wiper switch, Front wiper motor. Rear wiper motor, Rear wiper switch, Head lamp cleaner relay
DE FOG	15	Rear window defogger switch


TURN	7,5	Turn signal switch, Hazzard warnnng switch
GAUGE	7,5	Backup tamp switch, seat warning lamp, 4WD lamp, Brake luted lamp, CHG lamp, Oil pressure lamp, Fuel sender gauge, water temperature sender gauge, Tachometer, Voltmeter, Diagnosis lamp
TAIL RH	10	Light control rheostat switch. License tamp (RH), Rear side marker lamp (RH). taillamp (AH), Front side marker lamp (RH). Clearance lamp (RH), clock
TAIL LH	10	License lamp (LH),Rear side marker lamp (LH), Teillamp (LH). Front side marker lamp (LH), Clearance lamp (LH)
A/C	10	A/C switch
STOP	10	Stop lamp switch
EFI NO.2	15	Main relay, Injector relay, Fuel pump relay
LOCK DOME	15	Back door lock switch, Radio, Room lamp, clock
EFI NO. 1	15	Main relay, Alternator
INJECTOR	10	Injector relay

BACKUP

10

EFI Computer

Relay

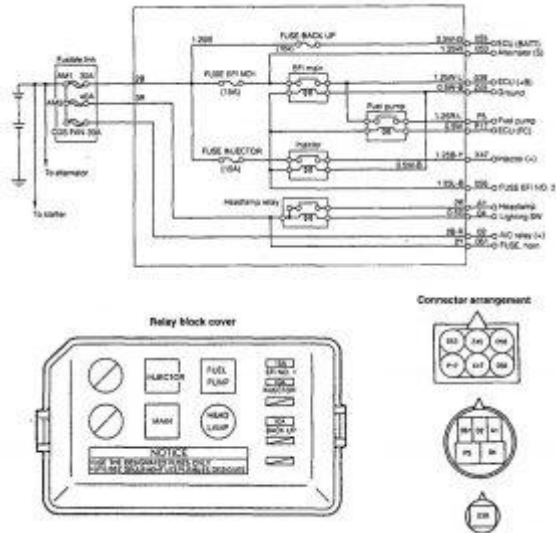

Daihatsu Rocky – fuse box diagram – relays