

Cadillac CTS 2016 fuse box diagram

Engine compartment fuse block

The underhood fuse block is on the passenger side of the engine compartment.



Cadillac CTS mk3 – fuse box – engine compartment


Fuse	Usage
1	Not Used
2	Not Used
3*	Passenger motorized seat belt
4	Body Control Module 6
5	Not Used
6	Driver Power Seat
7	Not Used
8*	Headlamp Washer Relay
9	Not Used
10	Not Used
11	Not Used
12	Not Used
13	Passenger Power Seat
14	Body Control Module 5
15	Front Wiper
16	Not Used
17*	Headlamp Washer
18	Not Used

19	Antilock Brake System Pump
20	Antilock Brake System Valve
21*	AIR Pump
22	Driver motorized seat belt
23	Wiper Control Relay
24	Wiper Speed Relay
25	Engine Control Module Relay
26*	AIR Pump Relay
27	Spare/Heated Seat 2
28	Body Control Module 1/Spare
29*	AFS AHL/Pedestrian Protection
30	Passenger Window Switch
31	Body Control Module 7
32	Sunroof
33	Not Used
34	AOS Display/MIL Ignition
35	Rear Electrical Center Ignition
36	Spare PT Fuse
37	Oxygen Sensor
38	Ignition Coils/Injectors
39	Ignition Coils/Injectors/Spare
40	Engine Control Module
41	Fuel Heater
42*	AIR Solenoid Relay
43	Washer
44	Not Used
45	Front Washer Relay
46	Not Used
47	Instrument Panel Body Ignition

48	Fuel System Control Module Ignition
49	Heated Steering Wheel
50*	Steering Column Lock
51*	Coolant Pump
52*	Coolant Pump Relay
53	Air Conditioning Compressor Clutch
54*	AIR Solenoid
55	Transmission Control Module/Spare
56*	Headlamp Low Relay
57	Headlamp High Relay
58	Starter
59	Starter Relay
60	Run/Crank Relay
61*	Vacuum Pump Relay
62	Air Conditioning Control Relay
63*	Adaptive Headlamp Leveling
64*	Left High Intensity Discharge Headlamp
65*	Right High Intensity Discharge Headlamp
66	Headlamp High Left/Right
67	Horn
68	Horn Relay
69	Cooling Fan
70	Aero Shutter
71	Transmission Control Module Ignition
72	Engine Control Module Ignition
73*	Brake Vacuum Pump
74	Not Used
* Optional	

Instrument Panel Fuse Block

The instrument panel fuse block is in the end of the driver side of the instrument panel.

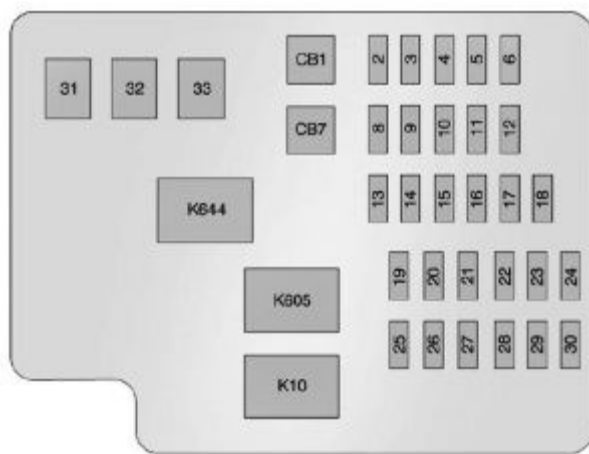

Cadillac CTS mk3 – fuse box – instrument panel

Mini Fuses	Usage
2	Motorized Cupholder
3	Electric Steering Column Lock
4	Data Link Connector
5	Heater, Ventilation, and Air Conditioning Control
6	Tilt and Telescoping Steering Column
8	Spare
9	Glove Box Release
10	Shunt
11	Body Control Module 1
12	Body Control Module 5
13	Spare
14	Spare
15	Spare
16	Spare
17	Spare
18	Spare
19	Spare
20	Spare
21	Spare
22	Sensing Diagnostic Module/Automatic Occupant Sensing
23	Radio/DVD/Heater, Ventilation, and Air Conditioning
24	Display
25	Heated Steering Wheel
26	Wireless Charger
27	Steering Wheel Switches
28	Spare
29	Visior
30	Spare

J Case Fuses	Usage
31	Spare
32	Spare
33	Front Heater, Ventilation, and Air Conditioning Blower


Circuit Breakers	Usage
CB1	Retained Accessory Power/Accessory Power Outlet Power
CB7	Spare

Relays	Usage
K10	Retained Accessory Power/Accessory
K605	Logistics
K644	Glove Box Release

Rear Compartment Fuse Block

The rear compartment fuse block is behind a cover on the driver side of the rear compartment.

The vehicle may not be equipped with all of the fuses, relays, and features shown.

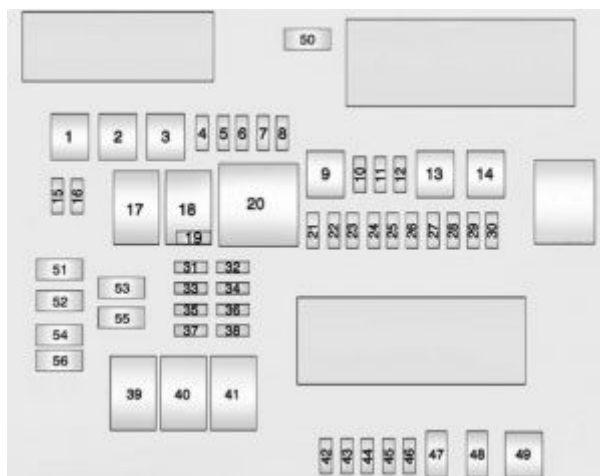

Cadillac CTS mk3 – fuse box – rear compartment

Number	Usage
1*	Electronic Limited Slip Differential/DC DC Transformer
2	Left Window
3	Body Control Module 8
4*	A/C Inverter
5	Passive Entry Passive Start Battery 1
6	Body Control Module 4
7	Heated Mirrors
8	Amplifier

9	Rear Window Defogger
10	Glass Break
11*	Trailer Connector
12	OnStar (If Equipped)
13	Right Window
14	Electric Parking Brake
15	Not Used
16	Trunk Release
17*	Run Relay
18*	Logistics Relay
19*	Logistics Fuse
20	Rear Window Defogger Relay
21	Mirror Window Module
22	Pedestrian Protection
23	Canister Vent
24	Body control module 2
25*	Rear Vision Camera
26*	Front Ventilated Seats
27*	SBZA/LDW/EOCM
28*	Trailer/Sunshade
29*	Rear Heated Seats
30*	Semi-Active Damping System
31*	Transfer Case Control Module/Electronic Limited Slip Differential
32	Theft Module/Universal Garage Door Opener/Rain Sensor
33*	UPA
34*	Radio/DVD
35	Spare
36*	Trailer
37	Fuel Pump/Fuel System Control Module
38	Not Used
39	Not Used
40	Not Used
41	Not Used
42*	Memory Seat Module
43	Body Control Module 3

44	Not Used
45	Battery Regulated Voltage Control
46	Engine Control Module Battery
47	Not Used
48	Not Used
49*	Trailer Module
50	Door Lock Security
51	Rear Closure Release
52	Not Used
53	Not Used
54	Door Lock Security
55	Not Used
56*	Fuel Door
* Optional	