


Oldsmobile Cutlass 1997 – 1999 fuse box diagram

Instrument Panel FusBe lock – Left

The instrument panel fuse blocks are located at each end of the instrument panel.

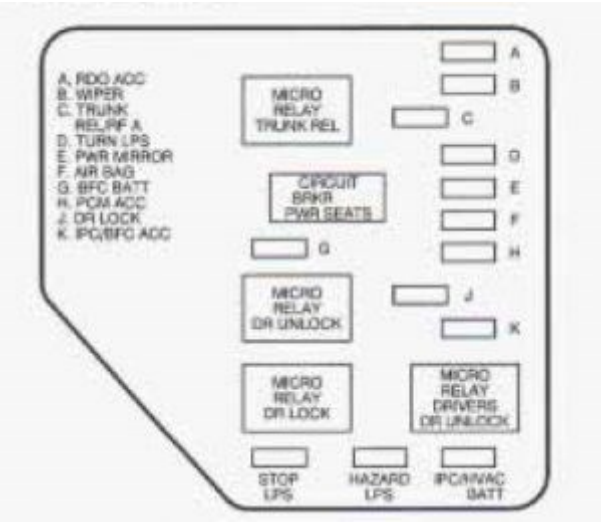


Oldsmobile Cutlass – fuse box – instrument panel

(left)

Fuse	Usage
A	Radio
B	Wipers
C	Trunk Release and Remote Lock Control
D	Turn Signals
E	Power Mirrors
F	Air Bag
G	Body Function Control Module
H	Powertrain Control Module
J	Door Locks
K	Body Function Control Module, Cluster
STOP LPS	Stoplamps
HAZARD LPS	Hazard Lamps
IPCENAC BATT	Cluster, Climate Control
MICRO RELAY TRUNK REL	Remote Trunk Release

CIRCUIT BRKR PWR SEATS	Power Seats
MICRO RELAY DR UNLOCK	Door Locks
MICRO RELAY DR UNLOCK	Door Locks
MICRO RELAY DRIVERS DR UNLOCK	Not Used

Instrument Panel Fuse Block – Right

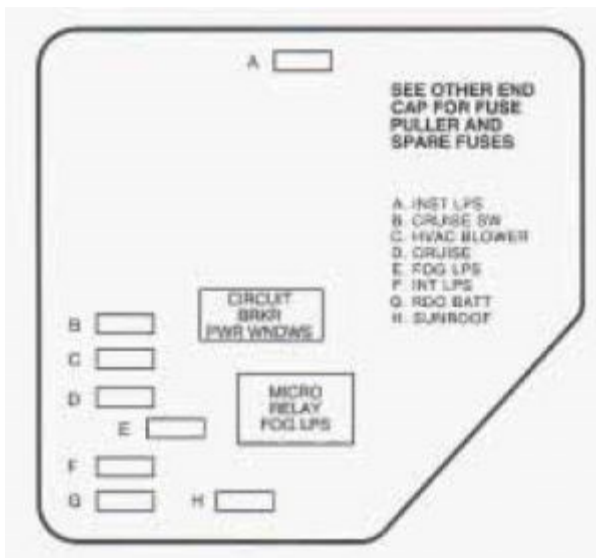


Oldsmobile Cutlass – fuse box – instrument panel

(right)

Fuse	Usage
A	Instrument Panel Lights, Dimmer
B	Cruise Control
C	Climate Control System
D	Cruise Control
E	Fog Lamps
F	Interior Lamps, Body Function Control Module
G	Radio
H	Sunroof
CIRCUIT BRKR WINDOWS	Power Windows
MICRO RELAY FOG LPS	Fog Lamps

Engine Compartment Fuse Block

The engine compartment fuse block is located on the driver's side of the engine compartment, near the air cleaner.

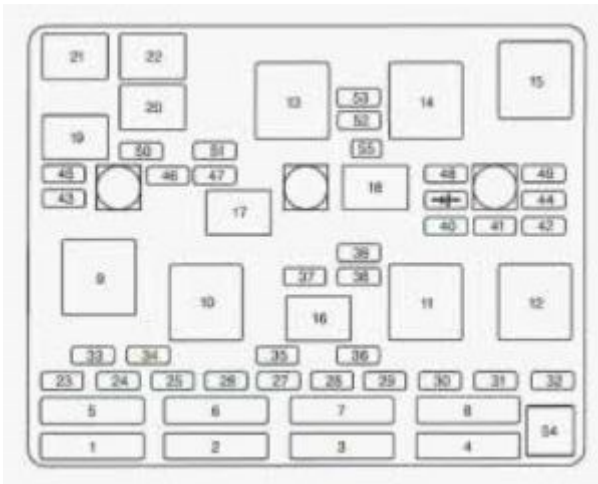

Oldsmobile Cutlass – fuse box – engine compartment

Maxi Fuse	Usage
1	Ignition Switch
2	Left-Hand Electrical Center-Power Seats, Power Mirrors, Door Locks, Trunk Release and Remote Lock Control
3	Left-Hand Electrical Center-Stoplamps, Hazard Lamps, Body Function Control Module, Cluster, Climate Control System
4	Right-hand Electrical Center-Fog Lamps, Radio, Body Function Control Module, Interior Lamps
5	Ignition Switch
6	Not Used
7	Anti-Lock Brakes
8	Cooling Fans

Mini Fuse	Usage
9	Rear Defog
10	Not Used
11	Anti-Lock Brakes
12	Cooling Fan
13	HVAC Blower (Climate Control
14	Cooling Fans

15	Cooling Fans
----	--------------

Micro Fuse	Usage
16	Air Conditioning Compressor
17	Not Used
18	Fuel Pump
19	Automatic Light Control
20	Automatic Light Control
21	Horn
22	Daytime Running Lamps

Mini Fuse	Usage
22	Spare Fuses
23	Spare Fuses
24	Spare Fuses
25	Spare Fuses
26	Spare Fuses
27	Spare Fuses
28	Spare Fuses
29	Spare Fuses
30	Spare Fuses
31	Spare Fuses
32	Spare Fuses
33	Rear Defog
34	Accessory Power Outlets, Cigar Lighter
35	Anti-Lock Brakes

36	Anti-Lock Brakes
37	Air Conditioning Compressor, Body Function Control Module
38	Automatic Transaxle
39	Powertrain Control Module, Ignition
40	Anti-Lock Brakes
41	Ignition System
42	Back-up Lamps, Brake-Transaxle Shift Interlock
43	Horn
44	Powertrain Control Module
45	Parking Lamps
46	Rear Defog, Daytime Running Lamps, Climate Control System
47	Canister Purge Valve, Powertrain Control Module, Exhaust Gas Recirculation, Heated O2 Sensor
48	Fuel Pump, Injectors
49	Generator
50	Right-Hand Headlamp
51	Left-Hand Headlamp
52	Cooling Fan
53	WAC Blower (Climate Control)
54	Fuse Puller for Mini-Fuses
55	Tach Test Point for Diagnostic Testing