


Cadillac SRX 2007 fuse box diagram

Underhood Fuse Block

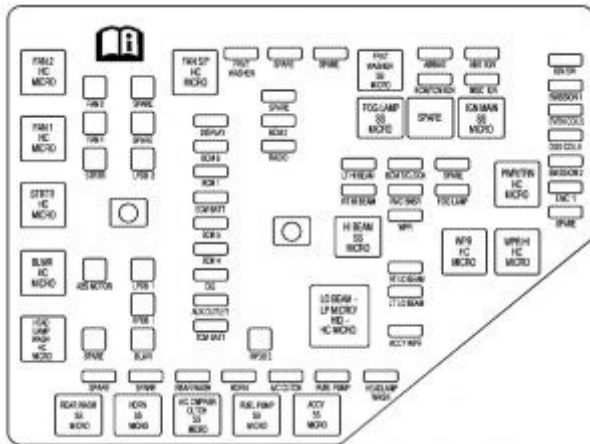

Cadillac SRX mk1 – fuse box – engine

compartment

The underhood fuse block is located in the engine compartment on the passenger's side of the vehicle.

Relays	Usage
FAN 2 HC MICRO	Right Side Engine Cooling Fan Motors
FAN S/P HC MICRO	Series/Parallel Engine Cooling Fan
FRNT WASH SS MICRO	Left Side Engine Cooling Fan Motors
FOG LAMP SS MICRO	Front Fog Lamps
SPARE	Spare
IGN MAIN SS MICRO	Ignition Switch (ON)
STRTR HC MICRO	Starter Solenoid
PWR/TRN HC MICRO	Powertrain/Engine Control Module
HI BEAM SS MICRO	High-Beam Headlamps
BLWR HC MICRO	High-Beam Headlamps
BLWR HC MICRO	Front Blower Motor Assembly
WPR HC MICRO	Windshield Wiper System – On/Off
WPR HI HC MICRO	Windshield Wiper System – Low/High
HEAD LAMP WASH HC MICRO	Headlamp Washer Pump (Option)
LO BEAM-LP MICRO/HID-HC MICRO	Low-Beam Headlamps
REAR WASH SS MICRO	Rear Washer Pump
HORN SS MICRO	Horn
A/C CMPSR CLTCH SS MICRO	Air Conditioning Compressor Clutch
FUEL PUMP SS MICRO	Fuel Pump

ACCY SS MICRO	Accessory Power (Rear Wipers, Inside Rearview Mirror)
---------------	---

J Case Fuses	Usage
FAN 2	Right Cooling Fan Motor
SPARE	Spare
FAN 1	Left Cooling Fan Motor
SPARE	Spare
STRTR	Starter Solenoid
LPDB 2	LRPDB (Left Side Rear Power Distribution Box)
ABS MOTOR	Anti-lock Brake System Module
LPDB 1	LRPDB (Left Side Rear Power Distribution Box)
RPDB 1	RRPDB (Right Side Rear Power Distribution Box)
SPARE	Spare
BLWR	Front Blower Motor Assembly
RPDB 2	RRPDB (Right Side Rear Power Distribution Box)

Mini Fuses	Usage
FRNT WASHER	Front Washer Pump
SPARE	Spare
SPARE	Spare
AIRBAG	Sensing Diagnostic Module (SDM), Occupant Sensor Display, Instrument Cluster
ABS IGN	Anti-lock Braking System Ignition, Variable Effort Steering
IGN SW	Ignition Switch, Immobilizer Module
ECM/TCM IGN	Engine Control Module/Transmission Control Module Ignition Power
MISC IGN	Air Quality Sensor
EMISSION 1	Pre O2 Sensors, Cam Phasor (V6), Canister Purge (V6), Intake Manifold Tuning Valve (V6)
SPARE	Spare

DISPLAY	Instrument Panel Cluster, Climate Control Module, Front Blower Relay, Diagnostic Link Connector
BCM 2	LED Instrument Panel Dimming, Overhead Lamps, Vanity Lamps
EVEN COILS	Even Ignition Coils, Even Fuel Injectors
BCM 6	Right Side Rear Stoplamp, Turn Lamps, Key Capture Solenoid
RADIO	Radio
ODD COILS	Odd Ignition Coils, Odd Fuel Injectors
BCM 1	Body Control Module (BCM) Power
LT HI BEAM	Left Side High-Beam Headlamp
BCM 7/CLOCK	Switch Dimming, Analog Clock
SPARE	Spare
EMISSION 2	Cooling Fan Relays, Air Conditioning Clutch Relay, Post O2 Sensors, Mass Airflow Sensor, Canister Purge (V8)
ECM BATT	Engine Control Module (ECM)
RT HI BEAM	Right Side High-Beam Headlamp
RVC SNSR	Battery Regulated Voltage Control Sense
FOG LAMP	Front Fog Lamps
ECM 1	Engine Control Module (ECM)
BCM 5	Left Side Front Turn Lamps, Rear Stoplamps, Turn Lamps
WPR	Windshield Wiper Motor
SPARE	Spare
BCM 4	Center High-Mounted Stoplamp (CHMSL), Back-up Lamps
CIG	Instrument Panel Accessory Power Outlet (Cigarette Lighter)
RT LO BEAM	Right Side Low-Beam Headlamp
AUX OUTLET	Center Console Accessory Power Outlet
LT LO BEAM	Left Side Low-Beam Headlamp
TCM BATT	Transmission Control Module (TCM)
ACCY WPR	Rear Wiper Motor & Switch, Inside Rearview Mirror
SPARE	Spare
SPARE	Spare
REAR WASH	Rear Washer Pump
HORN	Horn Assembly
A/C CLTCH	Air Conditioning Compressor Clutch
FUEL PUMP	Fuel Pump

Circuit Breakers	Usage
HEADLAMP WASH	Headlamp Washer Motor (Optional)

Rear Underseat Fuse Block (Left Side)

The driver's side rear fuse block is located under the rear seat on the driver's side of the vehicle. The carpet must be lifted up to access the rear fuse block.



Cadillac SRX mk1 – fuse box rear compartment

(left side)

To access the fuse block, push in the two tabs located at each end of the fuse block cover. Then lift the cover off.

Relays	Usage
STOP RELAY MINI	Not Used
ELC RELAY MINI	Electronic Level Control (ELC) Compressor Motor
PRK LAMP RELAY MICRO	License Lamps
REAR FOG LAMP RLY MICRO	Not Used
SPARE	Spare
R POSITION RELAY MICRO	Not Used
LH POS PRK LAMP RELAY MICRO	Front & Rear Park Lamps
SPARE	Not Used

Mini Fuses	Usage
SWC	Steering Wheel Controls
RSA/RSE	Rear Seat Entertainment, Rear Seat Audio
ONSTAR TV/XM	OnStar® Module, XM Radio
3RD ROW SW/RFA	Flip Fold Seat Switches, Remote Keyless Entry System Module
AMP	Audio Amplifier
RSM	Rear Seat Module, Flip/Fold Motors
DRIVER DR MOD	Driver Door Module (Locks, Outside Rearview Mirror, Window Switches)
STOP LAMPS	Not Used
MARKER LAMP	License Lamps
LH PRK POS LAMPS	Left Side Taillamp, Left Side Front Park Lamps, Sidemarker Lamps
RH PRK LAMPS	Right Side Taillamp, Right Side Front Park Lamps, Sidemarker Lamps
TRLR PRK LAMPS	Trailer Park Lamps

SPARE	Spare
SPARE	Spare
SPARE	Spare
MEMORY RPA	Memory Seat Module, Ultrasonic Rear Parking Assist (URPA) Module
APO	Rear Auxiliary Power Outlet
PRK LAMP LH POS	Park Lamp Relay
REAR FOG LAMP	Not Used
RH POS LAMP	Right Side Taillamp

J Case	Usage
SPARE	Spare
ELC	Electronic Level Control (ELC) Compressor

Circuit Breakers	Usage
PWR WNDWS	Power Window Motors
Misc.	Usage
FUSE PULLER	Fuse Puller
JOINT CONNECTOR	Joint Connector

Rear Underseat Fuse Block (Right Side)

The passenger's side rear fuse block is located under the rear seat on the passenger's side of the vehicle. The carpet must be lifted up to access the rear fuse block.



Cadillac SRX mk1 – fuse box – rear compartment (right side)

To access the fuse block, push in the two tabs located at each end of the fuse block cover. Then lift the cover off.

Relays	Usage
REAR DEFOG RELAY MINI	Rear Window Defogger
SPARE	Spare
SPARE	Spare
UNLOCK RELAY MICRO	Rear Door Locks
SPARE	Spare
LCK RELAY MICRO	Rear Door Locks
RUN RELAY HC MICRO	Rear Air Conditioning Blower Motor, Climate Control Ignition
SPARE	Spare

Mini Fuses	Usage
WPR ISRVM VICS	Rear Wiper Switch, Inside Rearview Mirror
THEFT UGDO/RFA	Garage Door Opener, Keyless Entry System
SPARE	Spare
CANISTER VENT	Canister Vent Solenoid
PLG	Power Liftgate Module
REAR DEFOG	Rear Window Defogger
SPARE	Spare
BCM 3	Hush Panel Lamps, Overhead Courtesy Lamp Assembly, Right Side Front Turn Lamp
REAR A/C	Rear Air Conditioning System
RUN	Climate Control Module
HDT STR WHL	Not Used
SPARE	Spare
SPARE	Spare
SPARE	Spare
DR LCK	Rear Door Locks
PDM	Passenger Door Module (Locks, Outside Mirror, Window Switches)
SIR	Sensing Diagnostic Module (SDM), Occupant Sensor, Roll-over Sensor
SPARE	Spare
MRRTD	Suspension Module
ELC	Electronic Leveling Compressor (ELC) Exhaust Solenoid, ELC Relay

J Case	Usage
SUNROOF MOD	Power Sunroof Module
PWR LIFT GATE	Power Liftgate Motors

Circuit Breakers	Usage
PWR SEATS	Power Seat Motors

Misc.	Usage
-------	-------

SUNROOF MOD	Power Sunroof Module
PWR LIFT GATE	Power Liftgate Motors