


Lincoln MKS 2008 – 2012 fuse box diagram

Passenger compartment fuse panel

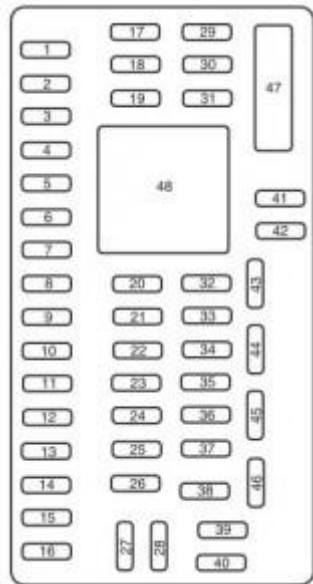

Lincoln MKS – fuse box diagram – passenger compartment

No.	A	Protected Components
1	30	Right rear window
2	15	'09: Brake on/off switch
3	15	Driver seat control/lumbar
4	30	Right front window
5	10	Brake shift interlock (BSI), keypad illumination ('09-'10)
6	20	Turn signals, hazards
7	10	Low beam headlamps (left)


8	10	Low beam headlamps (right)
9	15	Courtesy lamps
10	15	Illumination switch, Puddle lamps
11	10	All Wheel Drive (AWD)
12	7.5	'09-'10: Passive Entry/Passive Start (PEPS) module '11-'12: Intelligent access (IA) module
13	5	Memory/seats/mirrors/steering column, keypad, Driver zone module
14	10	MGM, Center information display, SYNC, GPS
15	10	Climate control
16	15	Electronic finish panel (EFP), Ambient lighting module ('10-'12)
17	20	Global windows, door locks and trunk release (less PEPS ('11-'12))
18	20	Dual heated rear seat module (DHRSM) (battery)
19	25	Not used (spare)
20	15	Diagnostic connector
21	15	Fog lamps
22	15	Park lamps, License lamps

23	15	High beam headlamps
24	20	Horn
25	10	Demand lamps
26	10	Cluster/Heads up display
27	20	'09-'10: Passive Entry/Passive Start (PEPS) module, Ignition Switch '11-'12: Intelligent access (IA) module
28	5	'09-'10: Radio mute, Radio start signal
29	5	Instrument panel cluster (run/start)
30	5	Not used (spare)
31	10	Auto high beam controller, Heads-up display
32	10	Restraint control module
33	10	Adaptive Lighting
34	5	IVD ('09), AdvanceTrac ('10-'12), Adaptive cruise control module, Electronic power assist steering module
35	10	DFHSM ('09), All wheel drive, Dual heated rear seat module, Absolute steering angle switch, Park aid (run/start) module, Blind spot information system ('11-'12)
36	5	'09-'10: Passive anti-theft system (PATS) module

37	10	Not used (spare)
38	20	Amplifier (THX or 6 channel)
39	20	Radio/Navigation
40	20	Amplifier (THX or 2 channel)
41	15	Delayed Accessory
42	10	Not used (spare)
43	10	Rear window defroster relay, Rain sensor ('10-'12)
44	10	Not used (spare)
45	5	Wiper relay and module, Blower relay
46	7.5	Occupant classification sensor (OCS), Electronic finish panel, Climate control
47	30	Circuit Breaker: Not used
Relay		
48	Delayed accessory	


Engine Compartment Fuse Box

2009

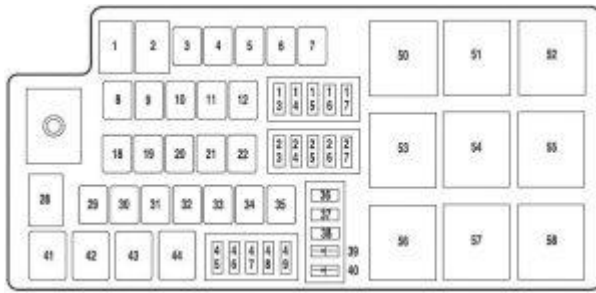

Lincoln MKS – fuse box diagram – engine compartment

2010-2012

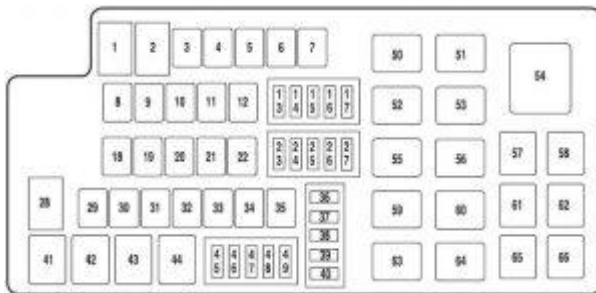

Lincoln MKS – fuse box diagram – engine compartment

No.	A	Protected Components
1	80	Passenger compartment fuse panel power
2	80	Passenger compartment fuse panel power
3	—	Not used
4	30	Front wipers
5	30	Passenger power seat
6	20	Cigar lighter
7	—	Not used

8	30	Moonroof
9	40	Anti-lock Brake System (ABS) pump
10	30	Starter relay
11	30	Powertrain Control Module (PCM) relay
12	20	ABS valve
13	15	Adapt cruise
14	10	'10-'12: Brake on/off switch
15	15	Auto high beam
16	20	Left high intensity discharge (HID) headlamp
17	10	Alternator sense
18	—	Not used
19	20	Power point
20	40	'09-'10: Rear window defroster
	50	'11-'12: Rear window defroster
21	20	Console power point

22	30	Front heated/cooled seats
23	7.5	'09-'10: PCM Keep alive power, Canister vent
	10	'11-'12: PCM Keep alive power, Canister vent
24	10	A/C clutch relay
25	20	Right high intensity discharge (HID) headlamp
26	10	Backup relay
27	15	Fuel pump
28	60	3.7L: Cooling fan
	80	3.5L: Cooling fan
29	30	Left rear window
30	30	Left front window
31	—	Not used
32	30	Driver seat module
33	30	'09-'10: Passive entry/passive start (PEPS) run/start relay
	40	'11-'12: Intelligent access (IA) run/start relay

34	—	Not used
35	40	Front A/C blower motor
36	20	Passenger compartment fuse panel run/start
37	10	Powertrain Control Module (PCM) run/start
38	5	Delayed Accessory
45	—	Not used
46	15	Vehicle power 2 (PCM), Vehicle power 3 (PCM)
47	15	3.7L ('09-'11): PCM Vehicle power 1
	20	3.7L ('12) and 3.5L: PCM Vehicle power 1
48	15	Vehicle power 4 – Ignition coils
49	10	Heated mirrors
Diode		
39	Fuel pump (only 3.7L)	
40	One-touch integrated start (OTIS)	
Relay		

41	A/C clutch
42	Fuel pump
43	Backup
44	Auto high beam
50	'09: PCM '10-'12: Blower motor
51	'09: Blower motor '10-'12: Fog deactivation
52	Starter
53	'09: Rear window defroster '10-'12: Adaptive cruise control (stop lamps)
54	'09: Front wiper
55	'09: Fog deactivation '10-'12: Front wiper
56	'09: On/start '10-'12: HBL
57	'09: Adapt cruise (stop lamps)
58	Not used

59	'10-'12: Not used
60	'10-'12: Not used
61	'10-'12: Not used
62	'10-'12: Not used
63	'10-'12: Run/start
64	'10-'12: Powertrain Control Module (PCM)
65	'10-'12: Not used
66	'10-'12: Not used