 


Vauxhall Agila (from July 2006 – 2008) fuse box diagram

Fuse box in passenger compartment

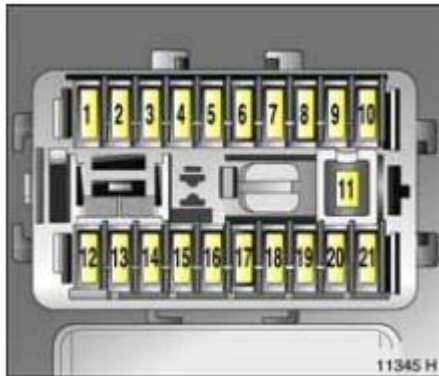


Vauxhall Agila mk1 – fuse box – passenger

compartment

Number	Circuit	Ampere rating [A]
1	Fog tail lights	10
2	Brake light	15
3	Electronic immobiliser, infotainment system, courtesy light	15
4	Heated rear window	15
5	Central locking system	20
6	Hazard warning lights	10
7	Air conditioning system	10
8	Tail light	10

9	Courtesy light	15
10	Central locking system, instruments, exterior mirrors	15
11	Electric windows	30
12	Airbag system	15
13	3 Immobilizer, power steering (EPS), instruments, air conditioning system	15
14	Central locking system, turn signal lights, reverse lights, headlight range adjustment	10
15	Instruments	10
16	6 Windscreen wipers, windscreen washer system	15
17	ABS	10
18	Engine electronics	15
19	Cigarette lighter, accessory socket	15
20	Central locking system, exterior mirrors, infotainment system, instruments, control indicators, cigarette lighter, accessory socket.	15
21	Heater fan, heated rear window, air conditioning system	25

 Engine compartment fuse box below windscreen

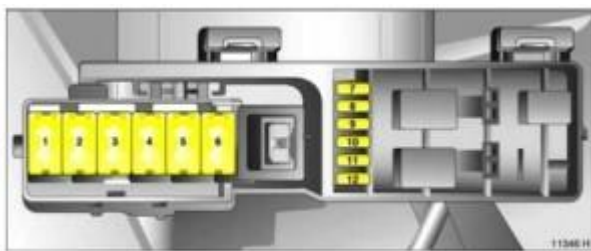


Vauxhall Agila mk1 – fuse box – engine

compartment below windscreen

Numer	Circuit	Ampere rating [A]
1	ABS	60
2	Cooling fan	30
3	Power steering (EPS)	30
4	Starter	60
5	Lighting, engine, infotainment system	60
6	Alternator: petrol engine	80
7	Dipped beam (right), main beam (right)	15
8	Instruments, control indicators, dipped beam (left), main beam (left)	15
9	Radiator fan, fuel injection system	20
	Radiator fan, fuel injection system: petrol engine	30
10	Fog lights	15

11	Horn	15
12	—	—

 Engine compartment fuse box above battery

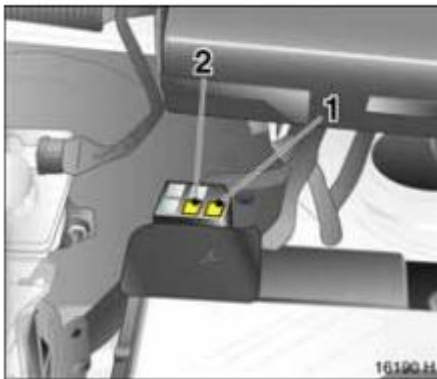

Vauxhall Agila mk1 – fuse box – engine

compartment above battery

Number	Circuit	Ampere rating [A]
1	—	—
2	—	—
3	Preheating system (1)	80
4	—	—
5	—	—