


FUSES & RELAYS

WARNING: Obtain radio security code and disconnect battery ground strap before working on electrical system.

FUSE & RELAY PANEL IDENTIFICATION

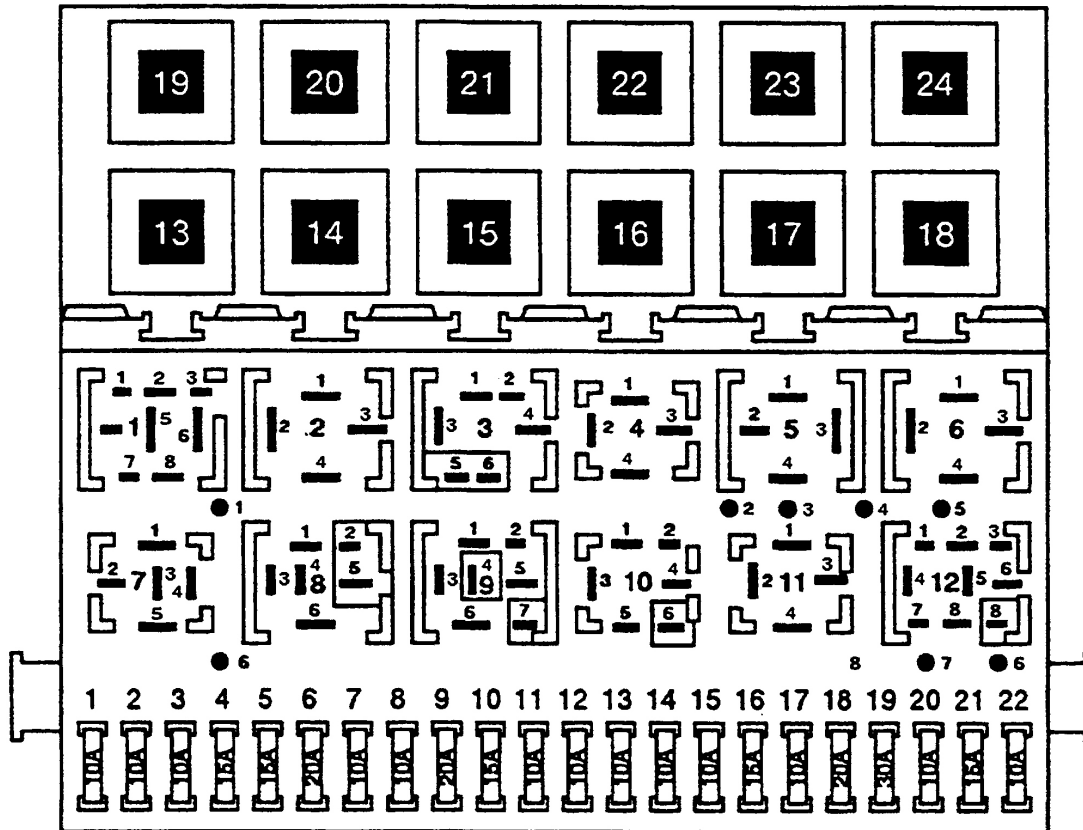

G00149638

Fig. 1: Identifying Fuse/Relay Panel & Component Locations
Courtesy of VOLKSWAGEN UNITED STATES, INC.

FUSE IDENTIFICATION

NOTE: Fuse identification for options not listed can be found in appropriate wiring diagrams. For fuse number location, see [Fig. 1](#).

- **Fuse 1 - 10-Amp (Red)** Headlight, low beam, left
- **Fuse 2 - 10-Amp (Red)** Headlight, low beam, right
- **Fuse 3 - 10-Amp (Red)** License plate lights

1998 Volkswagen Golf GL

1997-2000 ELECTRICAL Fuses & Circuit Breakers - Cabrio, Golf, GTI & Jetta

- **Fuse 4 - 15-Amp (Blue)** Rear window wiper and washer system
- **Fuse 5 - 15-Amp (Blue)** Windshield wiper/washer
- **Fuse 6 - 20-Amp (Yellow)** Fresh air blower, A/C
- **Fuse 7 - 10-Amp (Red)** Tail lights, right
- **Fuse 8 - 10-Amp (Red)** Tail lights, left
- **Fuse 9 - 15-Amp (Blue)** Rear window defogger
- **Fuse 10 - 15-Amp (Blue)** Fog lights
- **Fuse 11 - 10-Amp (Red)** Headlight, high beam, left
- **Fuse 12 - 10-Amp (Red)** Headlight, high beam, right
- **Fuse 13 - 10-Amp (Red)** Horn
- **Fuse 14 - 10-Amp (Red)** Back-up lights
- **Fuse 15 - 10-Amp (Red)** Engine electronics
- **Fuse 16 - 15-Amp (Blue)** Power sunroof, front map/reading light
- **Fuse 17 - 10-Amp (Red)** Emergency flashers
- **Fuse 18 - 20-Amp (Yellow)** Fuel pump (FP), heated oxygen sensor (HO2S) control module
- **Fuse 19 - 30-Amp (Green)** Coolant fan, A/C relay
- **Fuse 20 - 10-Amp (Red)** Brake lights
- **Fuse 21 - 15-Amp (Blue)** Interior lights, clock, luggage compartment light
- **Fuse 22 - 10-Amp (Red)** Cigarette lighter, radio, luggage compartment release

RELAY IDENTIFICATION

NOTE: For relay number location, see Fig. 1 . Relays 1-12 are located on the fuse/relay panel. Relays 13-24 are located on a relay panel above the fuse/relay panel.

- **Relay 1** - A/C relay
- **Relay 2** - Rear window wiper/washer relay
- **Relay 3** - Engine control module (ECM) power supply relay
- **Relay 4** - Load reduction relay
- **Relay 5** - open
- **Relay 6** - Emergency flasher relay
- **Relay 7** - open
- **Relay 8** - Washer/wiper intermittent relay
- **Relay 9** - Seat belt warning system relay
- **Relay 10** - Fog light relay
- **Relay 11** - Dual-horn relay or bridge for horn
- **Relay 12** - Fuel pump relay or glow plug relay

NOTE: **Relays 13-24 are located on a relay panel above the fuse/relay panel. See Fig. 1 .**

- **Relay 13** - Heated oxygen sensor (HO2S) control module
- **Relay 14** - Park/Neutral position relay
- **Relay 15** - Open
- **Relay 16** - Open
- **Relay 17** - Open
- **Relay 18** - Open
- **Relay 19** - Open
- **Relay 20** - Open
- **Relay 21** - Open
- **Relay 22** - Open
- **Relay 23** - Open
- **Relay 24** - Open