

Dodge Dart 2013 fuse box diagram

Interior Fuses

Cavity	Cartridge fuse	Mini Fuse	Description
F1	—	20	Front Heated Seats
F2	—	20	Rear Heated Seats, Heated Steering Wheel
F3	—	10	PAM, Rear Camera, LBSS, RBSS, Compass
F4	—	15	IPC
F5	—	10	HVAC, Humidity Sensor, In-Car Temperature Sensor, Inside Mirror Assembly
F18	—	15	Radio
F19	—	10	Fuel Door
F20	—	10	SCCM, SAS, Switch Bank
F21	—	10	Diagnostic Port
F22	—	10	UGDO, EOM
F23	—	20	Sunroof
F24	—	5	Direct Battery For Underhood PDC (RLY Coils)

F25	—	5	DDCT Feed #4
F26	—	5	Stop Lamp Switch
F27	—	10	Pneumatic Lumbar Support (Solenoid), Pneumatic Lumbar Support (Pump Motor)

Integrated Power Module

Cavity	Cartridge fuse	Mini Fuse	Description
F01	70	—	Direct Battery Feed #1 To BCM
F02	60	—	Direct Battery Feed #2 To BCM
F03	30	—	Output For Starter Relay #1
F04	40	—	ESP Pump Motor
F05	40	—	DDCT Feed #1 (SDU)
F06	30	—	Direct Battery Feed #3 To BCM
F07	40	—	EBL RLY Coil, Blower Motor RLY Coil
F09	—	5	Radiator Fan Enable RLY, Radiator Fan Enable RLY Coil
F10	—	10	ORC
F11	—	20	ECM, EPS, Backup Lamp Switch

F14	—	15	DDCT Feed #2
F15	—	15	DDCT Feed #3
F16	—	15	Ignition Coils, Coil Capacitor
F17	—	15	ESC, Brake Pedal Switch, OCM
F18	—	20	ECM
F19	—	10	A/C Compressor Clutch
F20	—	30	EBL
F21	—	20	Fuel Pump
F22	—	10	ORC
F23	—	25	ESC
F24	—	20	ECM, Fuel Injectors, Active Grill Shutter (AGS)
F30	—	20	Power Outlet (Console)
F81	60	—	Interior PDC Battery Feed, Power Seats
F82	30	—	Amplifier
F83	40	—	HVAC Blower Motor

F84	—	20	Cigar Lighter
F85	—	10	Sunroof, LRSM, Power Outlet (Console), UCI/AUX Port, Cigar Lighter
F86	—	20	—
F87	—	10	Wastegate, Purge Solenoid, OBD Vent Valve, Oxygen Sensor Heaters
F88	—	10	Heated Outside Mirrors