


Chevrolet Blazer 1985 – 1994 fuse box diagrams

Fuse Box diagram

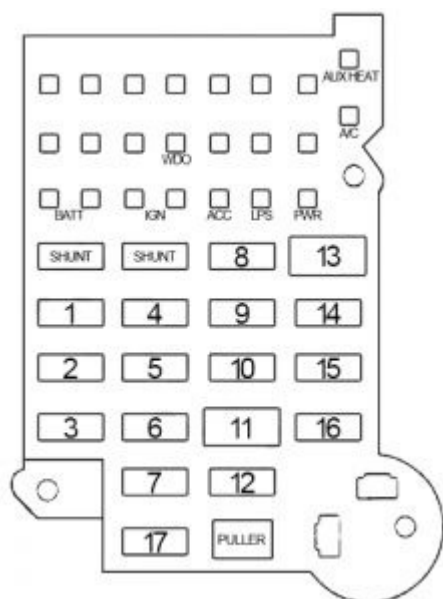

Chevrolet Blazer – fuse box diagram

No.	A	Circuit Protected
1	20	Horn, Clock & Lighter, Dome Lights, Glove Box Light, Courtesy & Vanity Mirror Lights, Compass (Bravada), Liftgate Release Solenoid, Fog Lights ('91), Outside Rearview Mirror
2	20	Light Switch, Taillights & Parking Lights, Courtesy Lights, Electronic Cluster
3	10	'85-'92: Electronic Control Module, Fuel Pump
	15	'93-'94: Electronic Control Module, Fuel Pump
4	20	Ignition ('85-'87), Indicator Lights & Gauges, Rear Defogger Relay & Timer, A/T Converter Clutch & Cruise Control, RWAL Brake Signal, Seat Belt Timer, A/C Compressor Timer, 4WD Indicator Light
5	15	Turn Signal & Back-Up Lights
6	10	Electronic Control Module
7	5	'93-'94: Electric Shift Transfer Case Module
8	5	Instrument Panel Lights, Headlight Warning Buzzer, Rear Defogger Switch Light, Ashtray Light, 4WD Indicator Light, Rear Wiper Switch Light, Foglight Switch Light
9	20	'85-'87: Choke, Brake
	15	'88-'94: Rear/Four Wheel Anti-Lock Brake Module, Digital Radio Adapter Module, Speedometer, Auto. Trans. Converter Clutch
10	25	Heating & A/C
11	30	Circuit Breaker: Power Windows
12	10	'93-'94: Daytime Running Lights
13	30	Circuit Breaker: Power Door Locks & Rear Defogger, Console Power Socket (Bravada & Typhoon), CD Player, Power Seat, Electric Shift Transfer Case

14	15	Stoplights & Hazard Warning Lights, Chime Module ('91-'94)
15	15	Radio, Tachometer, Rearview Mirror Map Lights, Rear Wiper & Washer, Compass ('93)
16	25	Windshield Wipers & Washers
17	3	Electronic Control Module