


Buick Cascada 2018 fuse box diagram

Engine Compartment Fuse Block

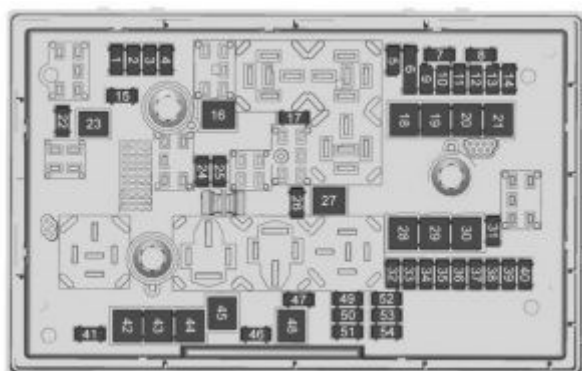

Buick Cascada – fuse box – engine compartment

Fuses	Usage
1	Engine control module
2	O2 sensor
3	Fuel injection/ Ignition system
4	Fuel injection/ Ignition system
5	—
6	Heated mirrors
7	Fan control
8	O2 sensor/ Powertrain cooling
9	Rear window sensor
10	Vehicle battery sensor
11	Trunk release
12	Adaptive headlamps/ Automatic headlamp leveling
13	ABS valves
14	—
15	Engine control module
16	Starter
17	Transmission control module
18	Rear window defogger
19	Front power window
20	Rear power window
21	Rear electrical center
22	—
23	—
24	Right high-beam headlamp

25	Left high-beam headlamp
26	Front fog lamps
27	—
28	—
29	Electric parking brake
30	ABS pump
31	—
32	Airbag
33	Adaptive forward lighting/Automatic headlamp leveling
34	Exhaust gas recirculation
35	Power windows/Rain sensor/Exterior mirror
36	Climate control
37	—
38	Vacuum pump
39	Fuel system control module
40	Front windshield washer
41	—
42	Engine cooling fan
43	Windshield wipers
44	—
45	Engine cooling fan
46	—
47	Horn
48	Engine cooling fan
49	Fuel pump
50	Headlamp leveling/ Adaptive forward lighting
51	—
52	—
53	Transmission control module/Engine control module
54	Vacuum pump/ Instrument panel cluster/HVAC

Instrument Panel Fuse Block

The instrument panel fuse block is on the driver side of the instrument panel.




Buick Cascada – fuse box – instrument panel

Fuses	Usage
1	Displays
2	Body control module/Exterior lamps
3	Body control module/Exterior lamps
4	Infotainment system
5	Infotainment system/ Instrument cluster
6	Power outlet
7	Power outlet
8	Body control module/Left low-beam headlamp
9	Body control module/Right low-beam headlamp
10	Body control module/Door locks
11	Interior fan
12	Driver power seat
13	Passenger power seat
14	Diagnostic connector
15	Airbag
17	A/C system
18	Service diagnose
19	Body control module/Brake lamps/Reverse lamps/Interior lamps
20	—
21	Instrument panel
22	Ignition
23	Body control module
24	Body control module
25	—
26	Trunk power outlet accessory
Relays	Usage

16	Trunk lid relay
----	-----------------

Rear Compartment Fuse Block

The rear compartment fuse block, if equipped, is on the left side of the trunk behind a cover.

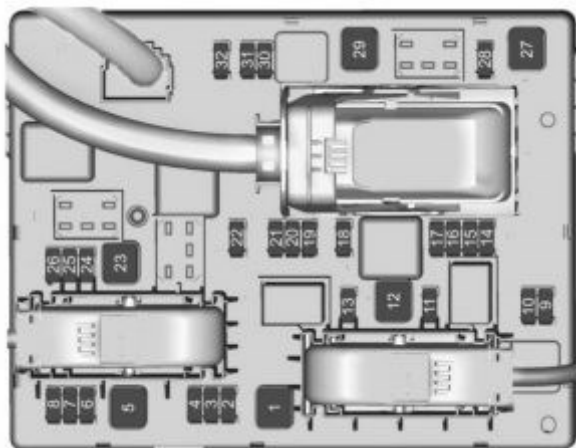

Buick Cascada – fuse box – rear compartment

Fuses	Usage
1	Convertible control module/Right power rail
2	—
3	Rear parking assist
4	Selective catalytic reduction system
5	—
6	—
7	Power seats
8	Convertible control module
9	Selective catalytic reduction system
10	Selective catalytic reduction system
11	Tire pressure monitor/Rear vision camera
12	Convertible control module/Reverse lamps
13	—
14	Rear seat electrical folding
15	—
16	Rear vision camera/ Convertible control module
17	—
18	—
19	Heated steering wheel
20	—
21	Heated seats
22	—
23	Convertible control module/Left power rail

24	Selective catalytic reduction system
25	—
26	Non-logistic mode
27	Passive entry/ Passive start
28	—
29	Hydraulic unit
30	—
31	—
32	—