

Pontiac Trans Sport 1998 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is to the right of the glove box.

FUSE USAGE CHART					
CIRCUIT BREAKER	SWC BACKLIGHT	RR T/LP	LH T/LP		
HEADLAMP	ELEC PRNDL	RR FOG LP	RR DEFOG	ELC	ABS SOL
	PWR MIRROR	CRUISE/DLC	FRT PWR SCKT	CTSY LAMP	
	CRUISE	T/SIG	SIR	IGN 1	
PWR WDO/RR VEN	PWR QTR VENT	RR HVAC	FRT HVAC LOW/MED BLWR	SUNROOF	HVAC/DRL
	FRT WPR/WSHR	SWC ACCY	MALL/RADIO/DIC	RR WPR/WSHR	BCM PRGRM
PWR SEAT/PSD		HAZARD	STOP LAMP	LH HEADLP LOW	RR HEADLP LOW
FRT HVAC/MI BLWR	PWR LOCK	RR PWR SCKT	ABS MOD BATT	LH HEADLP HIGH	RR HEADLP HIGH
		DRL		ABS/TCS IGN	PCM

Pontiac Trans Sport – fuse box –

instrument panel

Circuit Breakers	Usage
HEADLAMP	DRL Control Module, Headlamp and I/F Dimmer Switch
PWR WDO/RR VEN	Front Power Windows
PWR SEAT/PSD	6-Way Power Seat(s) and Rear Side Door Actuator Motor
FRT HVAC/MI BLWR	Blower Motor Hi Speed Relay in Module

Fuses	Usage
SWC BACKLIGHT	Steering Wheel Radio Control Switches (Illumination
ELEC FRNDL	Instrument Cluster to PRNDL Indicators


PWR MIRROR	Power Remote Control Mirror Switch
CRUISE	Cruise Control Module, Switch and Release Switch
PWR QTR VENT	Interior Lamps and Multifunction Switch (Power Vent Switch)
FRT WPWSHR	Windshield Wipermasher Motor and Switch
PWR LUCK	BCM
RH T/LP	Not Used
RR FOG LP	Not Used
CIGAWDLC	Cigarette Lighter and Data Link Connector (DLC)
TfSIG	Turn Signal Switch
RR HVAC	Rear Blower Motor, Rear Heater-A/C Control, and Temperature Door Actuator (Rear)
SWC ACCY	Steering Wheel Radio Control Switches
HAZARD	Turn Signal Switch
RR PWR SCKT	Rear Electric Accessory Plug Housing
DRL	DRL Control Module
LH TLP	Not Used

FW DEFOG	Rear Window Defogger Relay
FRT PWR SCKT	Front Electric Accessory Plug Housing
SIR	Inflatable Restraint Control Module
FRT HVAC LOWMED BLWR	Heater-A/C Control
MALL/RADIO/DI C	BCM, Driver Information Display, Radio and Radio Rear Speaker Amplifier
STOP LAMP	Stoplamp Switch to Stoplamps
ABS MOD BATT	Electronic Brake Control ModuleElectronic Brake Traction Control Module (EBCMRBTCM)
CAN VENT SOL	Evaporative Emissions (EVAP) Canister Vent Solenoid Valve
ELC	Electronic Level Control (ELC) Air Compressor and ELC Relay, Trailer Harness
CTSY LAMP	BCM
IGN 1	ALC Sensor, BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Motor, Rear Window Wiperwasher and Multifunction Switch (Fog Lamp SwitchTraction Control Switch) and Stoplamp/Torque Converter Clutch (TCC) Switch
SUNROOF	Sunroof Control Module

RR WPR WSHR	Rear Window Wip'er Motor, Rear Window Wipermasher and Multifunction Switch (Rear Window Wipermasher Switch)
LH HEADLP LOW	Not Used
LH HEADLP HIGH	Not Used
ABS/TCS IGN	Electronic Brake Control ModuleElectronic Brake Traction Control Module (EBCMIEBTCM)
ABS SOL	LH and RH Front Brake Solenoid Valve
HVACDRL	Air Inlet Actuator, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Relay
BCM PRGRM	Body Control Module (BCM)
RH HEADLP LOW	Not Used
RH HEADLP HIGH	Not Used
PCM	IGN MAIN Relay and PCM

Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir.

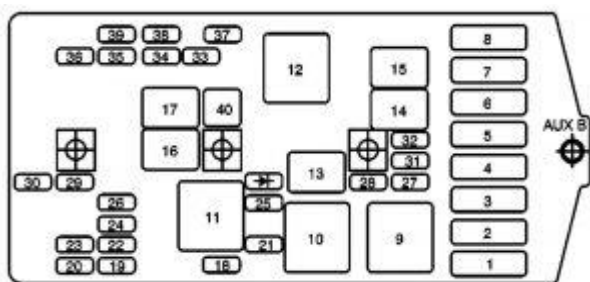

Pontiac Trans Sport – fuse box – engine

compartment

Maxi Fuses		Usage
1	COOL FAN	Coolant Fans
3	HEADLAM PS	Circuit Breakers: FRT WAC HI BLWR, and HEADLAMP Fuses (W): HAZARD and STOPLAM
4	BATT MAIN 2	Circuit Breaker: PWR SEAT/PSD. Fuses (UP): ELC and RR DEFOG
5	IGN MAIN 1	Ignition Switch to Fuses (UP): ABS/TCS IGN, CRUISE, DRL, ELEC PRNDL, IGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay (Underhood Electrical Center Fuses: A/C CLU, ELEK, IGN, IGN 1-U/H, INJ, TCC)
6	COOL FAN 1	Coolant Fans
7	BATT MAIN 1	Fuses (UP): ABS MOD BATT, CIGAE2/RLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT
8	IGN MAIN 2	Ignition Switch to Fuses (VP): BCM PRGWM, FRT HVAC LOW/MED BLWR, FRT WPR/WSHR, HVAC/DRL, MALL/RARIO/DIC, PWR QRT VENT, RR HVAC, RR WPR/WSHR, SUNROOF, SWC ACCY and PWR WDO Circuit Breaker
9	COOL FAN	RH FAN1 ,LH FAN 2
10	COOL FAN 2	LH FAN 2

11	IGN MAIN	FUSES: A/C CLU, IGN I-U/H, INS, ELEK IGN, TCC
12	COOL FAN 1	RH FAN 1, LH FAN 2

Micro Relays		Usahe
13	A/C CLU	A/C Clutch
14	FUEL PUMP	Fuel Pump
15	F/PMP SPD CONT	Not Used
16	HORN	Horn
17	FOG LAMP	LH Fog Lamp, RH Fog Lamp, Fog Lamp Indicator

Mini Fuses		Usage
18	INJ	Fuel Injectors 1-6
19	SPARE	Not Used
20	SPARE	Not Used
21	IGN1-U H	Evaporative Emissions (EVAP) Canister Purge Valve, Heated Oxygen Sensors 1 and 2, Mass Air Flow (MAF) Sensor

22	SPARE	Not Used
23	SPARE	Not Used
24	SPARE	Not Used
25	ELEK IGN	Ignition Control Module (ICM)
26	SPARE	Not Used
27	B/U LAMP	Transaxle Range Switch to Back-up Lamps
28	A/C CLU	A/C CLU Relay to A/C Compressor Clutch Oil
29	RADIO	Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Control Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft Deterrent Shock Sensor
30	ALT SENSE	Generator
31	TCC	Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM
32	FUEL PUMP	Fuel Pump Rela
33	ECM SENSE	Powertrain Control Module (PCM)

34	—	Not Used
35	FOG LP	Fog Lamp Relay
36	HORN	Horn Relay
37	PARK LP	Daytime Running Lamps (DRL) Control Module, Headlamps and UP Dimmer Switch Theft-Deterrent Relay to Headlamps
38	—	Not Used
39	—	Not Used
40	—	Mini Fuse Puller