

Dodge Avenger 2011 fuse box diagram

Totally Integrated power module (TIPM)

Cavity	Cartridge fuse	Mini fuse	Description
1	40	—	Power Top Module – If Equipped
2	—	20	AWD Module
3	—	10	Battery Feed – Center High Mounted Stop Light (CHMSL)/Brake Switch
4	—	10	Battery Feed – Ignition Switch
5	—	20	Trailer Tow – If Equipped
6	—	10	Ignition Off Draw (IOD) – Power Mirror Switch/Climate Controls
7	—	30	Ignition Off Draw (IOD) Sense 1
8	—	30	Ignition Off Draw (IOD) Sense 2
9	40	—	Battery Feed – Power Seats – if equipped/PZEV Air Pump – if equipped
10	—	20	Battery Feed – Cabin Compartment Node (CCN)
11	—	15	Selectable Power Outlet
12	—	20	—

13	—	20	Ignition
14	—	10	Instrument Panel
15	40	—	Radiator Fan Relay
16	—	15	Cigar Lighter/Sunroof – If Equipped
17	—	10	Wireless Control Module (WCM)/Clock/Steering Control Module (SCM)
18	40	—	Auto Shutdown (ASD) Relay
19	—	20	Audio Amplifier – If Equipped
20	—	15	Radio
21	—	10	Siren – If Equipped
22	—	10	Ignition Run – Climate Controls/Hot Cupholder – if equipped
23	—	15	Auto Shutdown (ASD) Relay Feed 3
24	—	25	Sunroof – If Equipped
25	—	10	Ignition Run – Heated Mirrors – If Equipped
26	—	15	Auto Shutdown (ASD) Relay Feed 2
27	—	10	Ignition Run – Occupant Classification Module (OCM)/Occupant Restraint Controller (ORC)

28	—	10	Ignition Run — Occupant Classification Module (OCM)/Occupant Restraint Controller (ORC)
29	—	—	Hot Car (No Fuse Required)
30	—	20	Ignition Run — Heated Seats — If Equipped
31	—	10	Headlamp Washer — If Equipped
32	30	—	Auto Shutdown (ASD) Relay Feed 1
33	—	10	Switch Bank/Diagnostic Link Connector/Powertrain Control Module (PCM)
34	30	—	Anti-Lock Brakes (ABS) Module — If Equipped/Electronic Stability Control (ESC) Module — If Equipped
35	40	—	Anti-Lock Brakes (ABS) Module — If Equipped/Electronic Stability Control (ESC) Module — If Equipped
36	30	—	Passenger Door Module (PDM)/Driver Door Module (DDM)
37	—	25	Power Top Module — If Equipped