




CYLINDER HEAD (for Bank 2 4WD and Pre-Runner)

COMPONENTS

EM

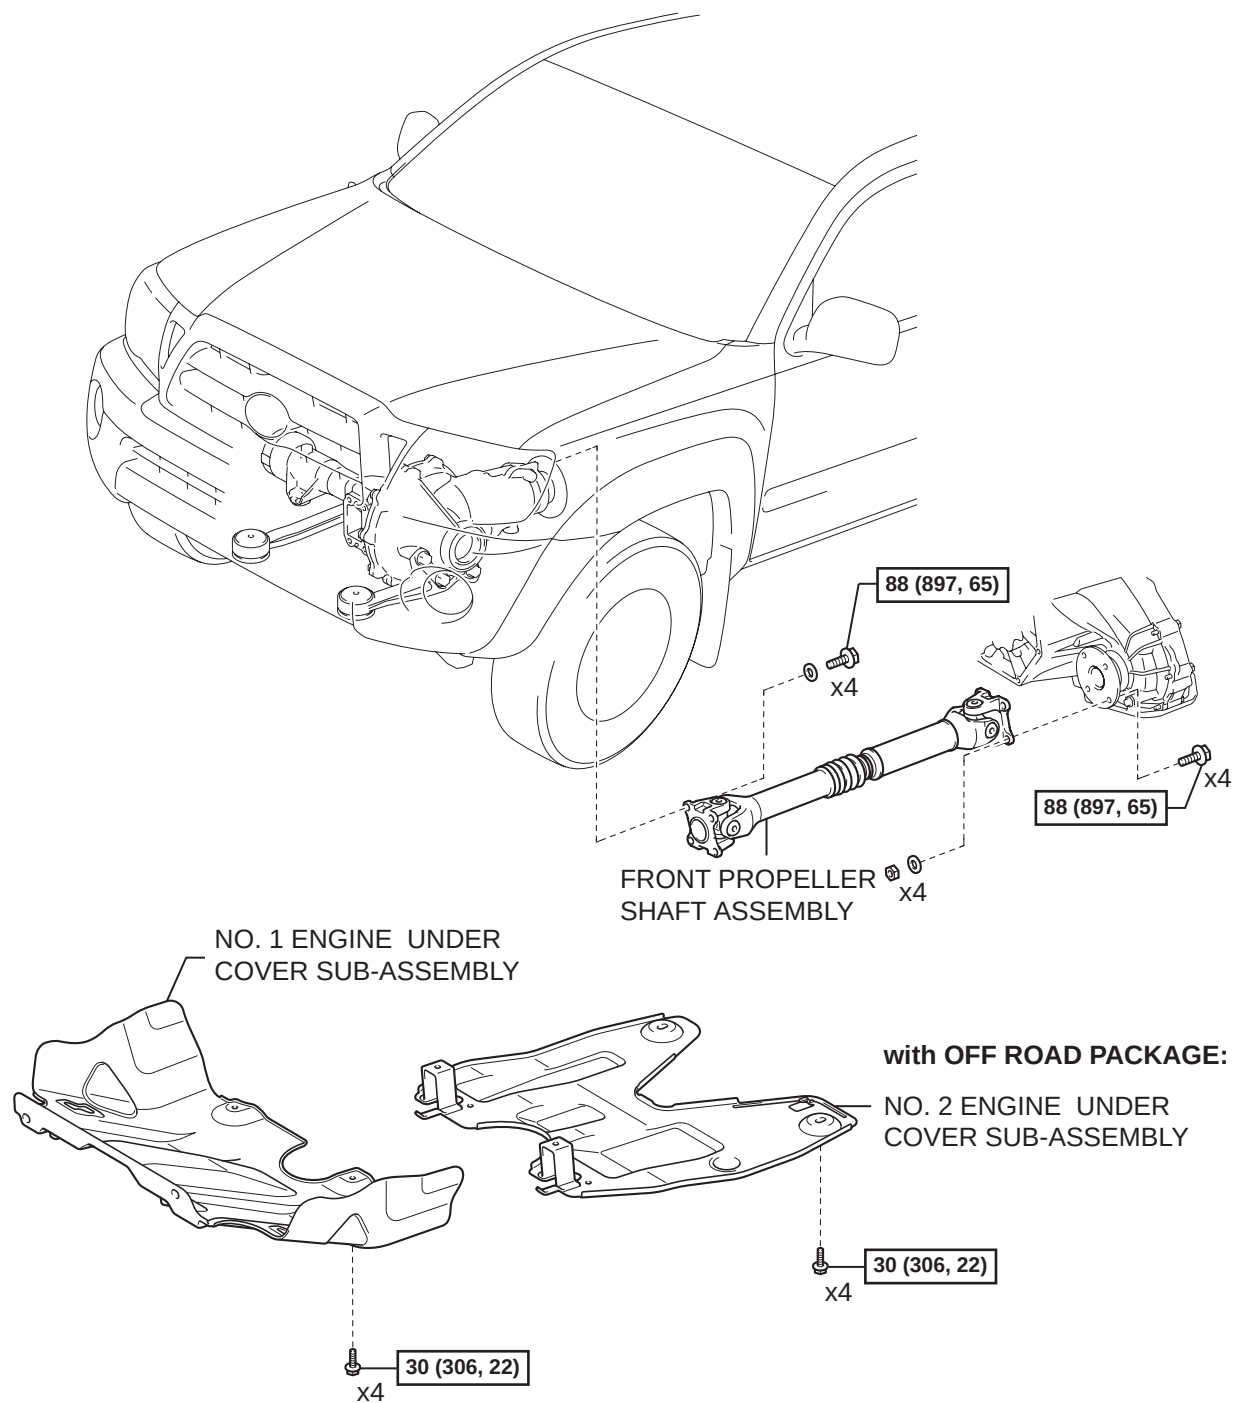

N*m (kgf*cm, ft*lbf) : Specified torque

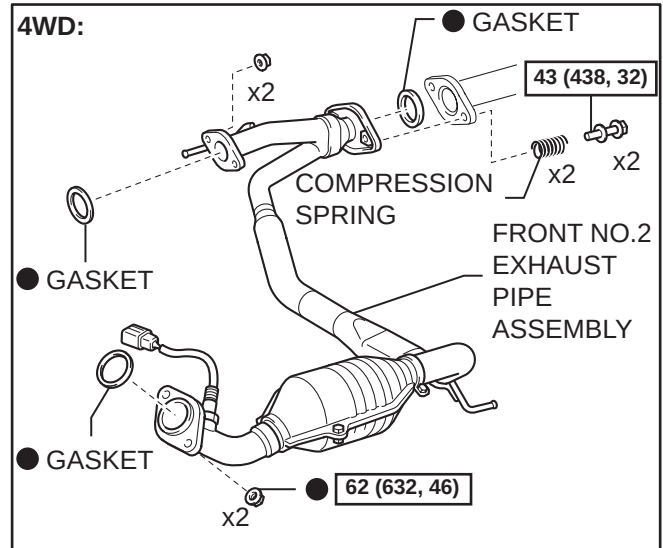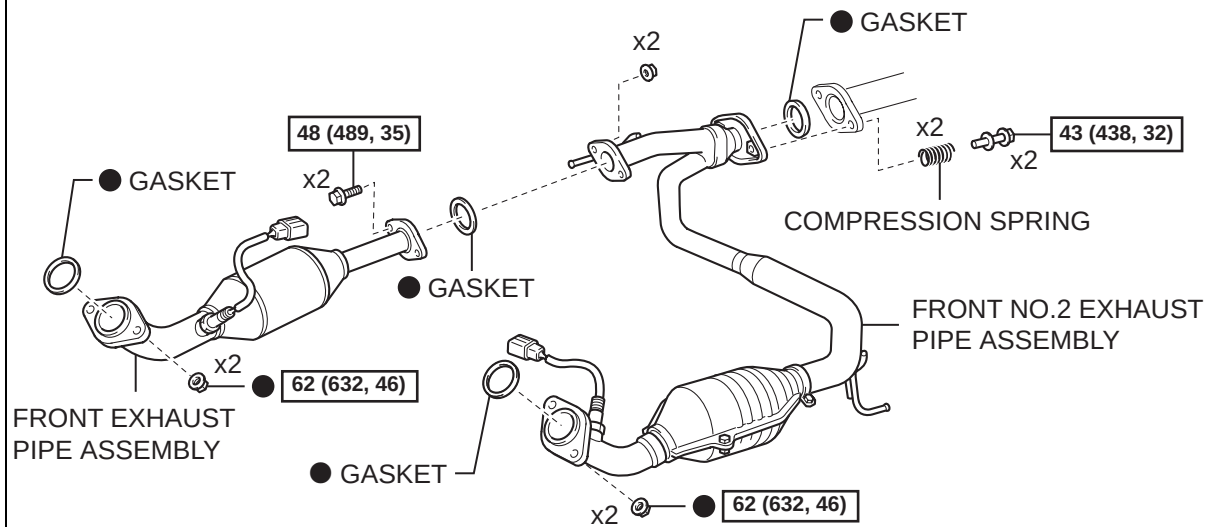


N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

Y

A113602E01


PRE RUNNER:

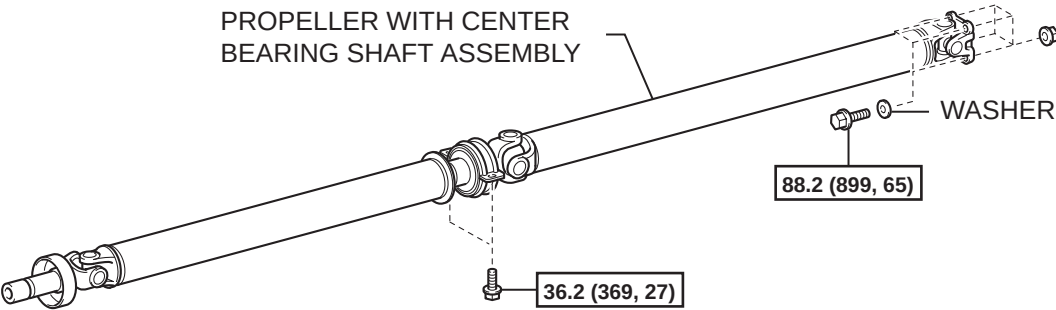

EM

4WD:



PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY

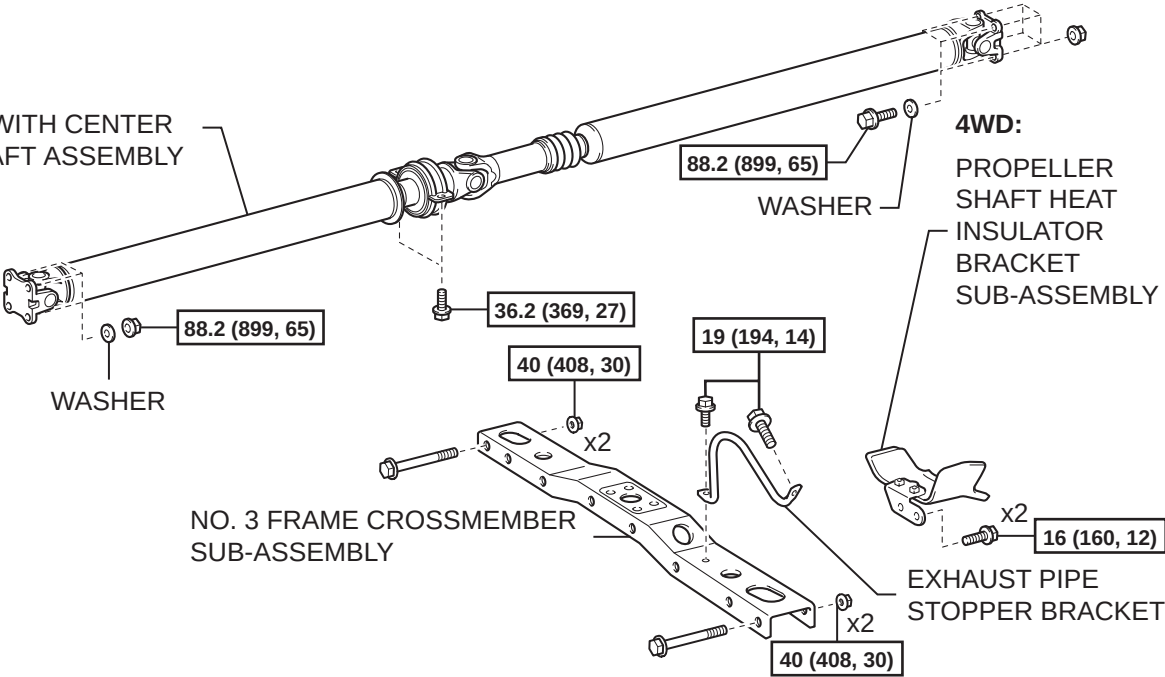

N*m (kgf*cm, ft*lb) : Specified torque


Y

A113600E01

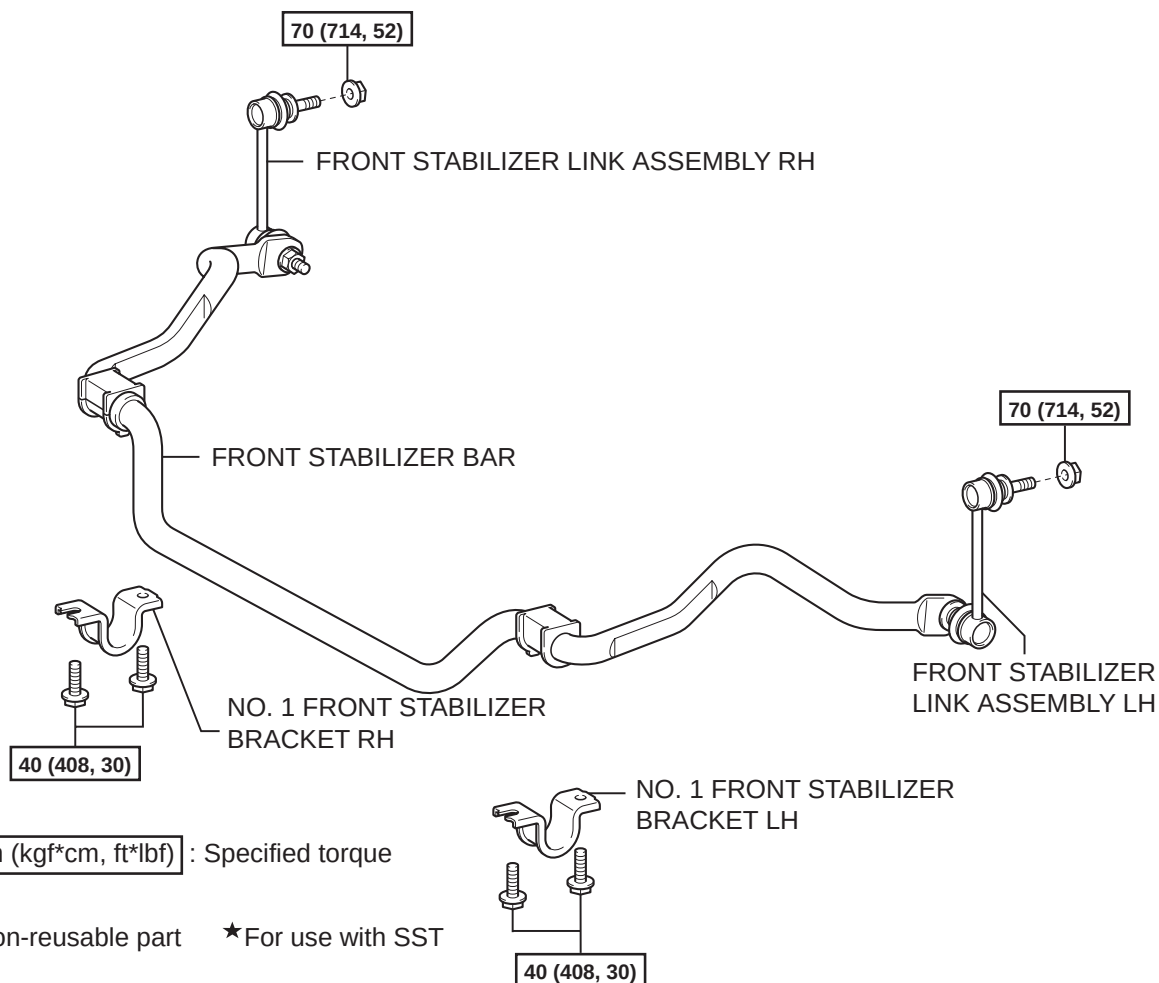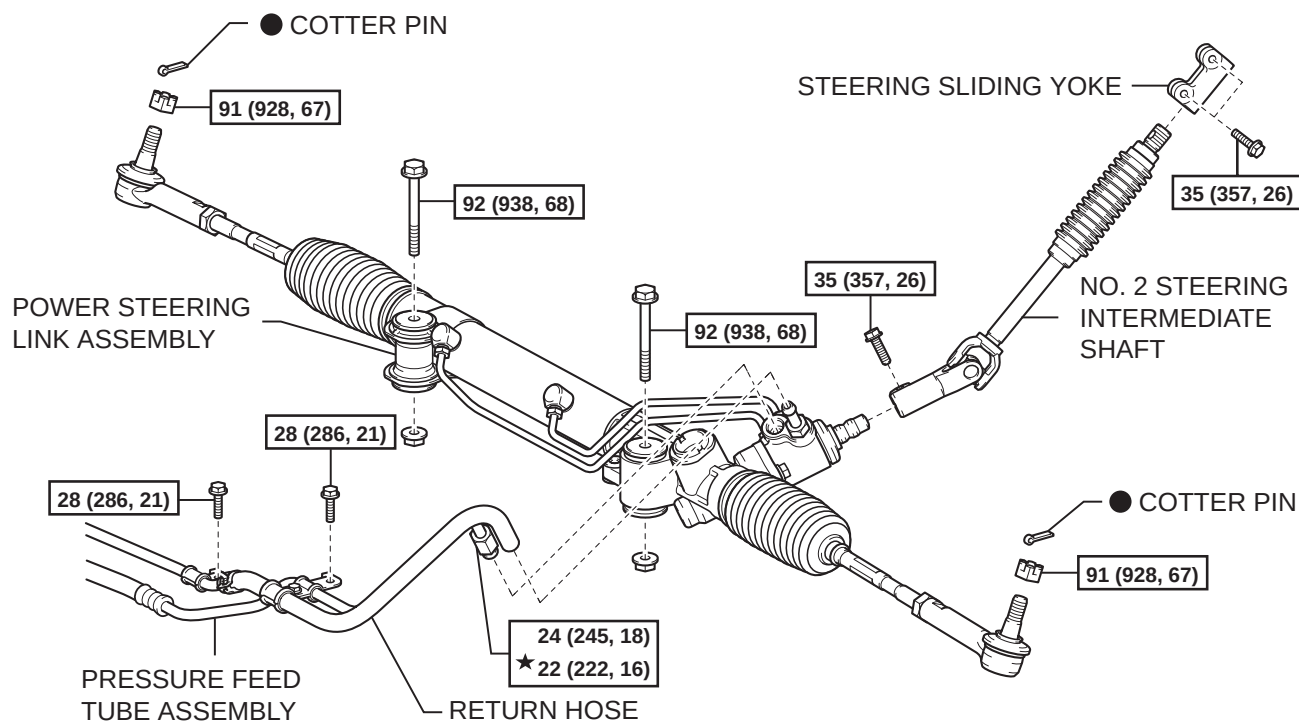


N*m (kgf*cm, ft*lb) : Specified torque


● Non-reusable part ★ For use with SST

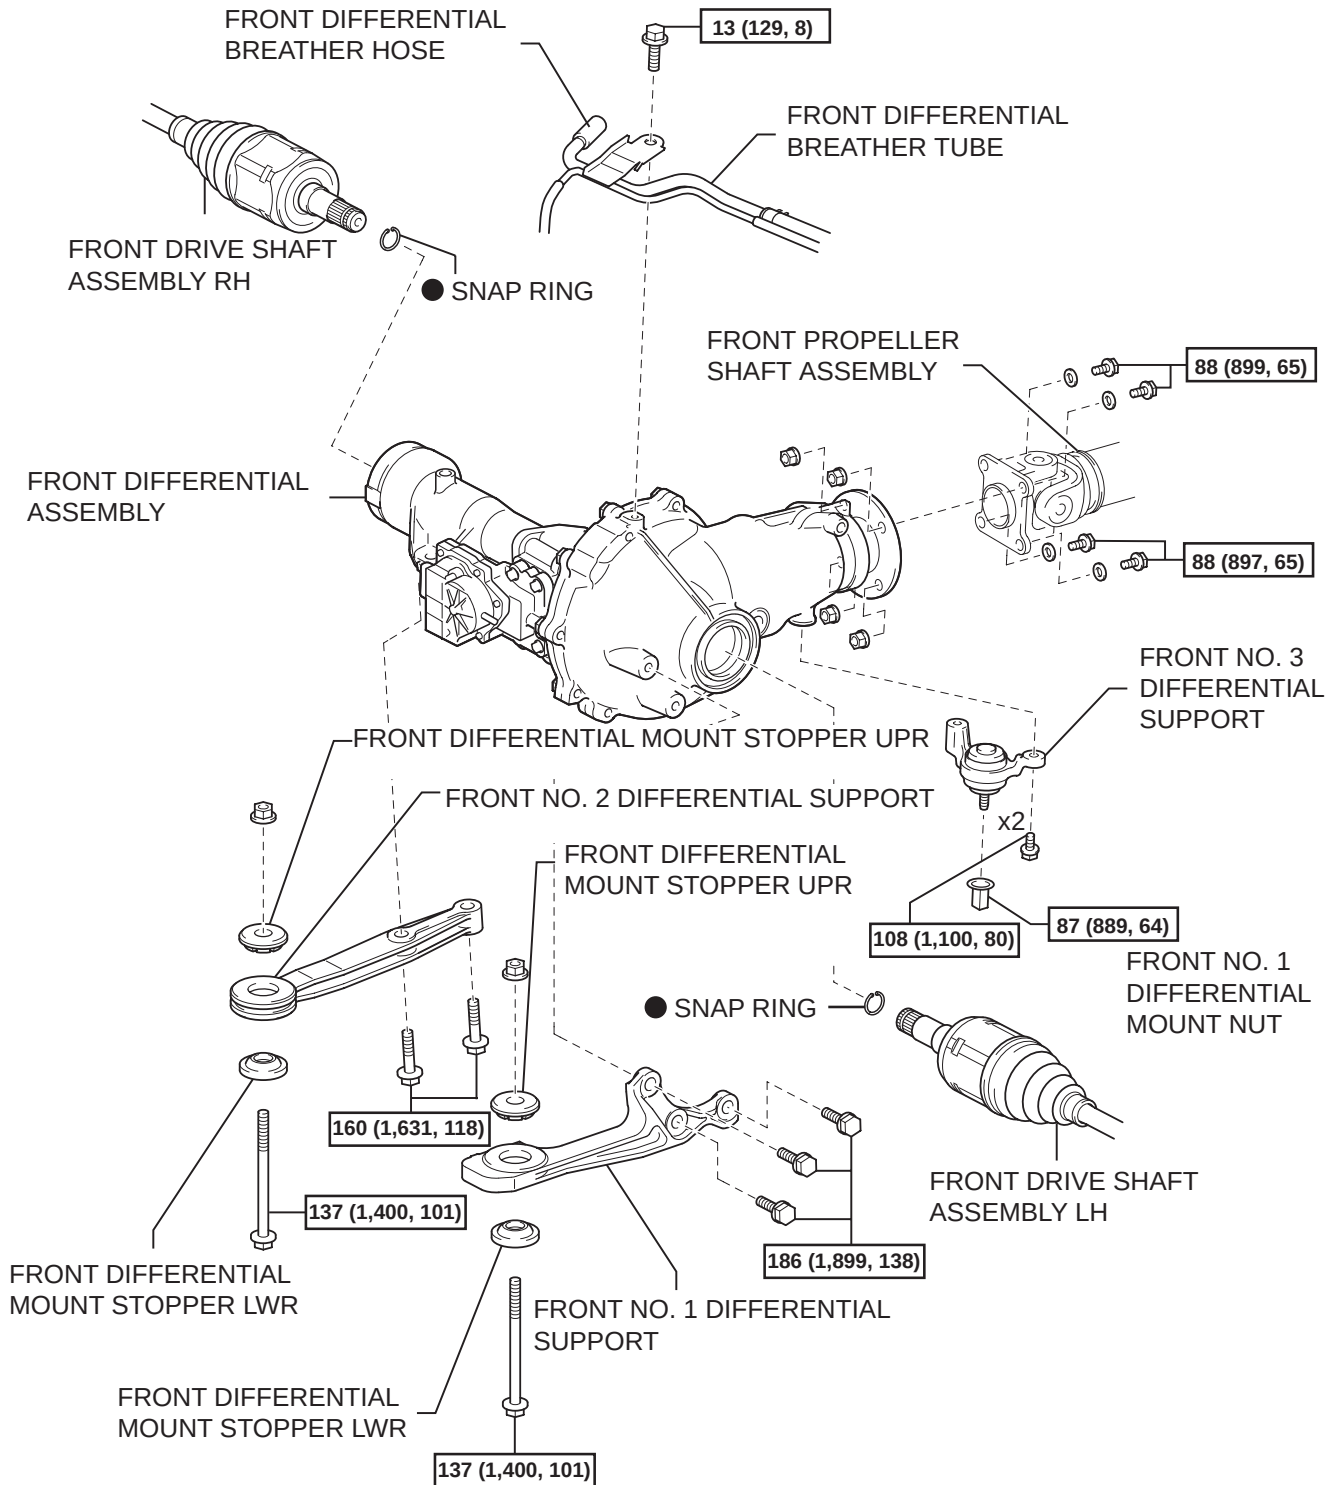


N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

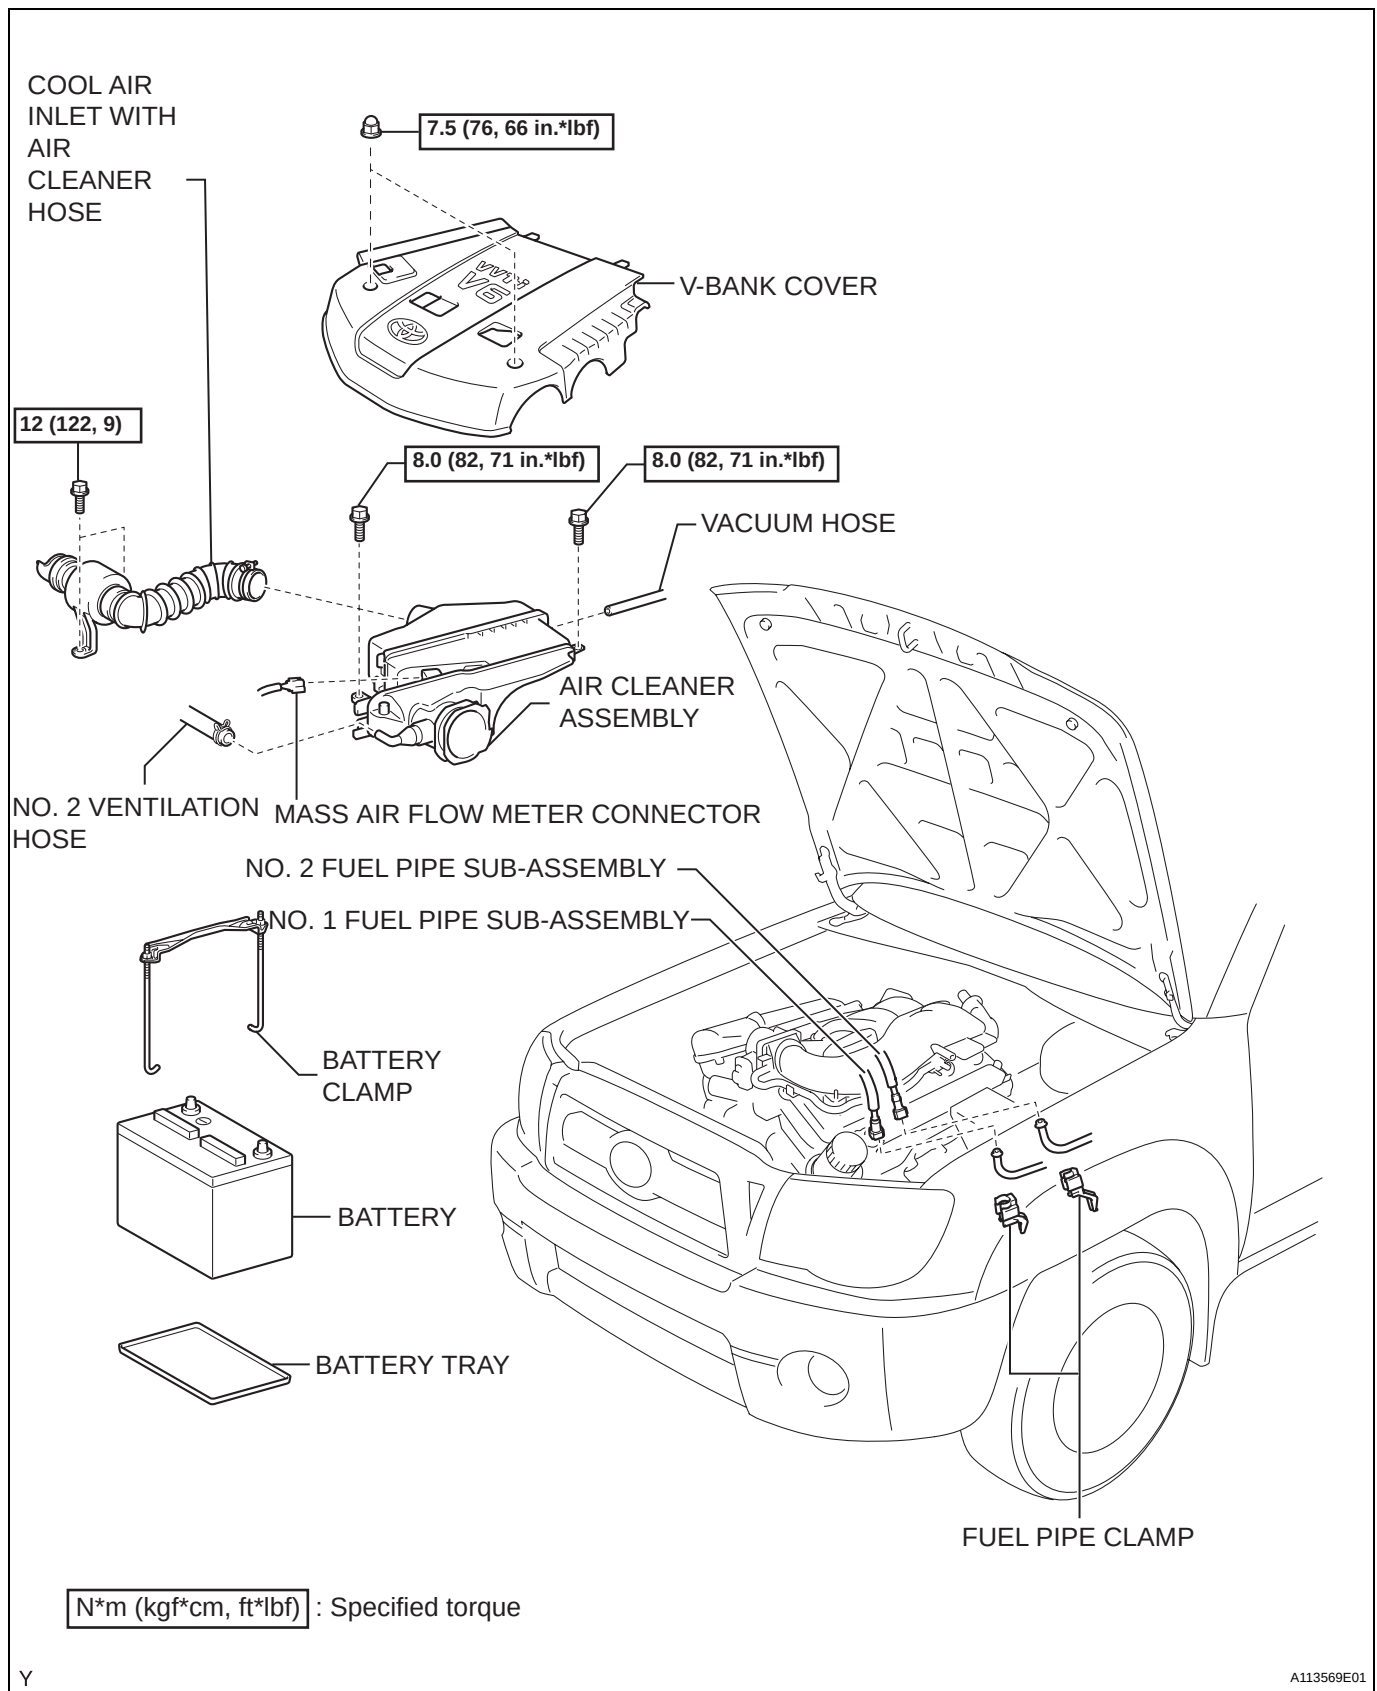


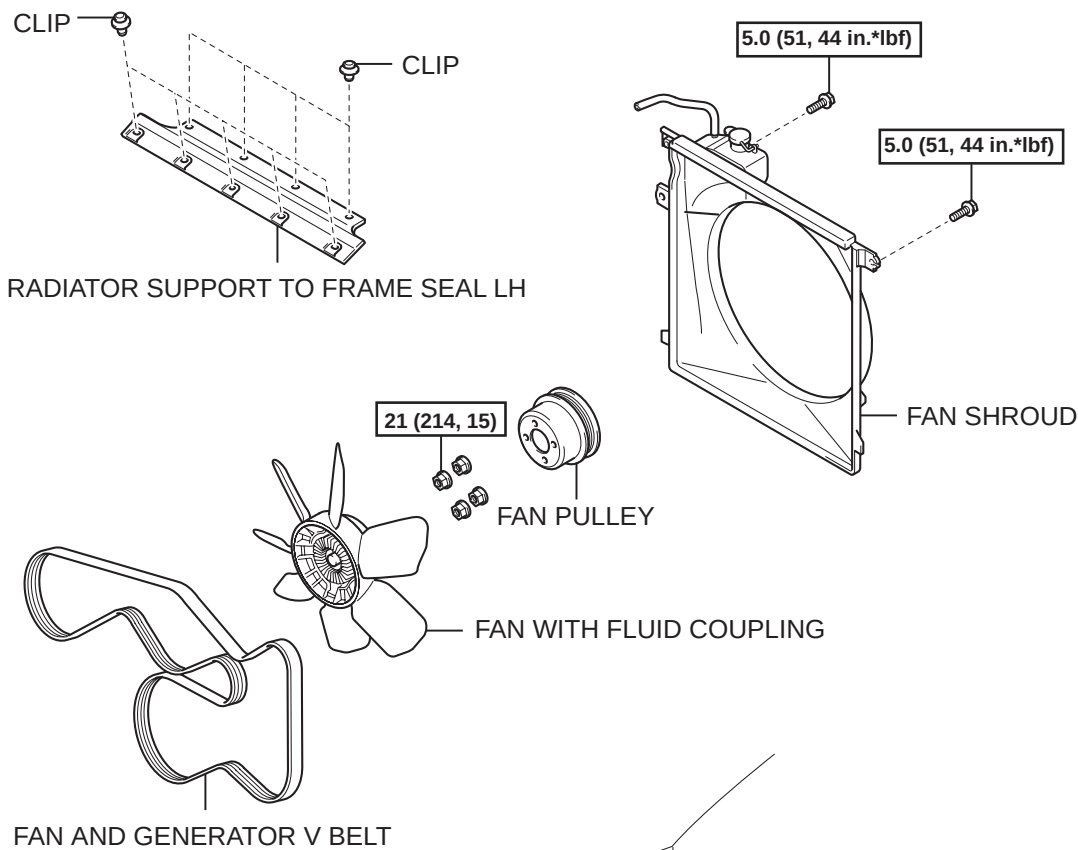


N*m (kgf*cm, ft*lbf) : Specified torque

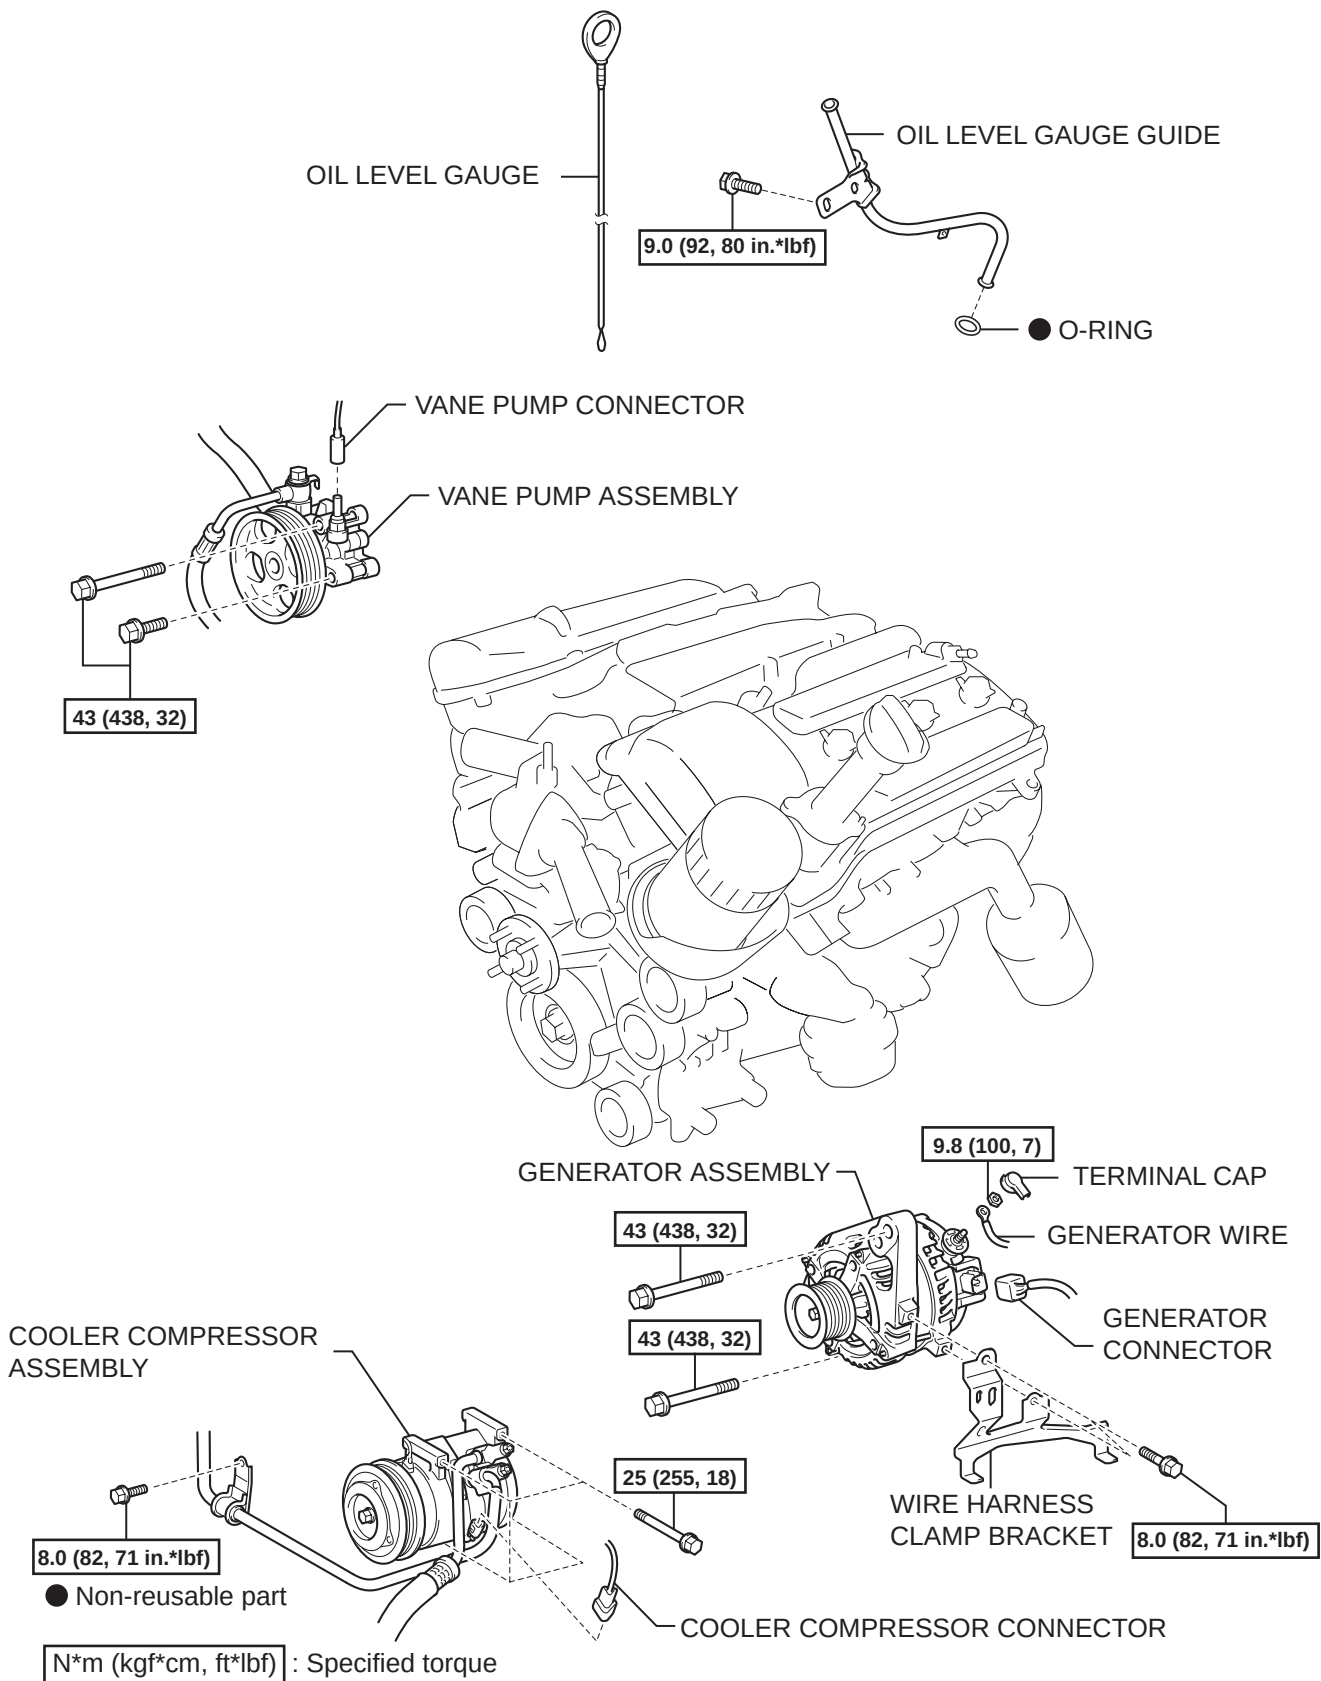

EM

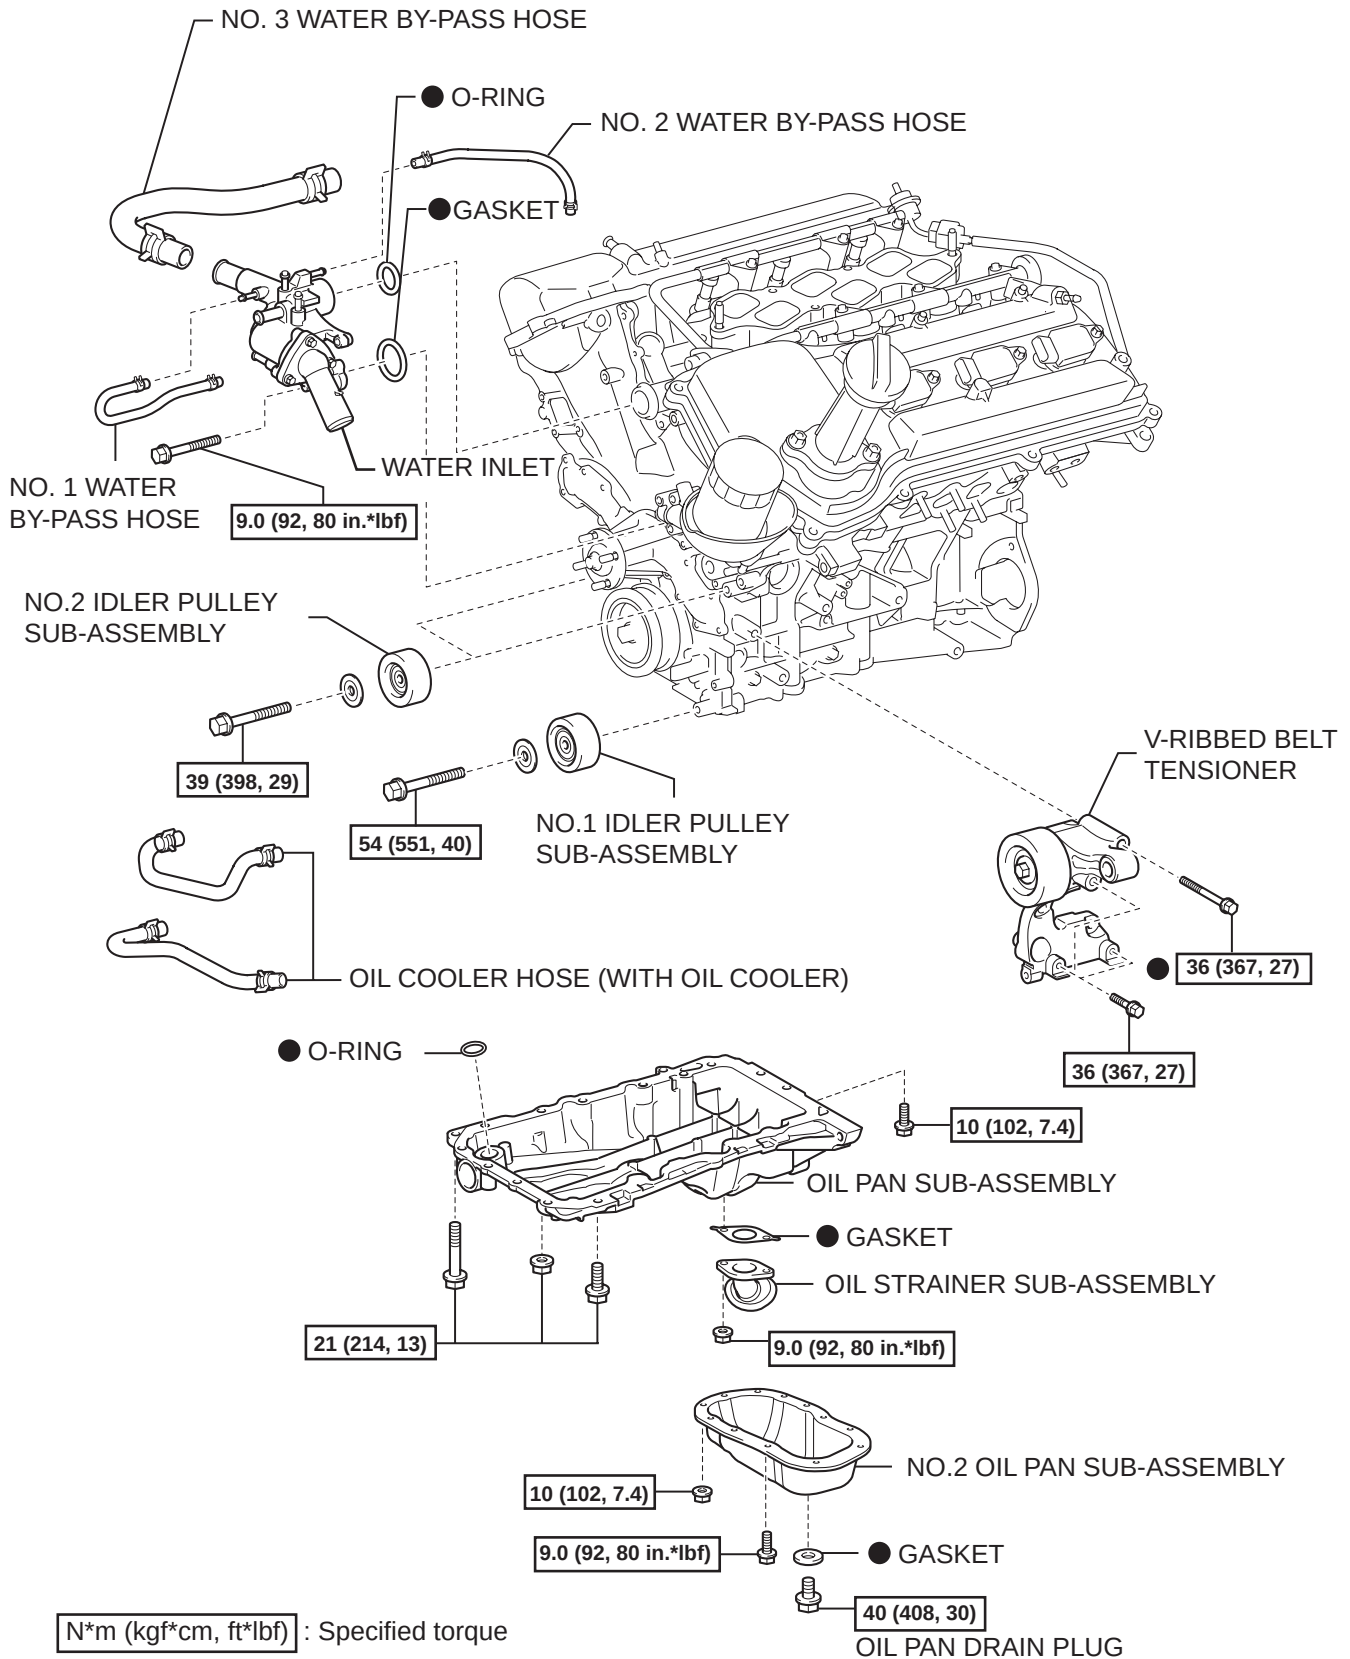

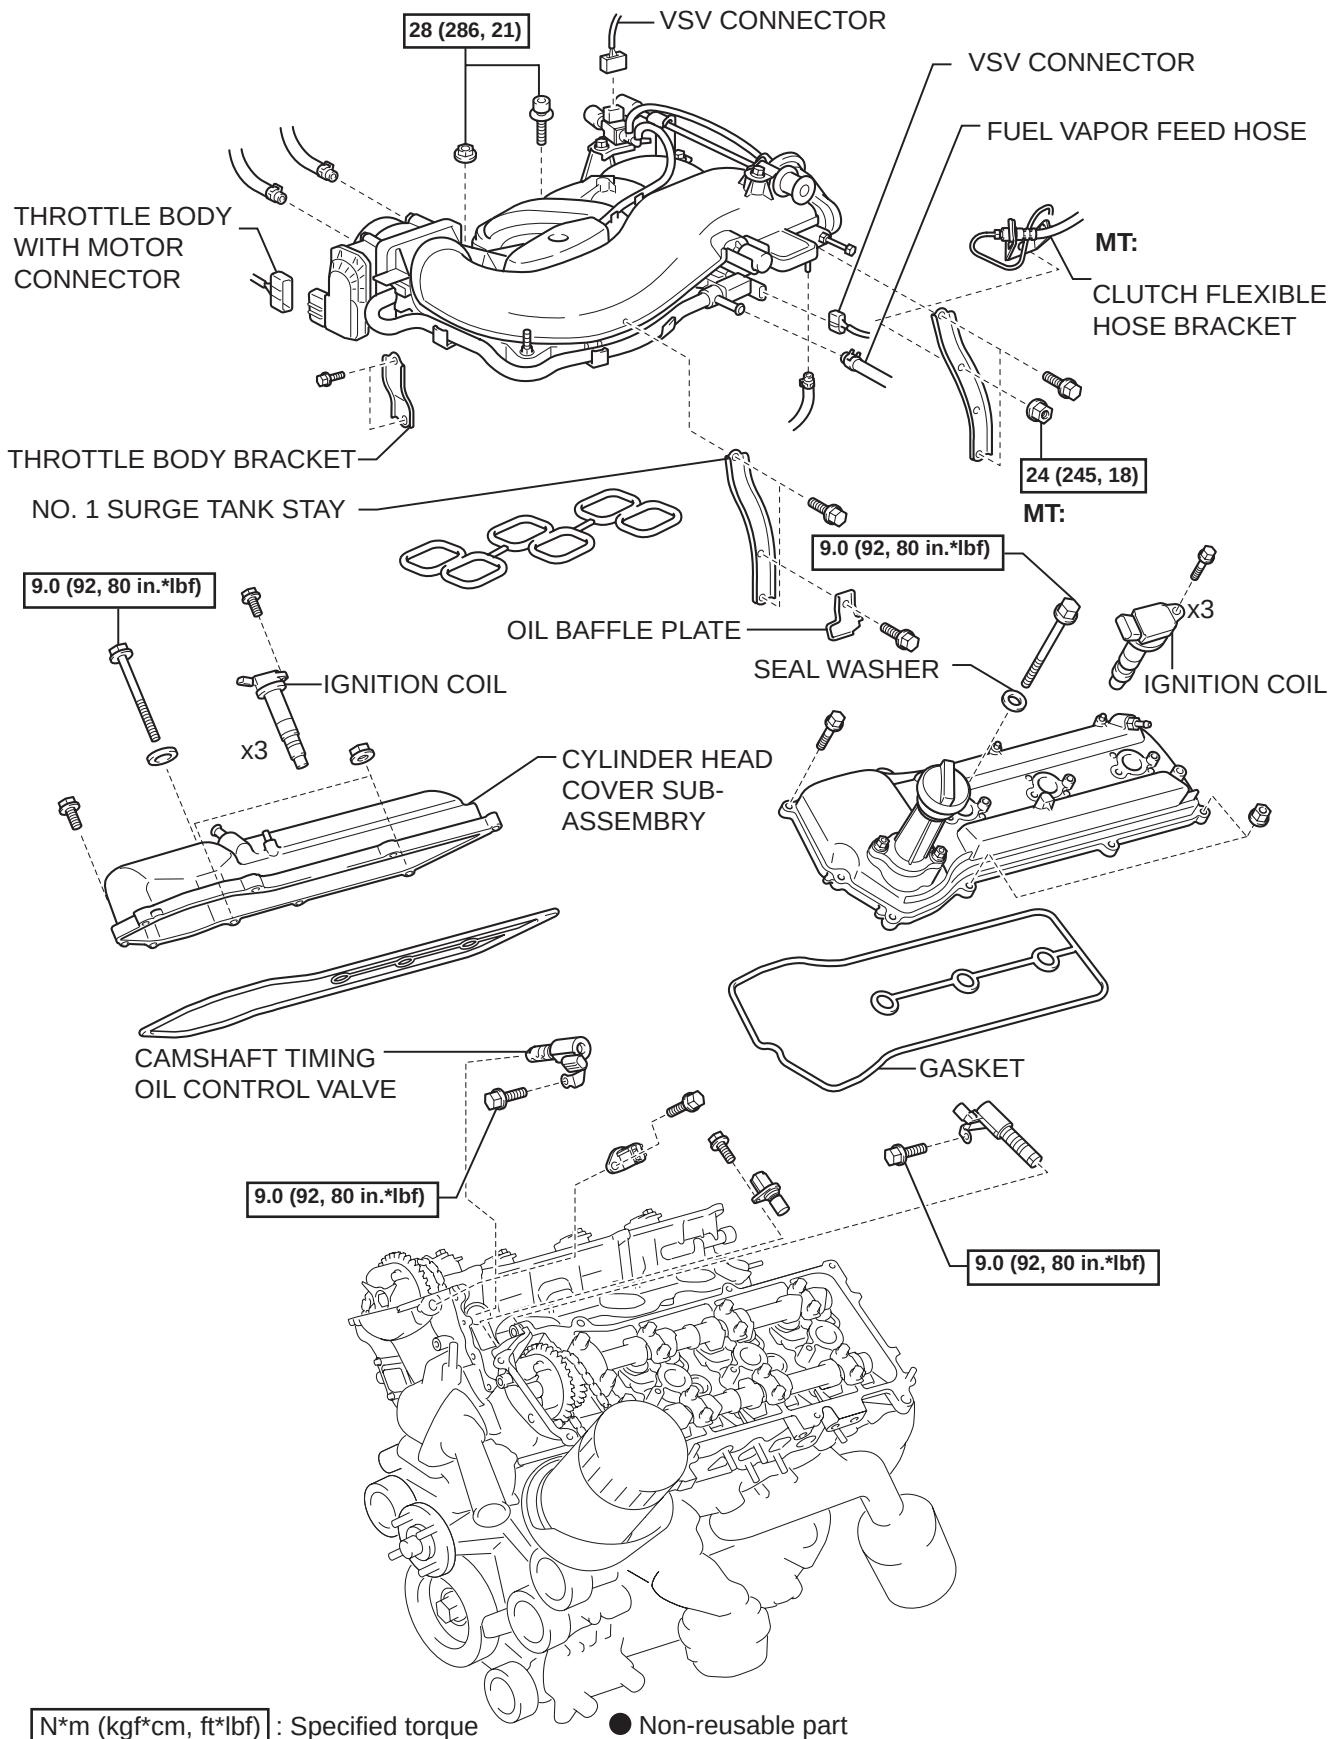

WATER
BY-PASS
HOSE

INTAKE AIR SURGE TANK

NO. 2 SURGE
TANK STAY

21 (214, 15)

21 (214, 15)

21 (214, 15)

10 (102, 7.4)

● GASKET

9.0 (92, 80 in.*lbf)

10 (102, 7.4)

9.0 (92, 80 in.*lbf)

CYLINDER HEAD
COVER SUB-
ASSEMBLY LH

10 (102, 7.4)

10 (102, 7.4)

9.0 (92, 80 in.*lbf)

GASKET


8.0 (82, 71 in.*lbf)

VVT SENSOR

CAMSHAFT TIMING OIL
CONTROL VALVE

N*m (kgf*cm, ft*lbf) : Specified torque


● Non-reusable part

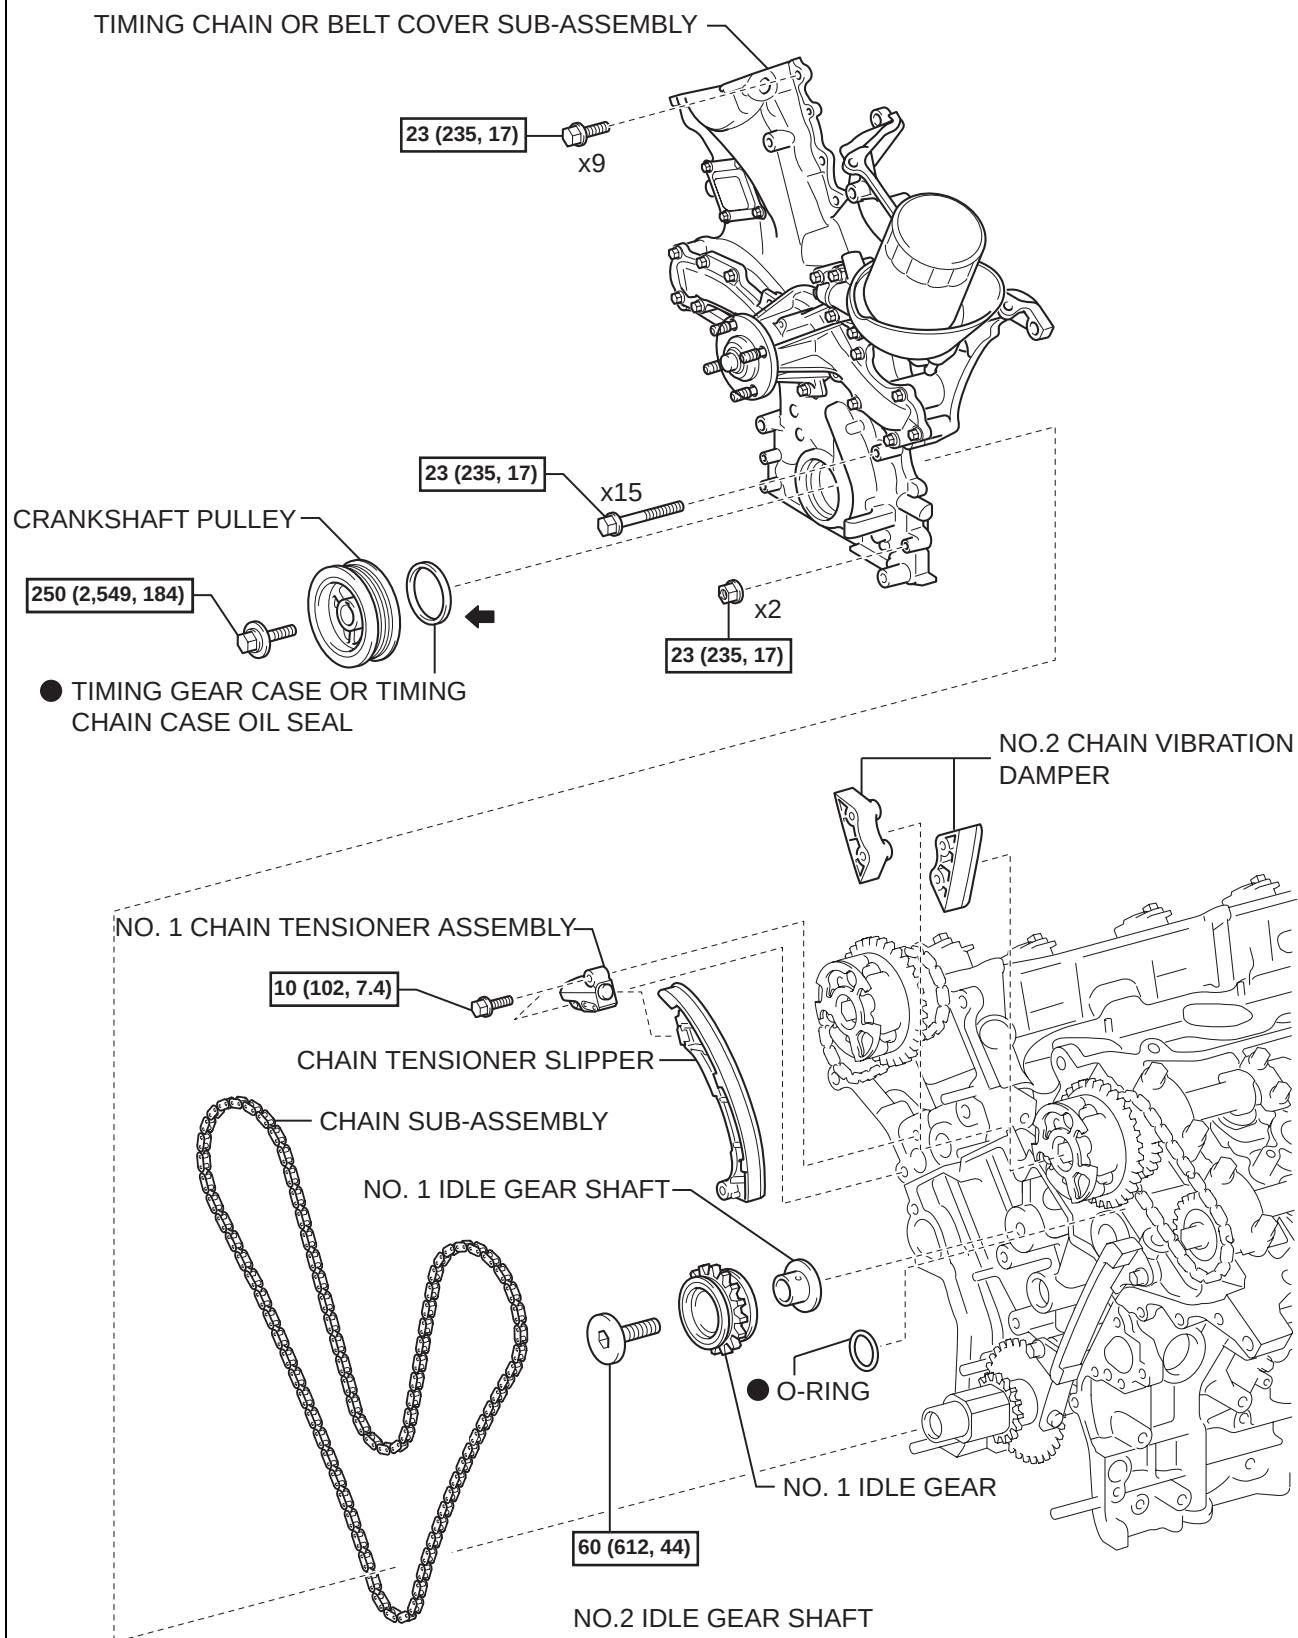


N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

← Apply MP grease

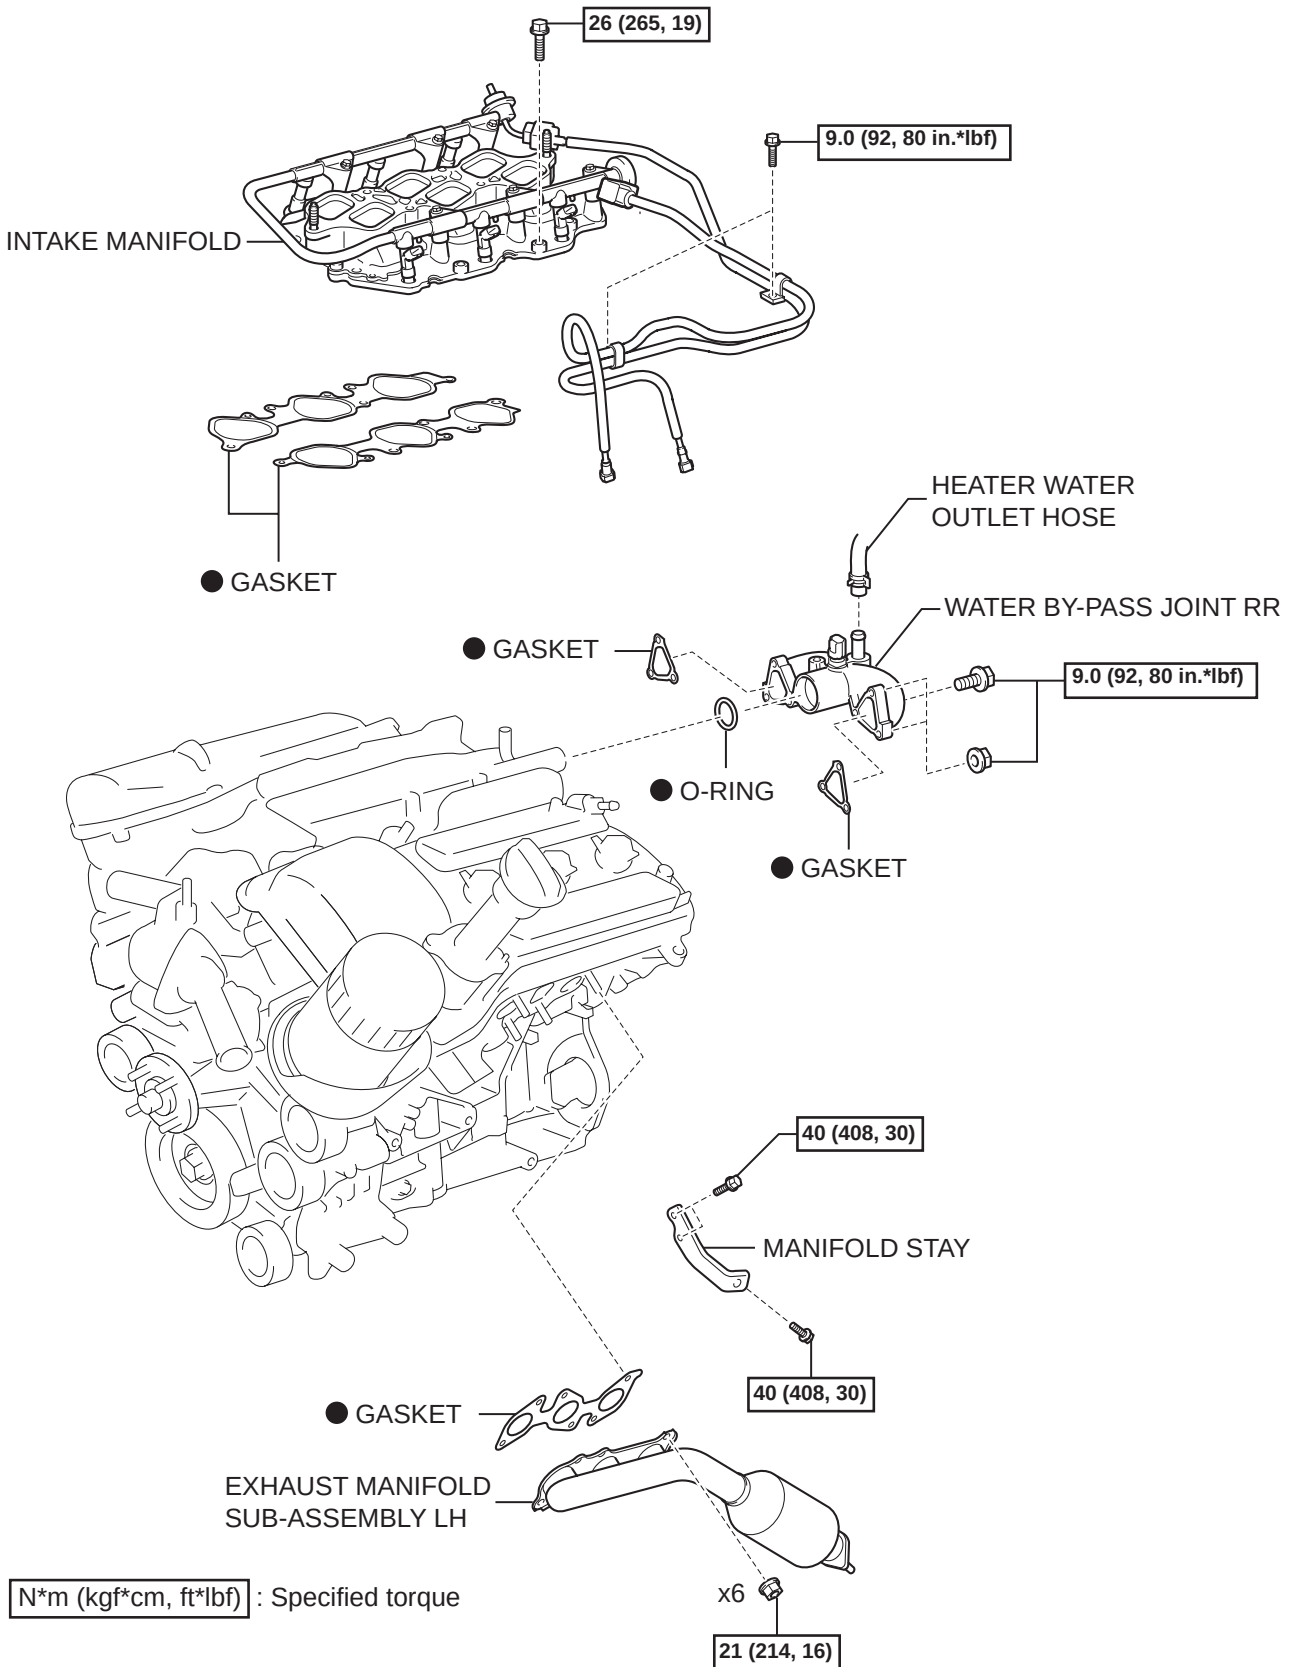

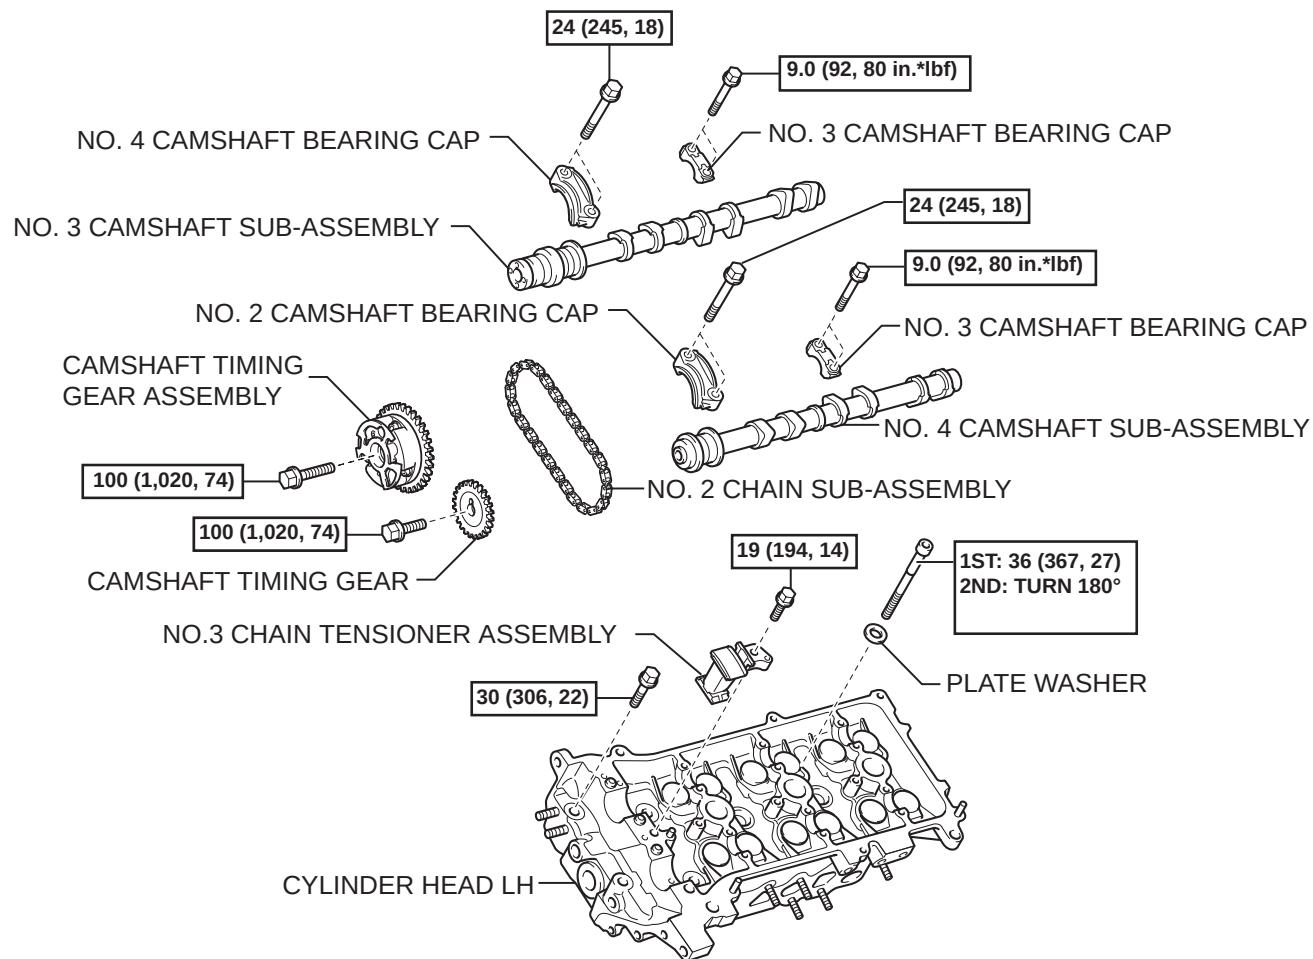

● NO.2 CYLINDER HEAD GASKET

● Non-reusable part

N*m (kgf*cm, ft*lbf) : Specified torque