


ENGINE ASSEMBLY


COMPONENTS

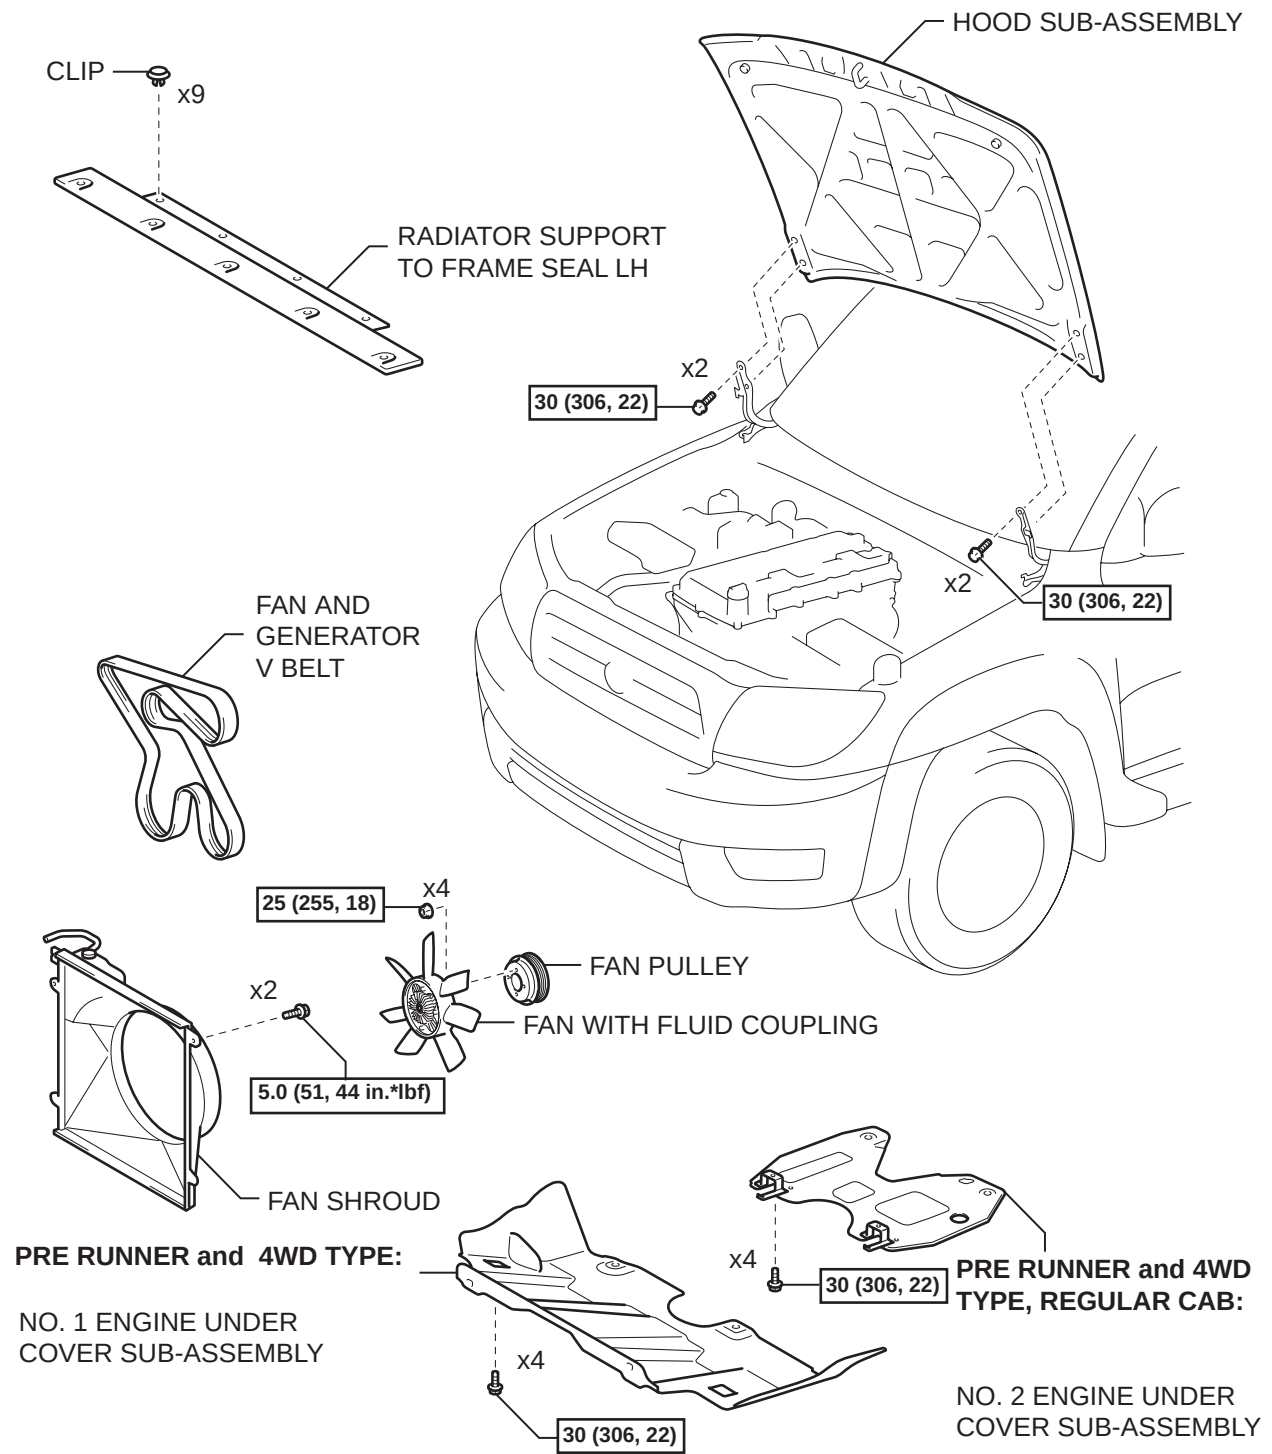

N*m (kgf*cm, ft*lbf) : Specified torque





EM

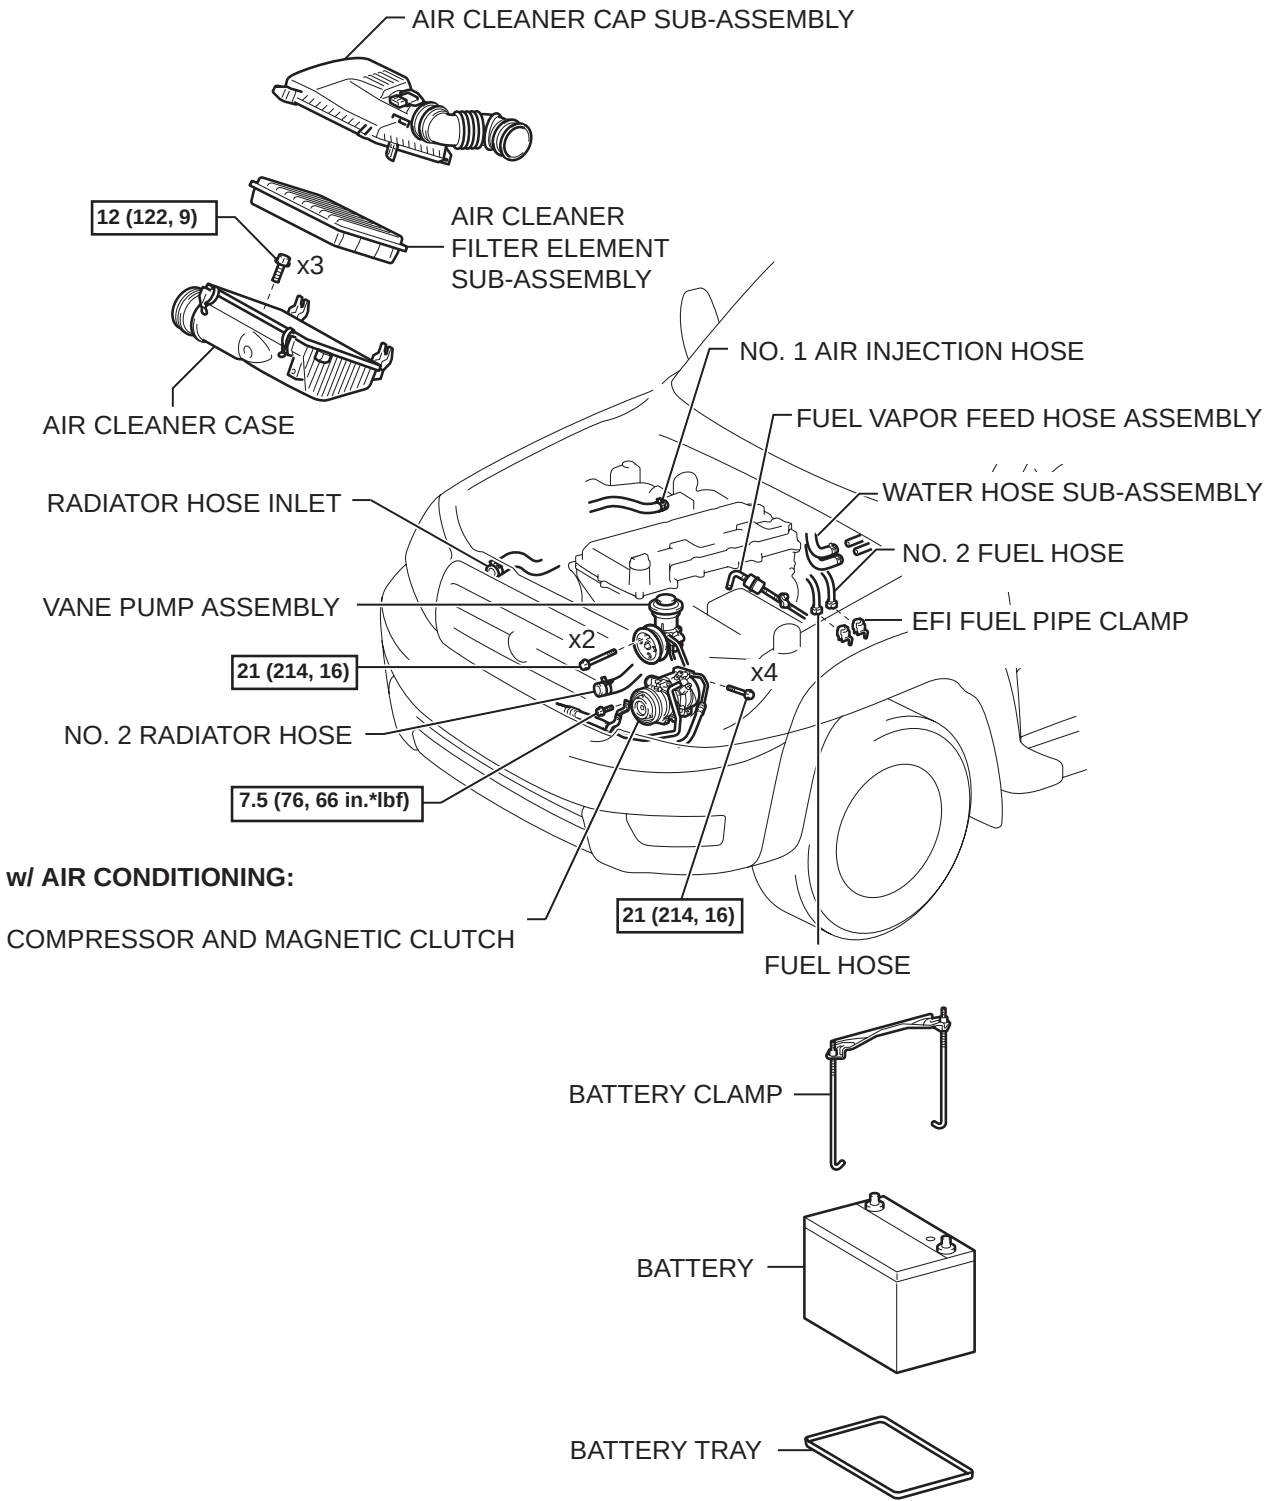

N*m (kgf*cm, ft*lbf) : Specified torque



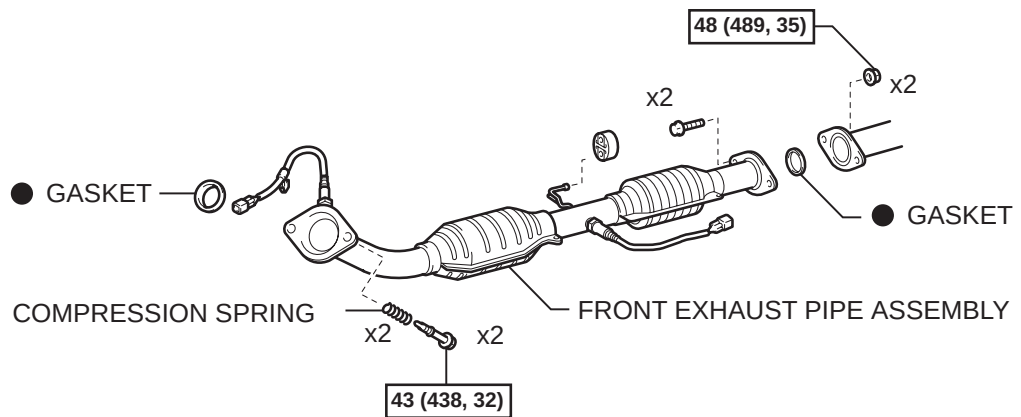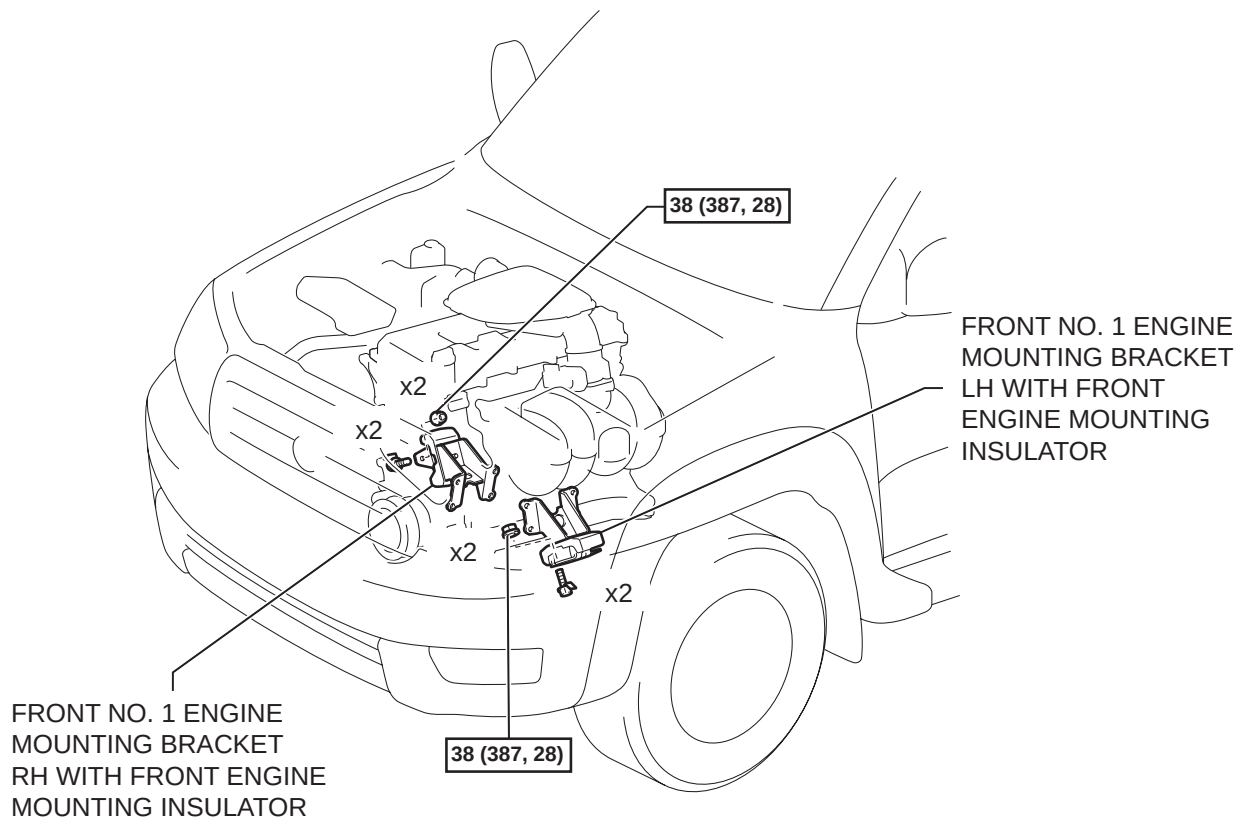

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part



MANUAL TRANSMISSION, 2WD:

REGULAR CAB:

PROPELLER SHAFT ASSEMBLY

FLOOR SHIFT SHIFT LEVER ASSEMBLY

CLIP

SHIFT LEVER BOOT ASSEMBLY

MANIFOLD STAY

44 (449, 33)


72 (730, 53)

30 (306, 22)

37 (379, 27)

STARTER ASSEMBLY

MANUAL TRANSMISSION UNIT ASSEMBLY

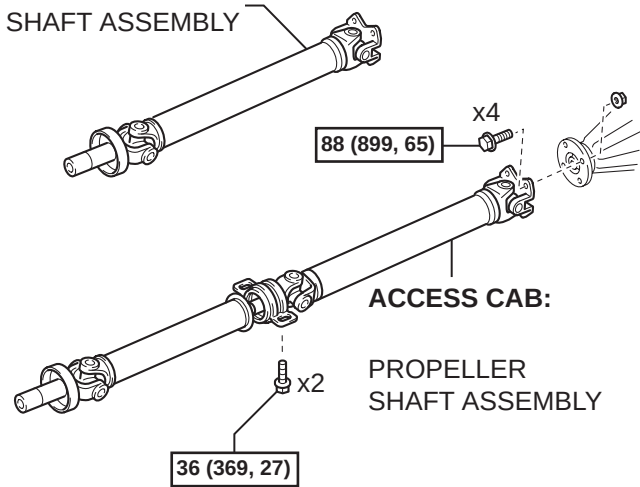
CLUTCH RELEASE
CYLINDER ASSEMBLY

ACCESS CAB:

PROPELLER
SHAFT ASSEMBLY

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

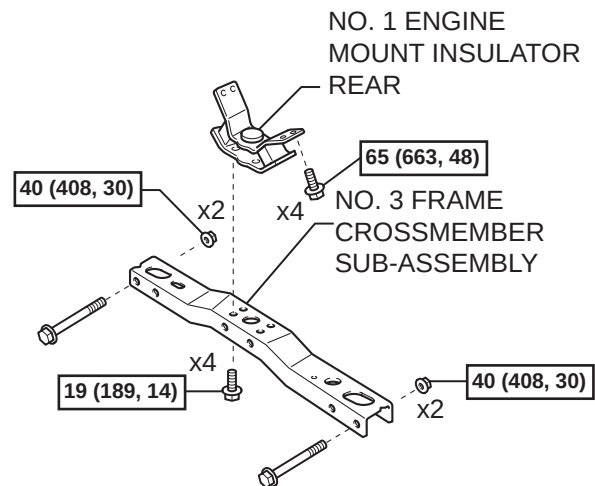NO. 1 ENGINE
MOUNT INSULATOR
REAR

65 (663, 48)

NO. 3 FRAME
CROSSMEMBER
SUB-ASSEMBLY

40 (408, 30)

19 (189, 14)

40 (408, 30)

MANUAL TRANSMISSION, 4WD:

REGULAR CAB:

PROPELLER SHAFT ASSEMBLY

FLOOR SHIFT SHIFT LEVER ASSEMBLY

CLIP

SHIFT LEVER BOOT ASSEMBLY

MANIFOLD STAY

44 (449, 33)

72 (730, 53)

30 (306, 22)

STARTER ASSEMBLY

MANUAL TRANSMISSION UNIT ASSEMBLY

CLUTCH RELEASE CYLINDER ASSEMBLY

PROPELLER SHAFT ASSEMBLY FRONT


ACCESS CAB:

PROPELLER SHAFT ASSEMBLY


TRANSFER ASSEMBLY

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

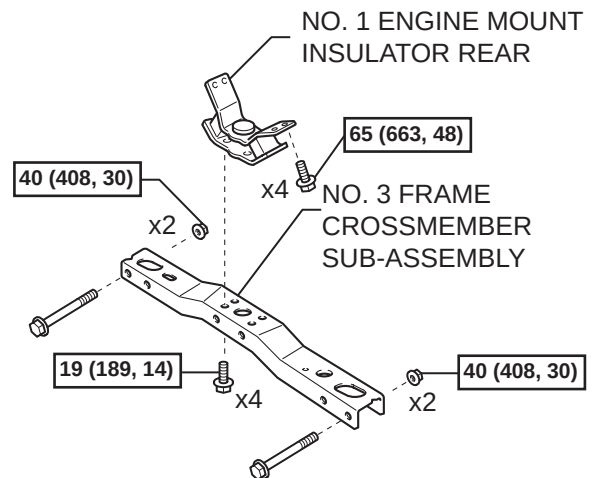

MANUAL TRANSMISSION:

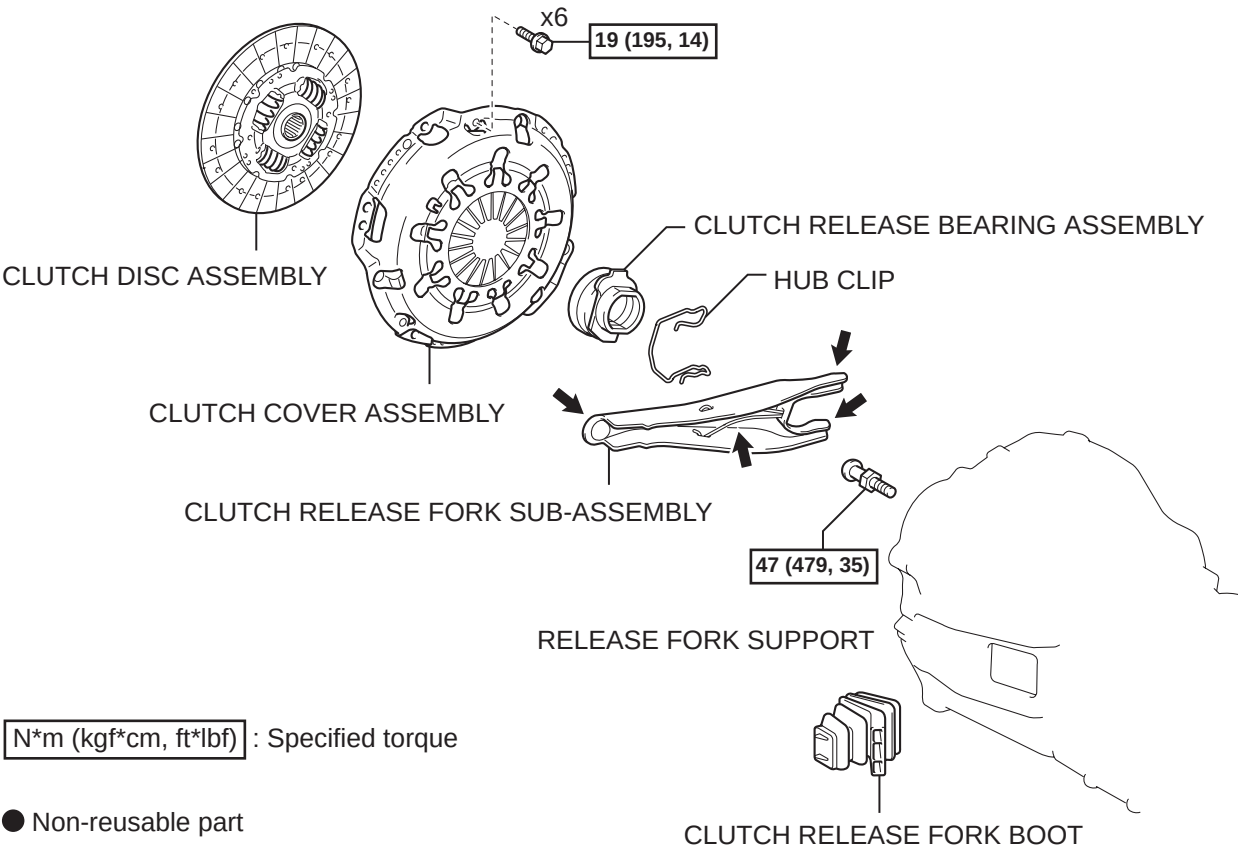


N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part


← Release hub grease


Y

A113651E01

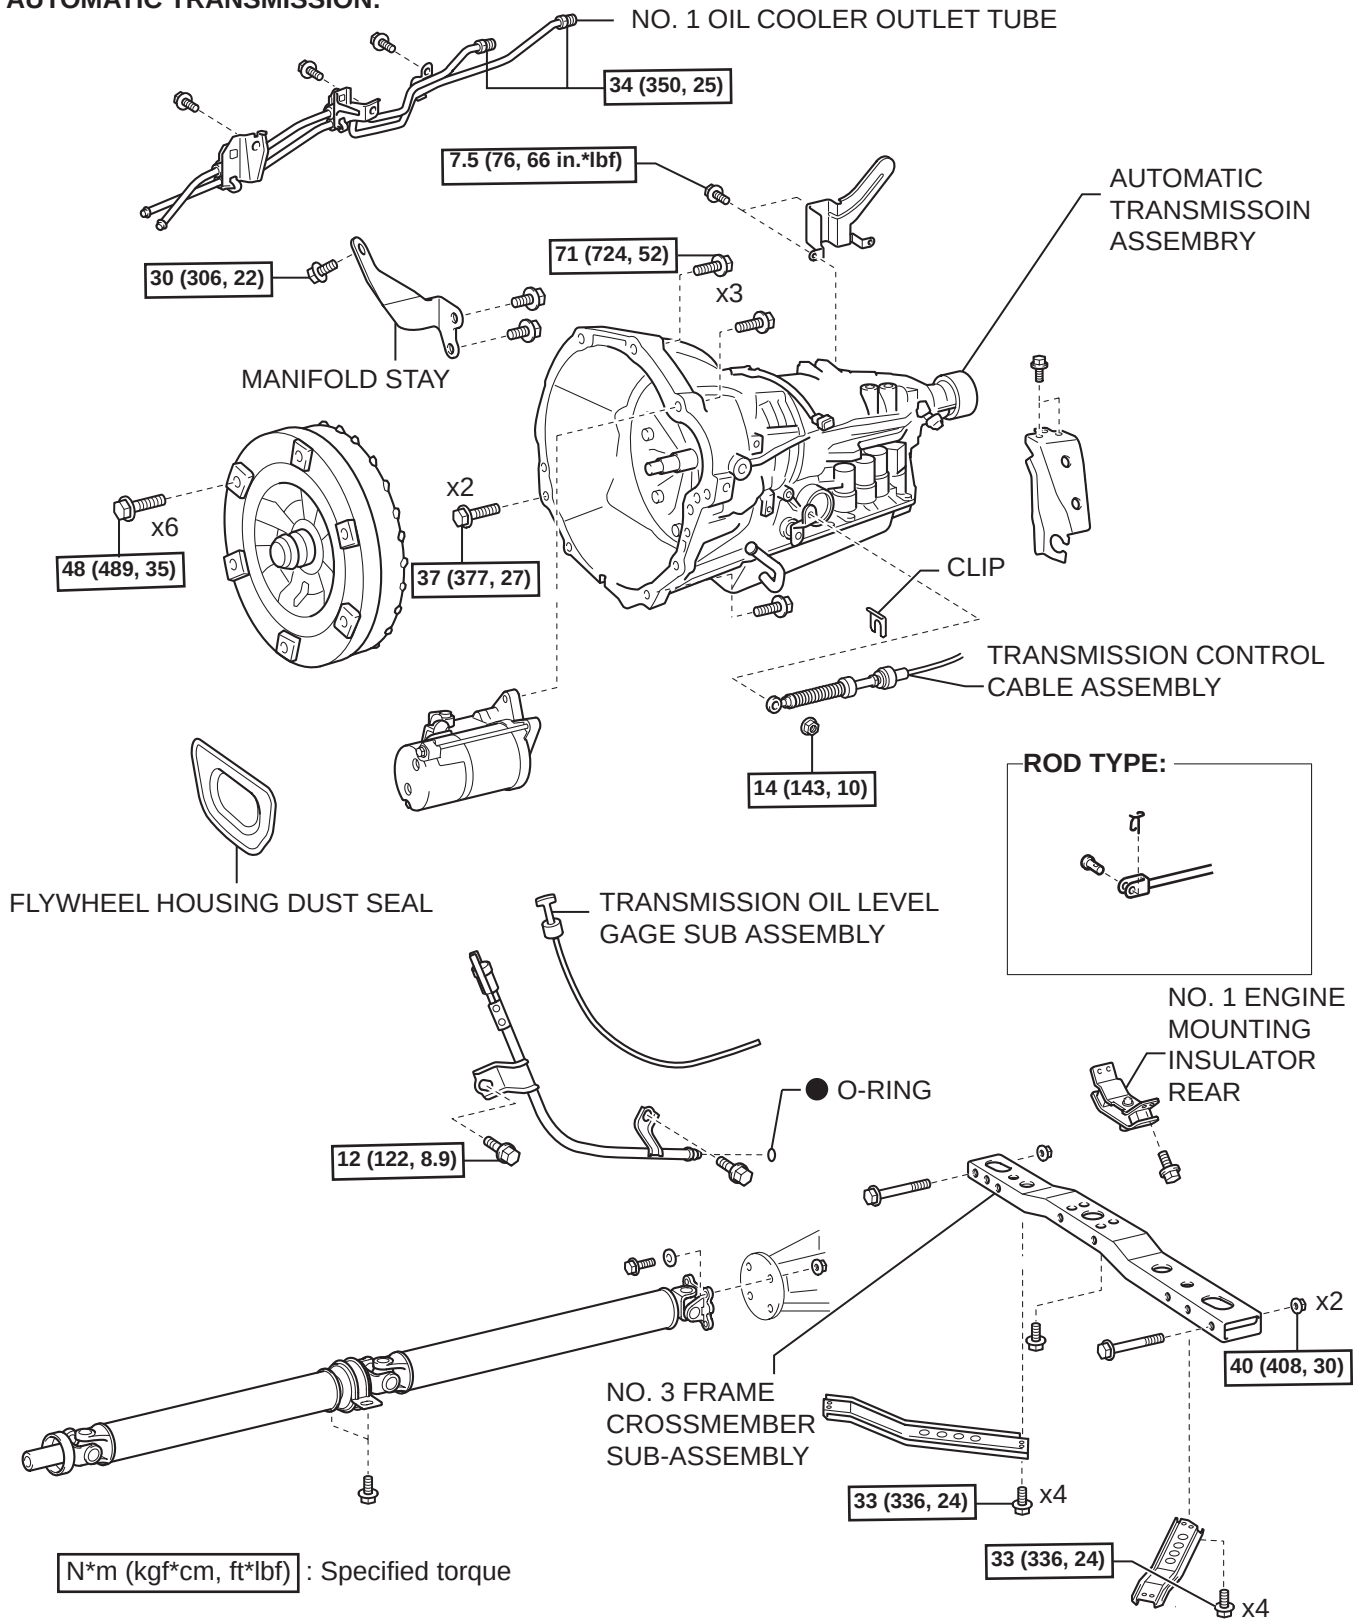AUTOMATIC TRANSMISSION:


AUTOMATIC TRANSMISSION:

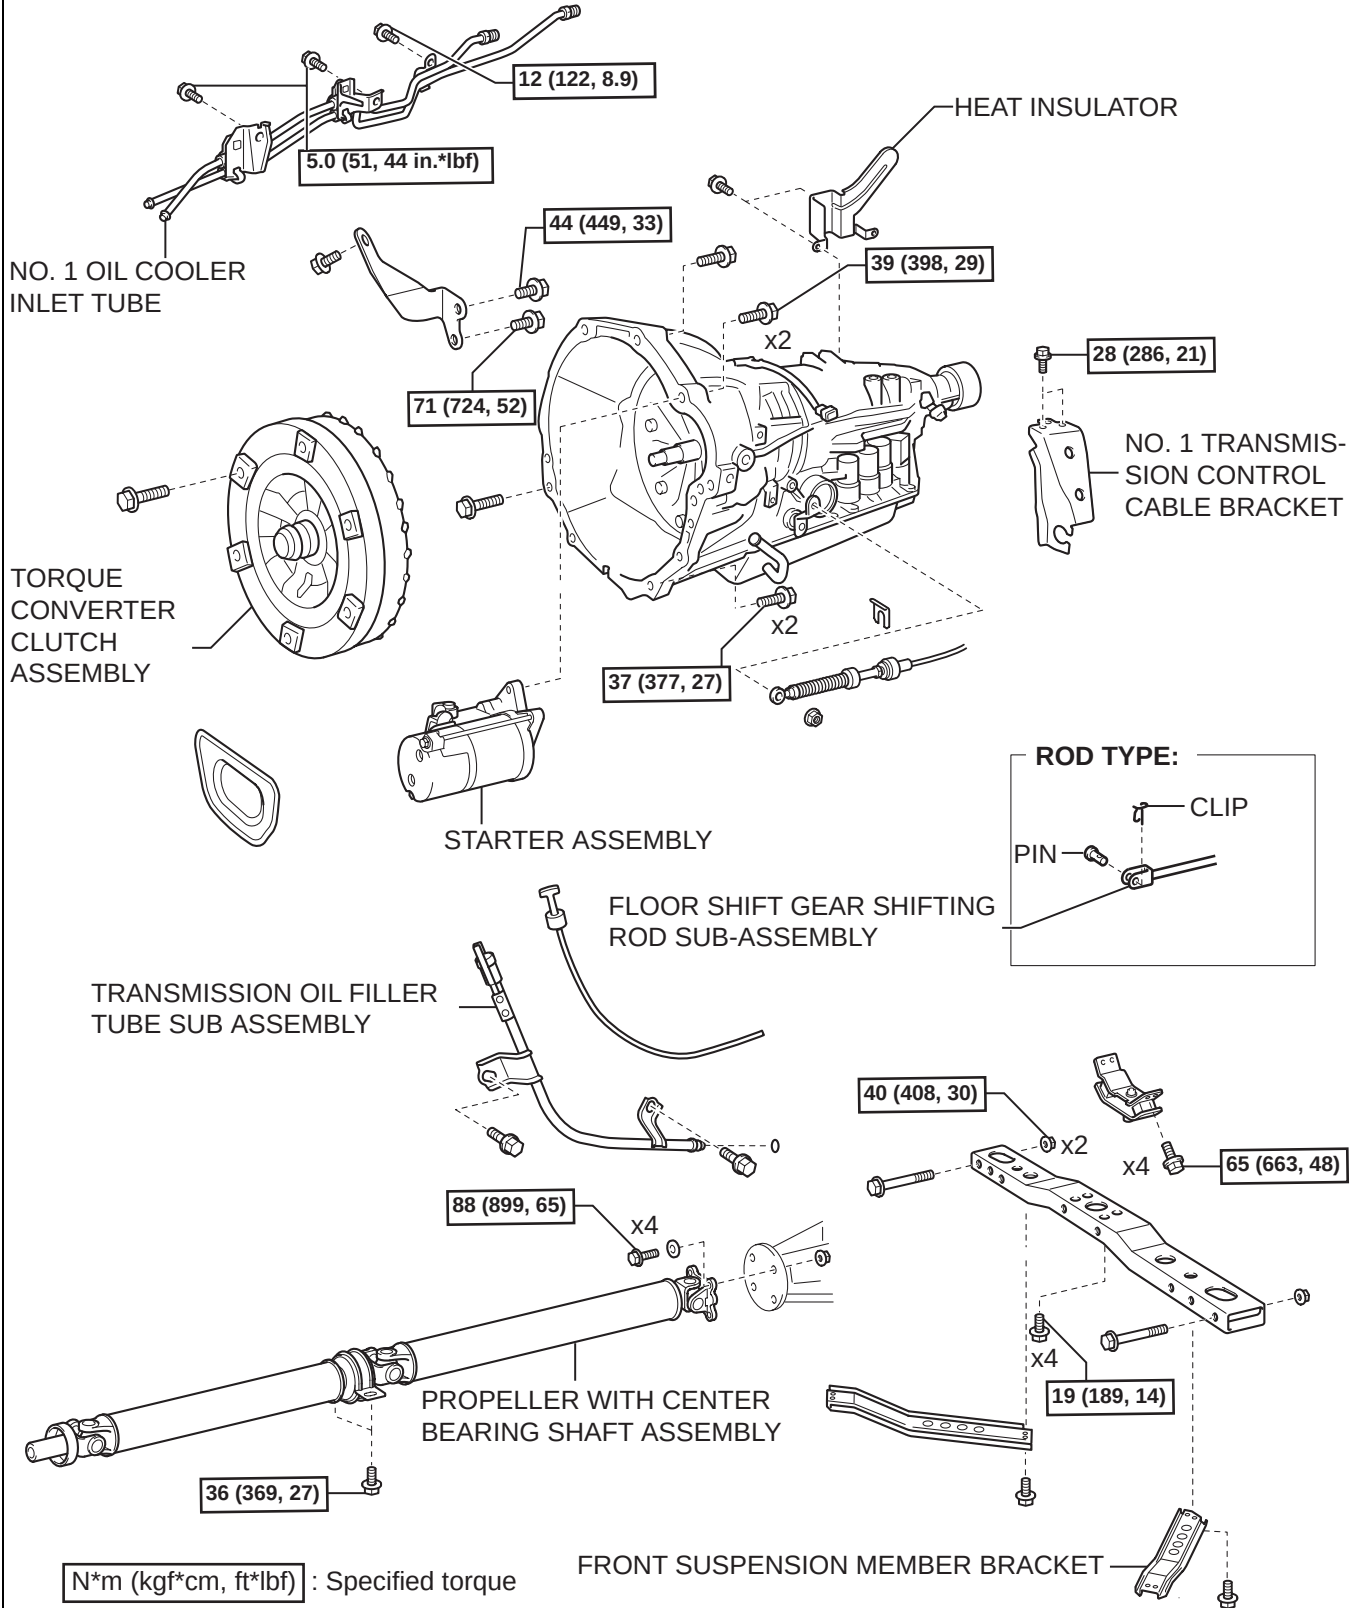

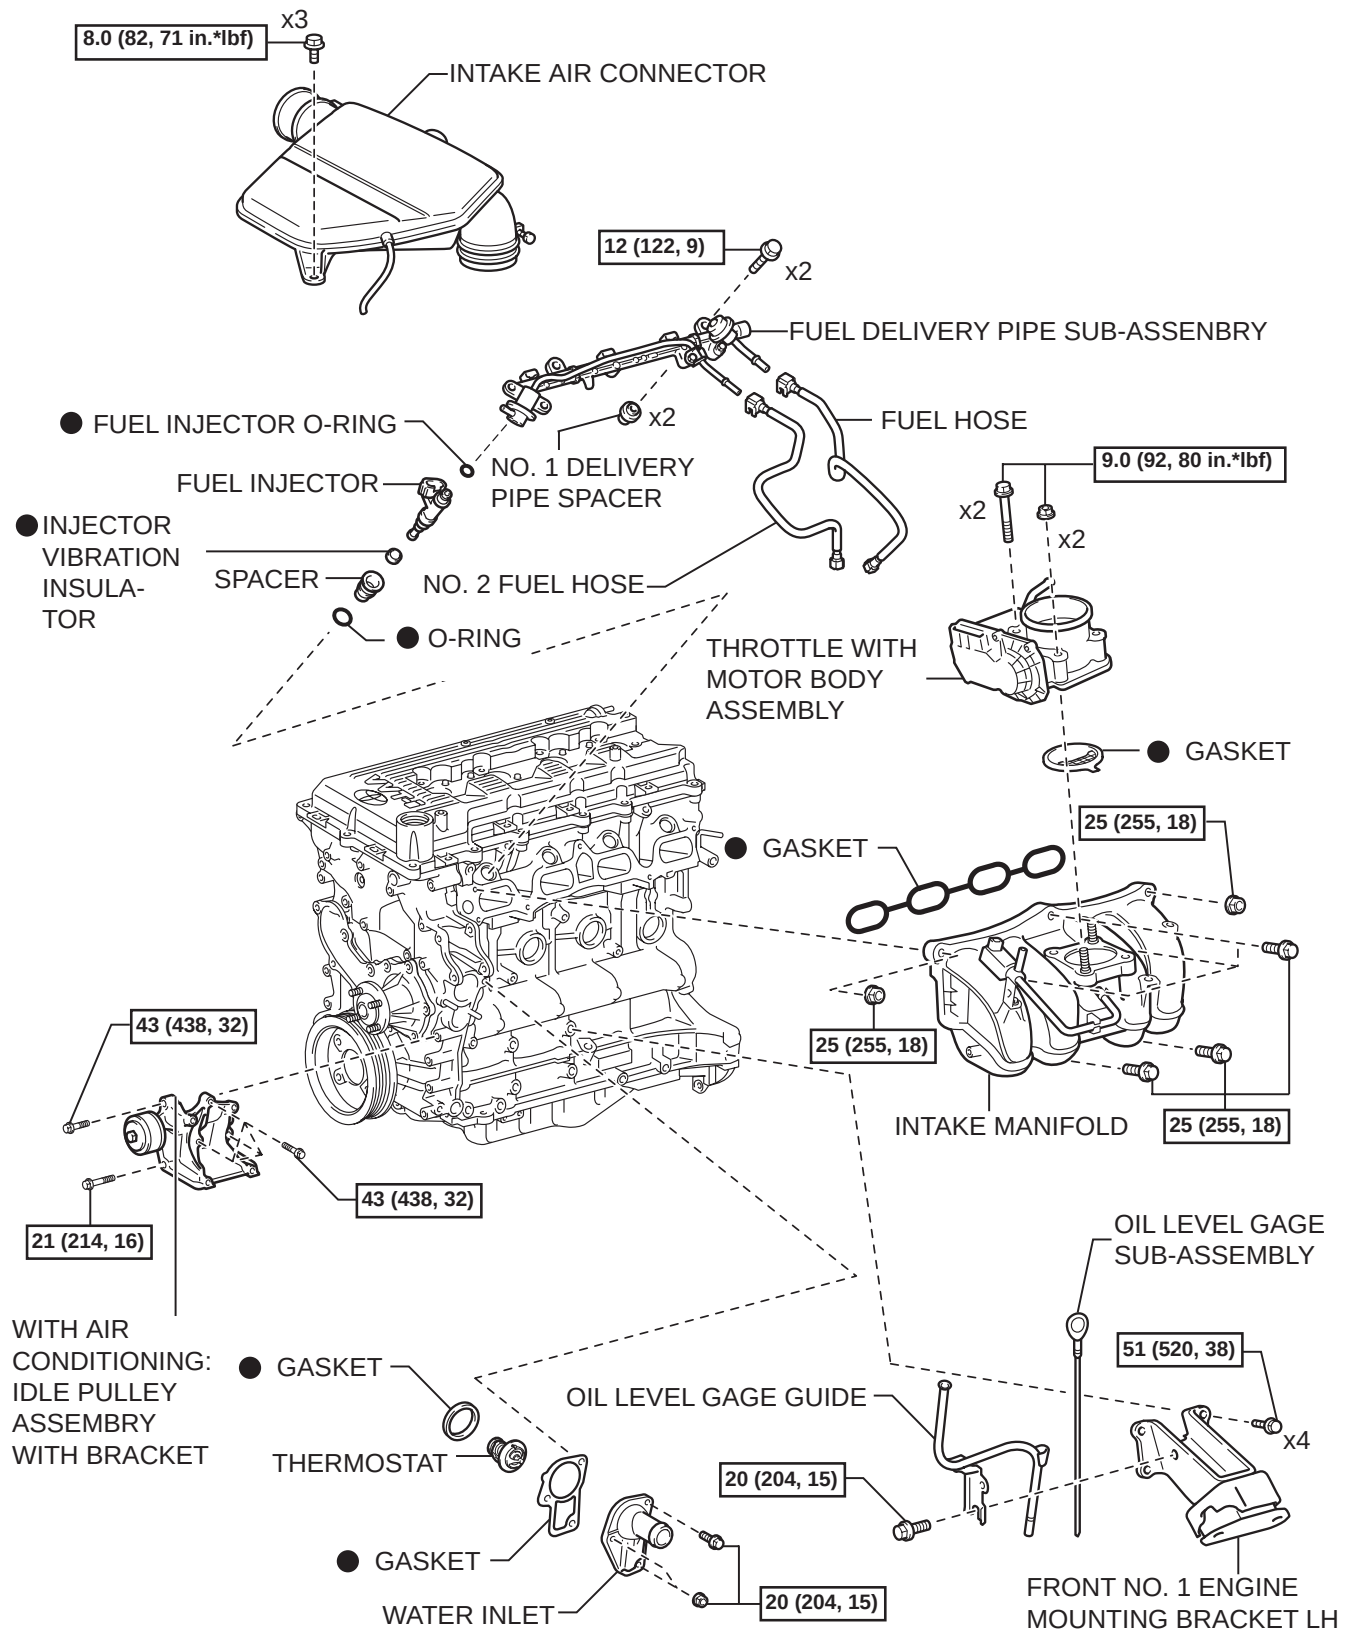

N*m (kgf*cm, ft*lbf) : Specified torque ● Non-reusable part

EM

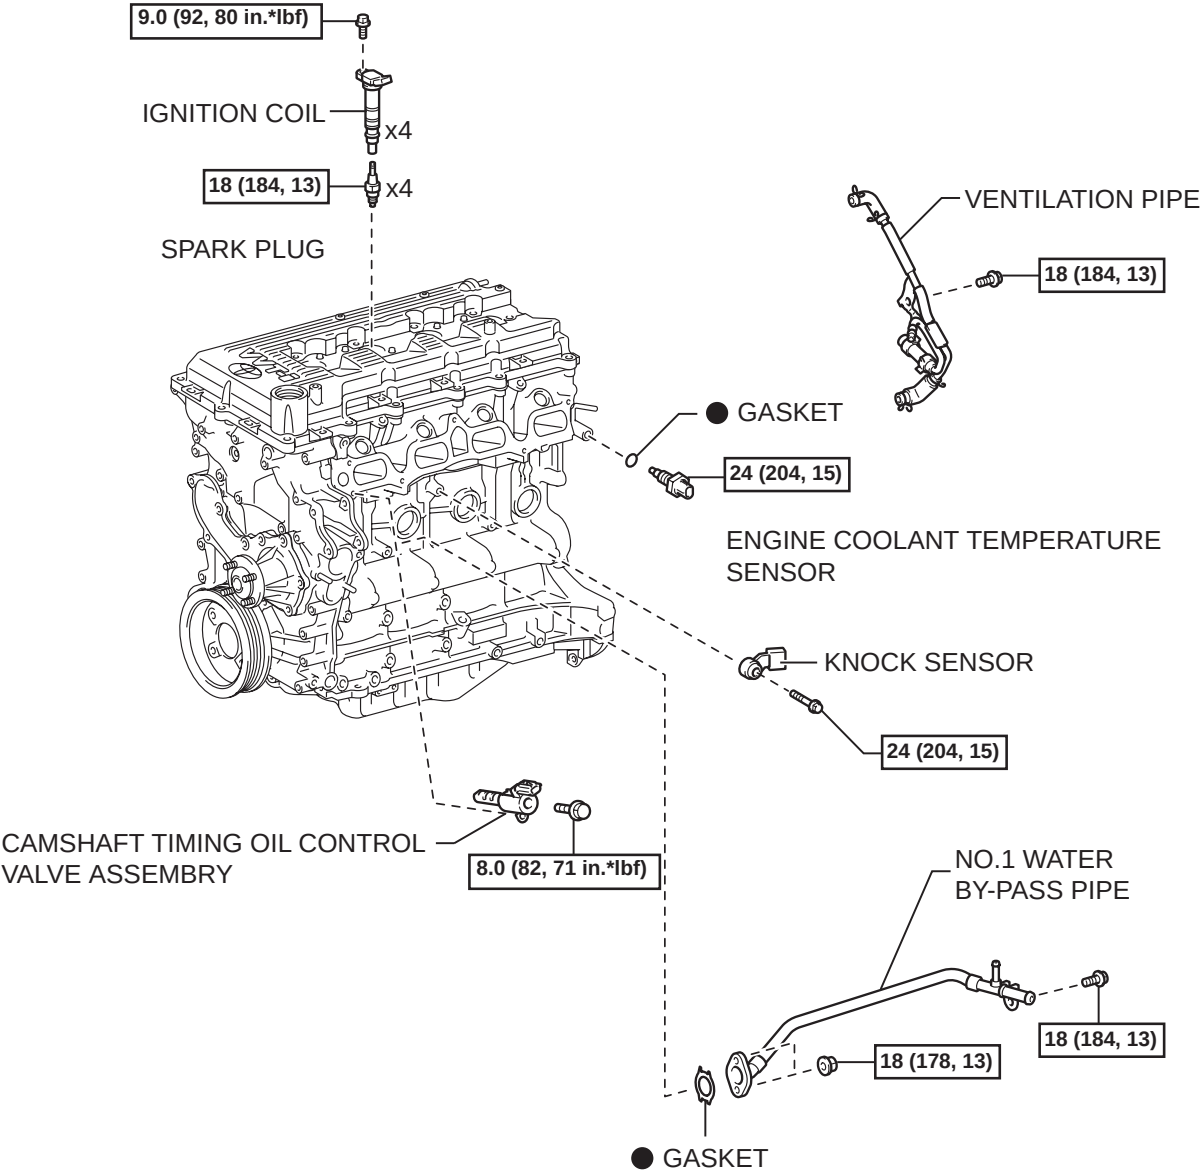

N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

