



OIL PUMP

COMPONENTS

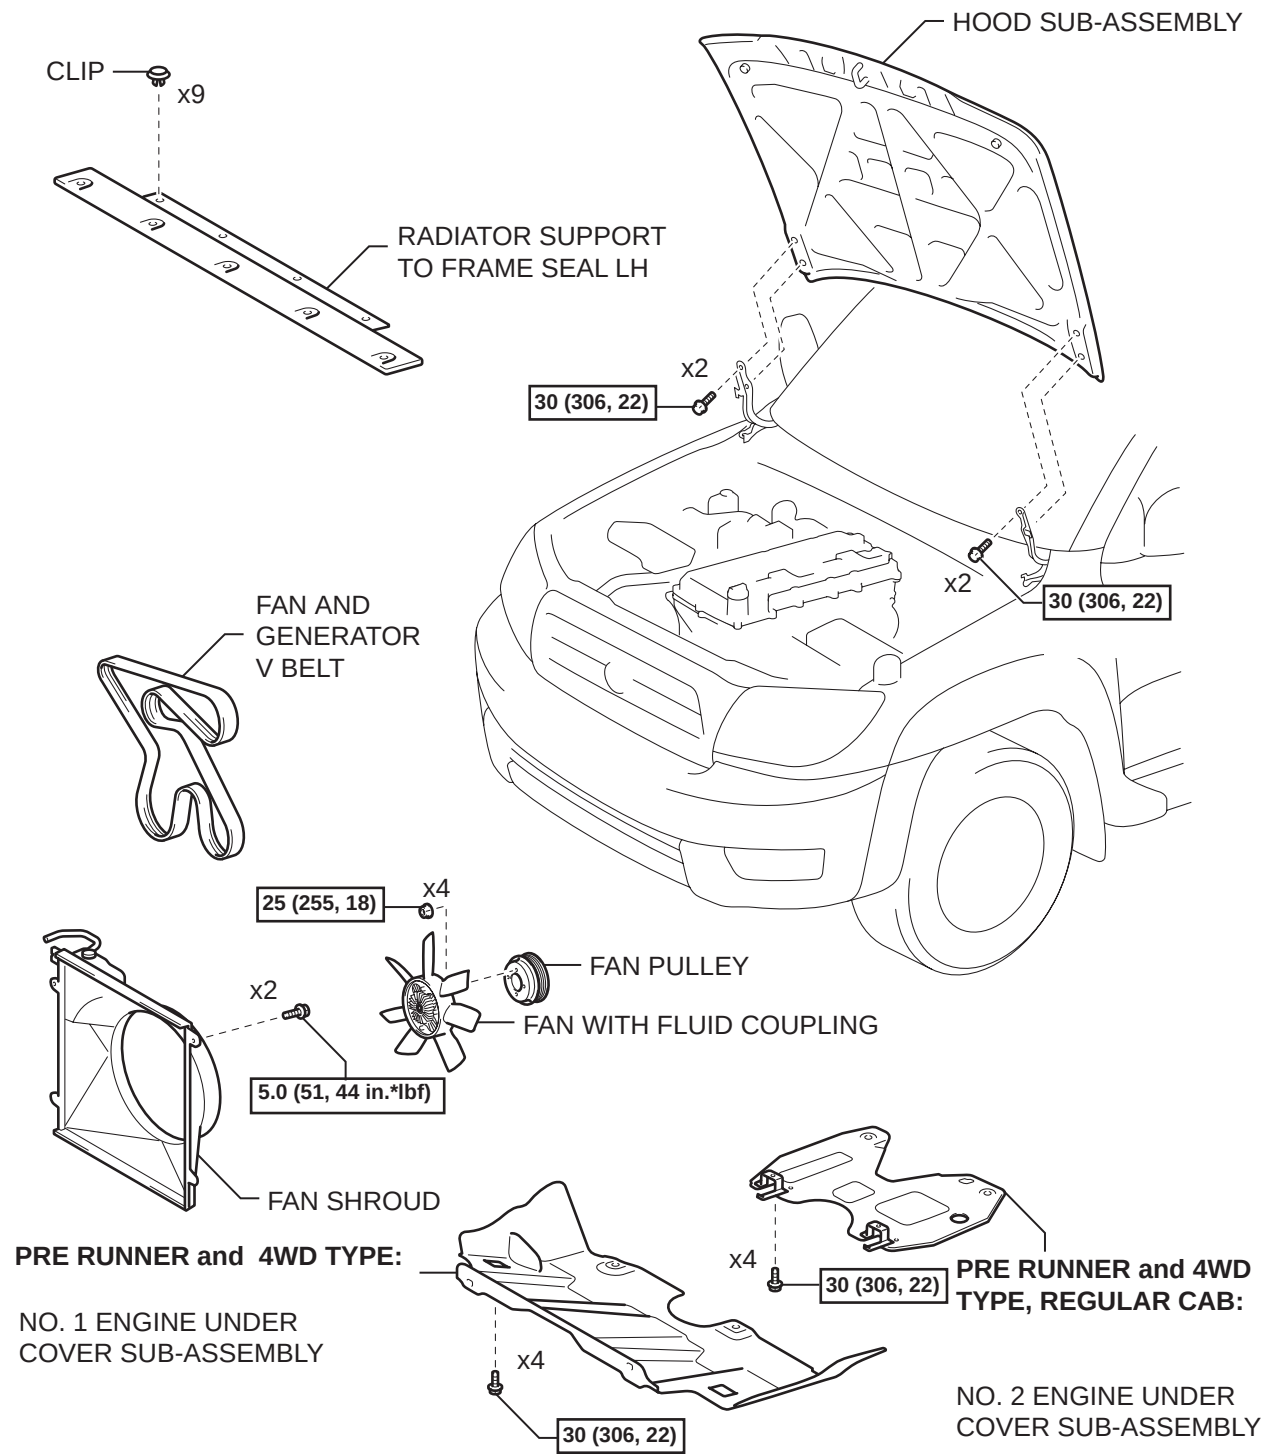

N*m (kgf*cm, ft*lbf) : Specified torque





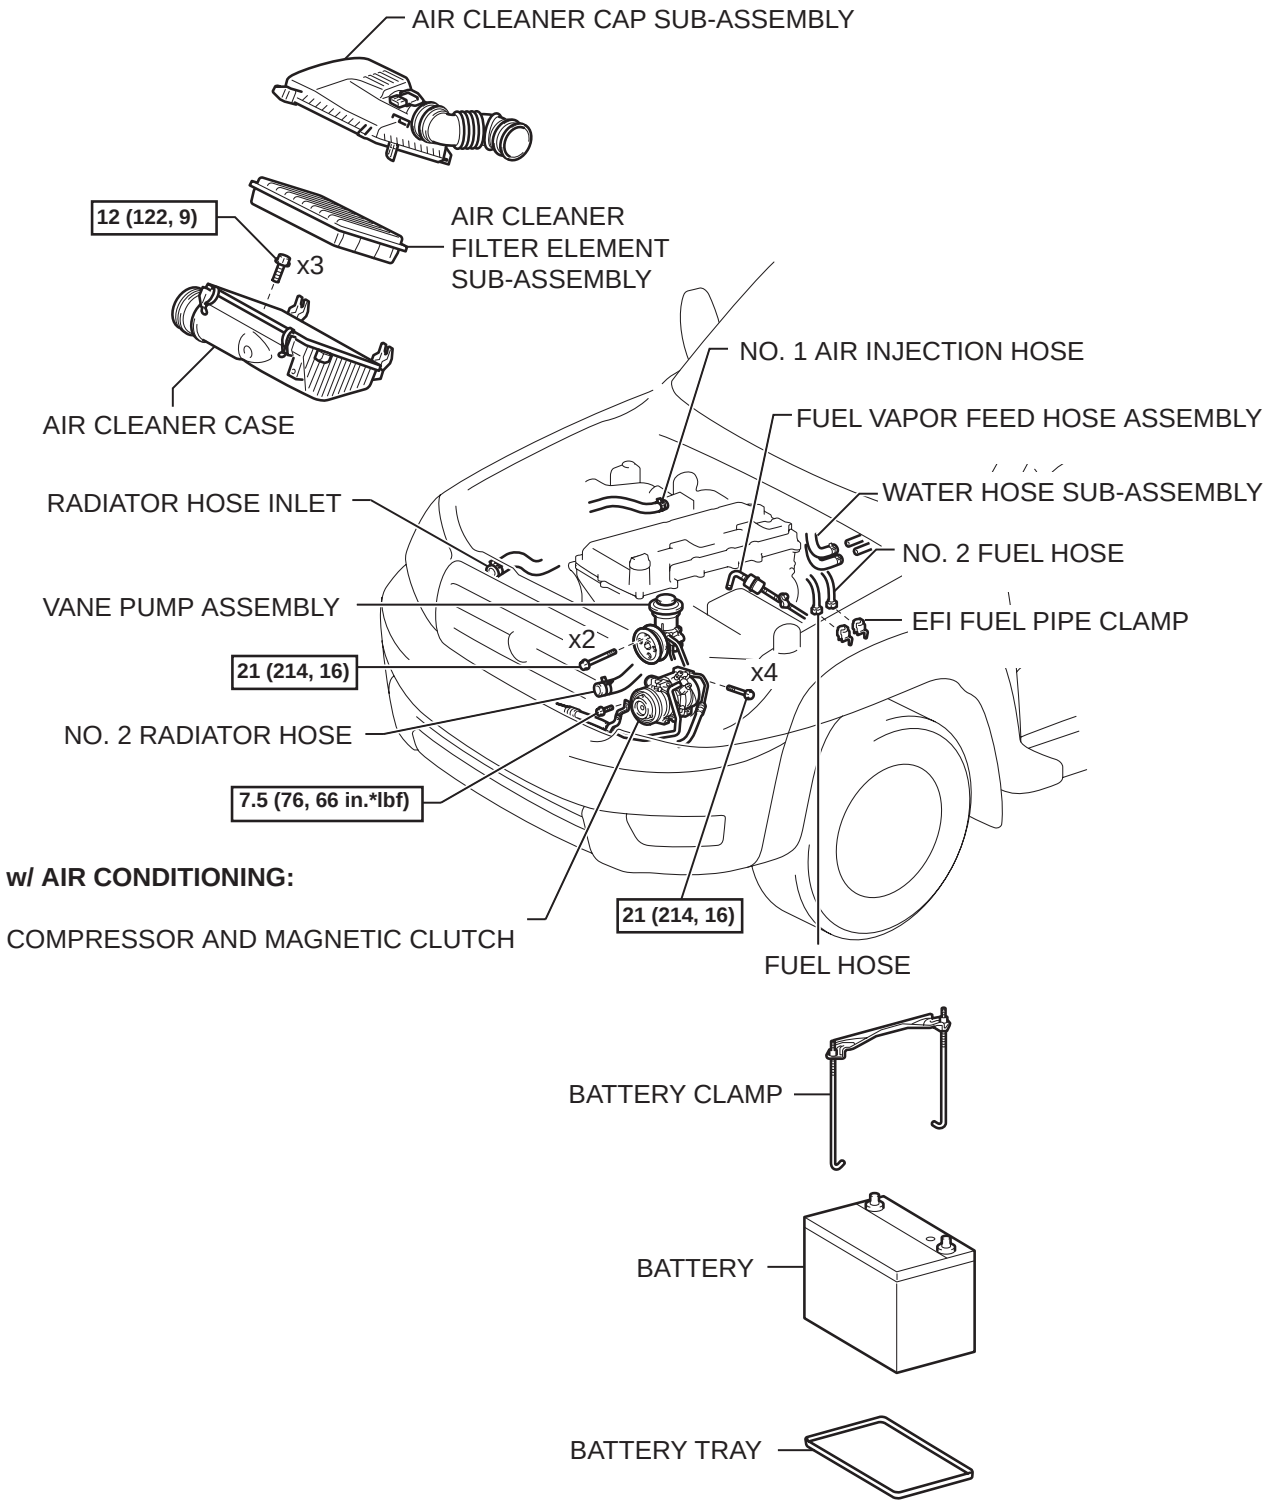

w/ AIR CONDITIONING:

COMPRESSOR AND MAGNETIC CLUTCH

N*m (kgf*cm, ft*lbf) : Specified torque

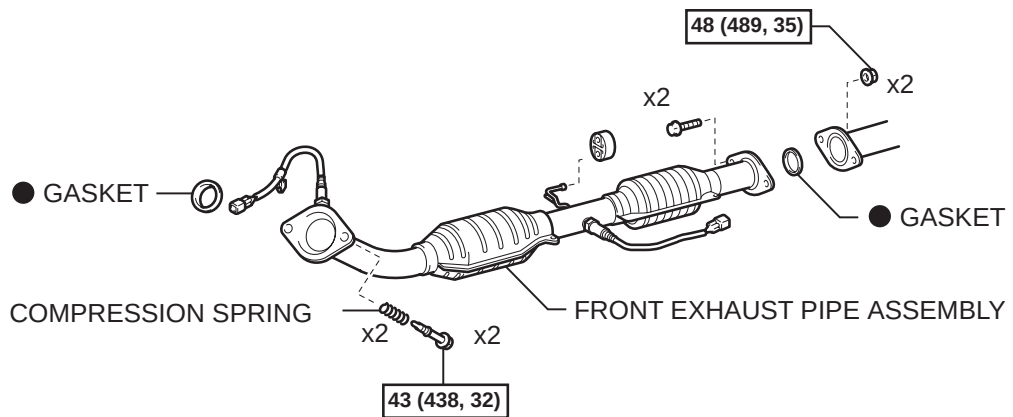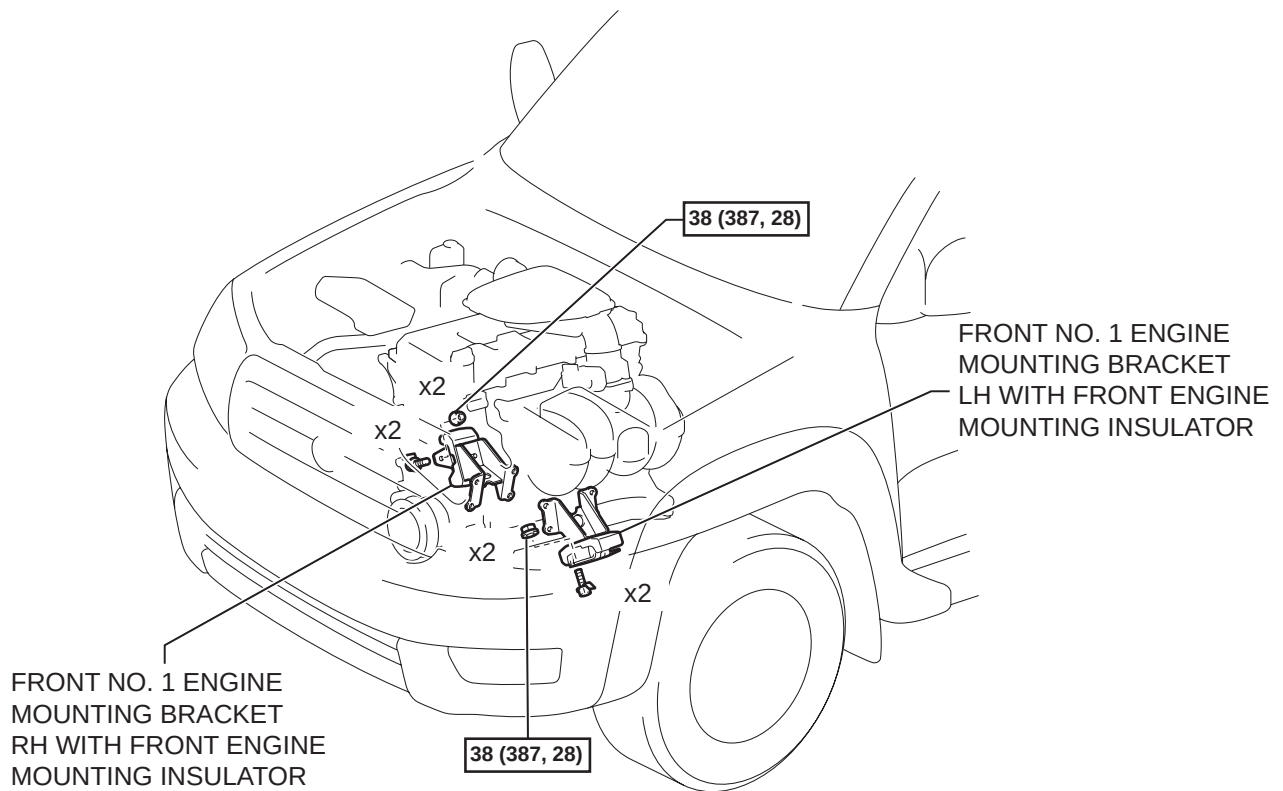

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part



MANUAL TRANSMISSION, 2WD:

REGULAR CAB:

PROPELLER SHAFT ASSEMBLY

FLOOR SHIFT SHIFT LEVER ASSEMBLY

CLIP

SHIFT LEVER BOOT ASSEMBLY

MANIFOLD STAY

44 (449, 33)

72 (730, 53)


30 (306, 22)

37 (379, 27)

MANUAL TRANSMISSION UNIT ASSEMBLY


STARTER ASSEMBLY

CLUTCH RELEASE CYLINDER ASSEMBLY

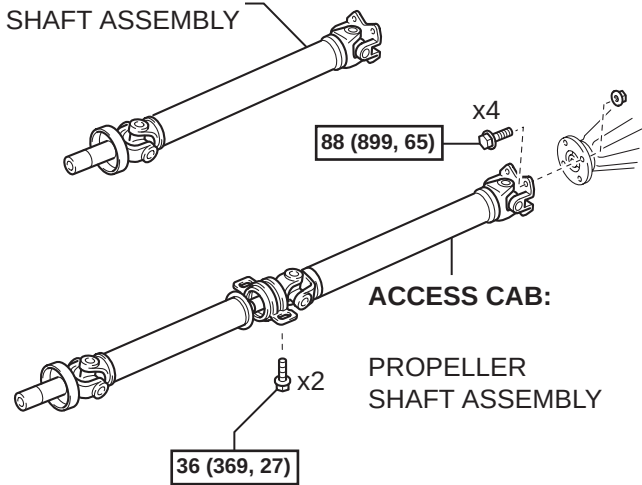

ACCESS CAB:

PROPELLER SHAFT ASSEMBLY

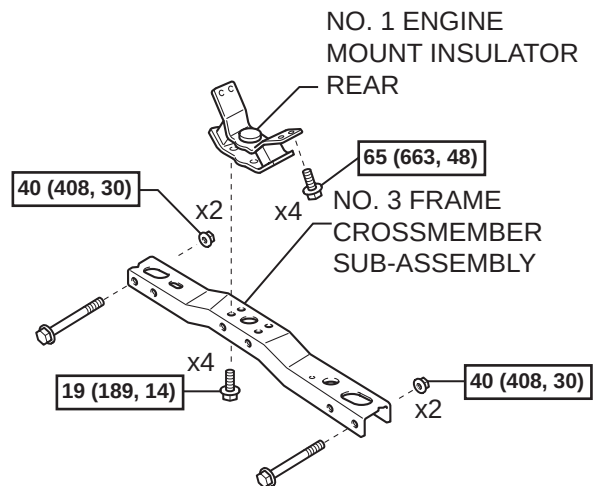

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

MANUAL TRANSMISSION, 4WD:

REGULAR CAB:

PROPELLER SHAFT ASSEMBLY

FLOOR SHIFT SHIFT LEVER ASSEMBLY

CLIP

SHIFT LEVER BOOT ASSEMBLY

MANIFOLD STAY

44 (449, 33)

72 (730, 53)

30 (306, 22)

STARTER ASSEMBLY

MANUAL TRANSMISSION UNIT ASSEMBLY

CLUTCH RELEASE CYLINDER ASSEMBLY

TRANSFER ASSEMBLY


PROPELLER SHAFT ASSEMBLY FRONT

ACCESS CAB:


PROPELLER SHAFT ASSEMBLY

N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

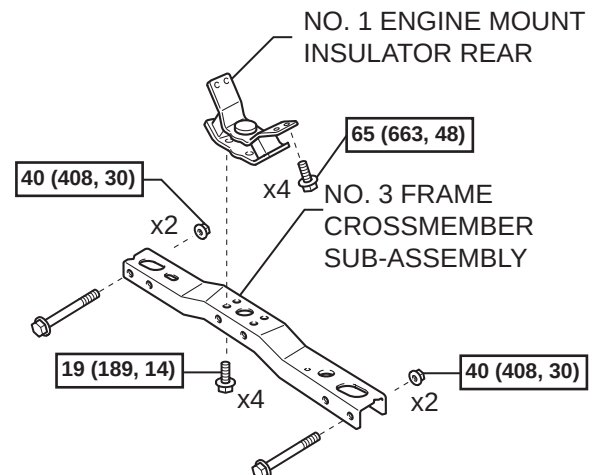

MANUAL TRANSMISSION:

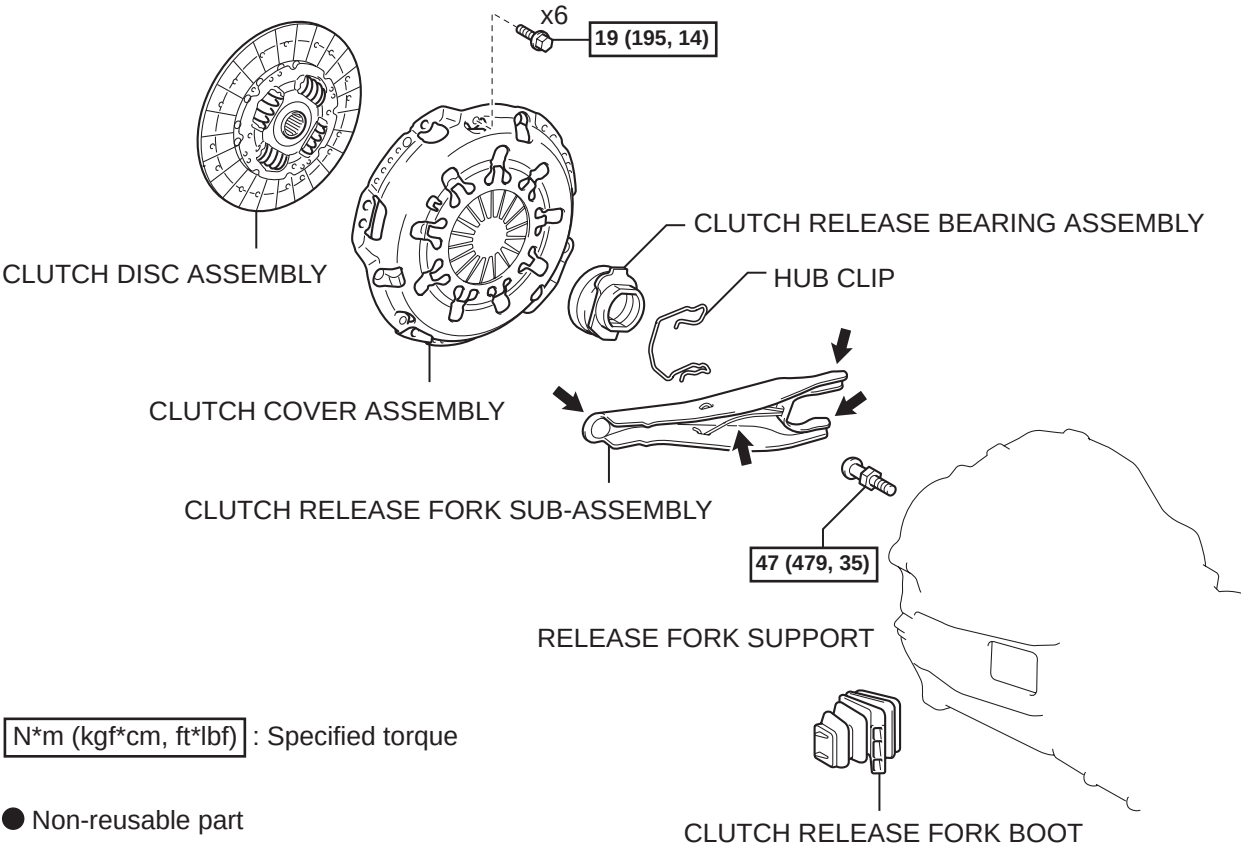


N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

← Release hub grease


AUTOMATIC TRANSMISSION:


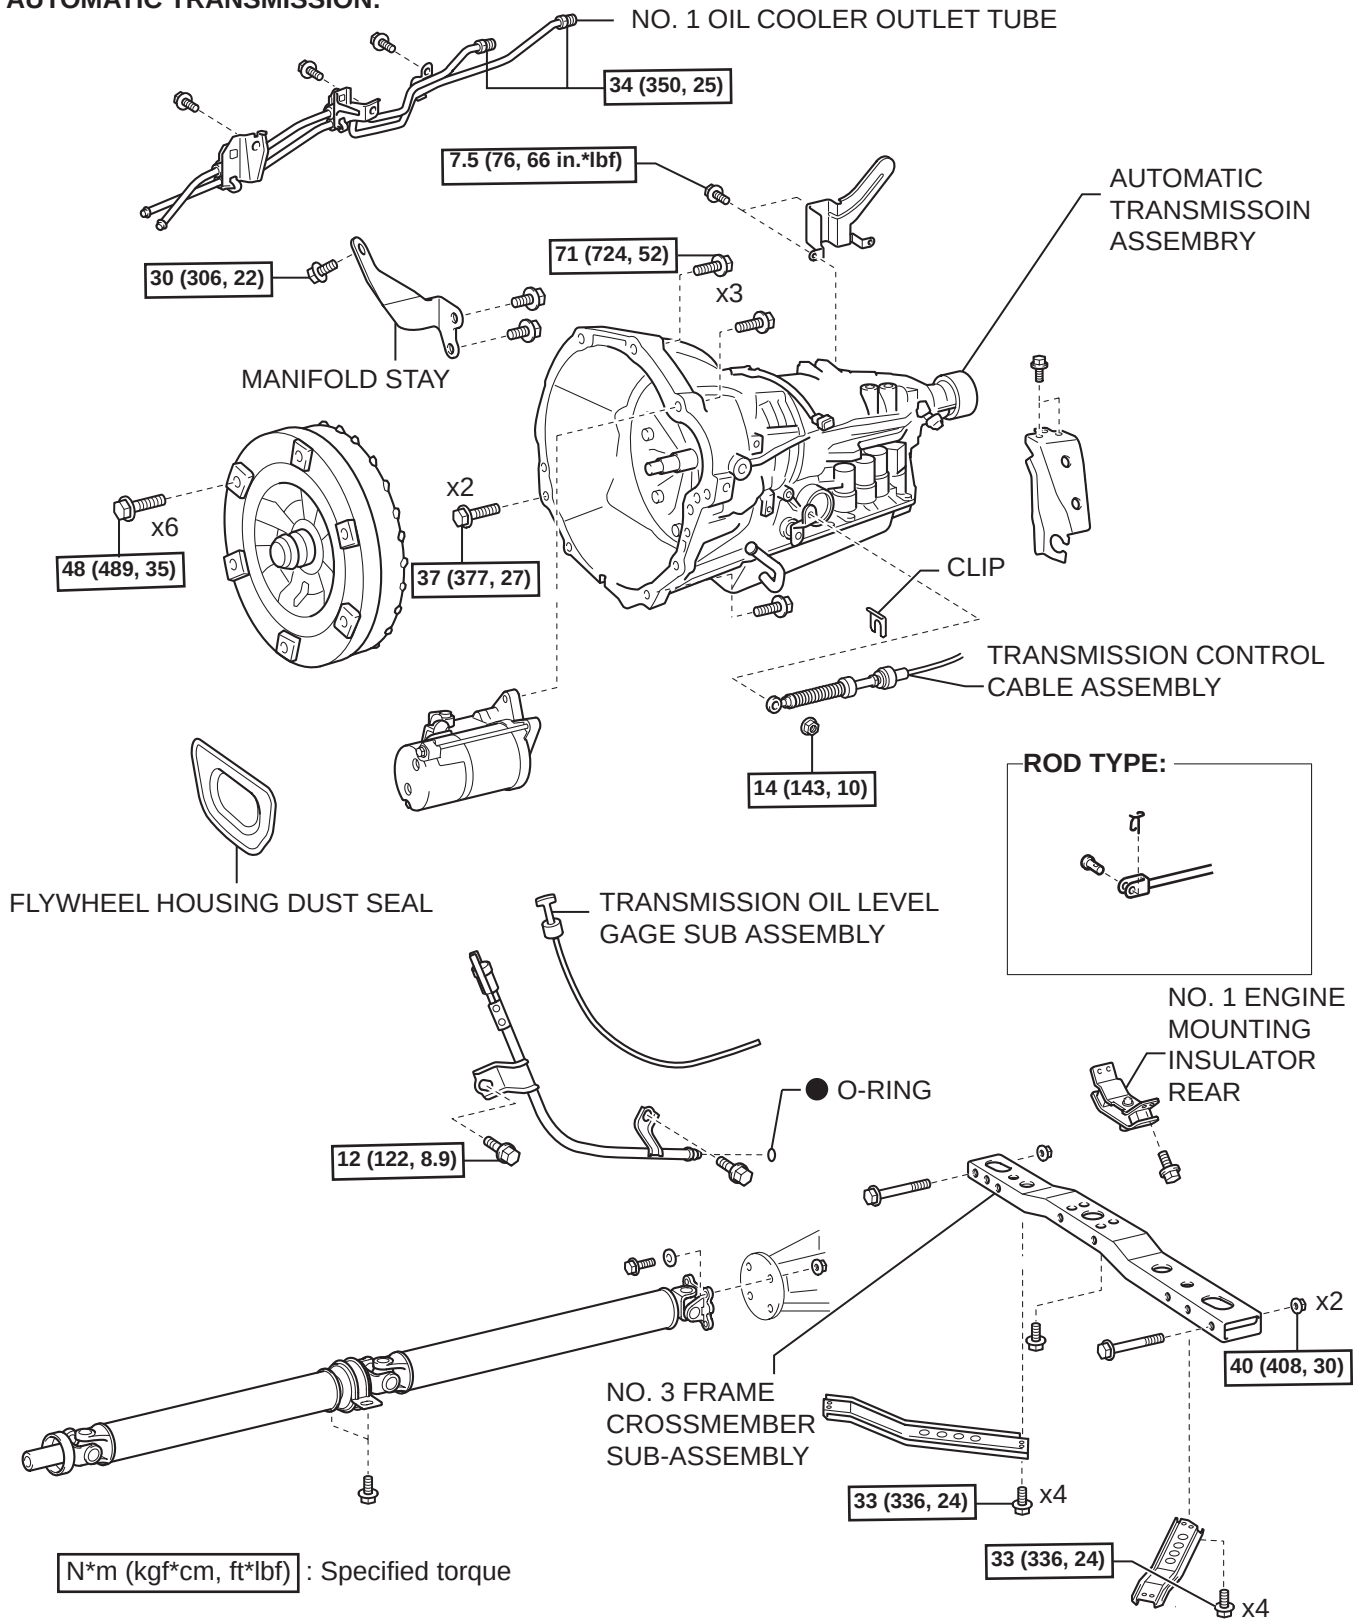


Y

A113552E01


AUTOMATIC TRANSMISSION:

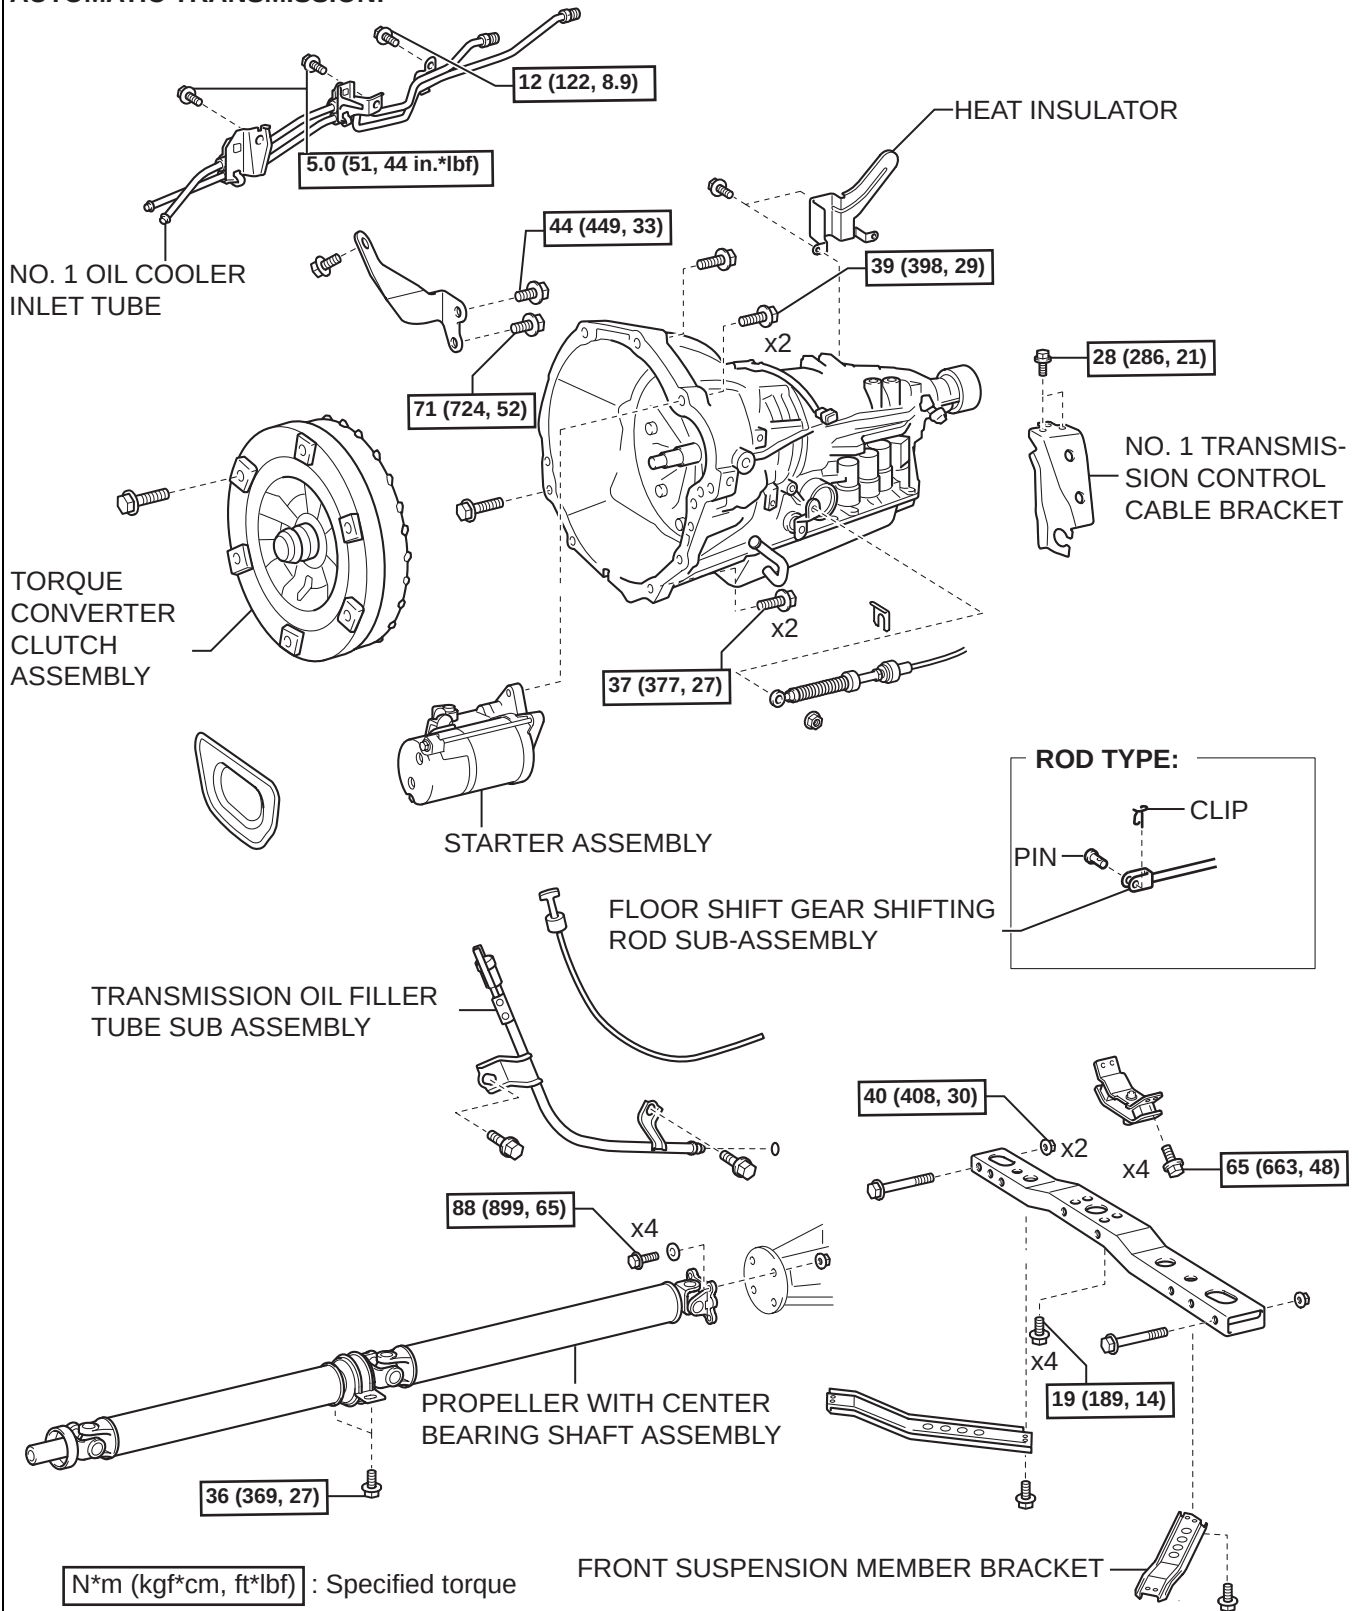

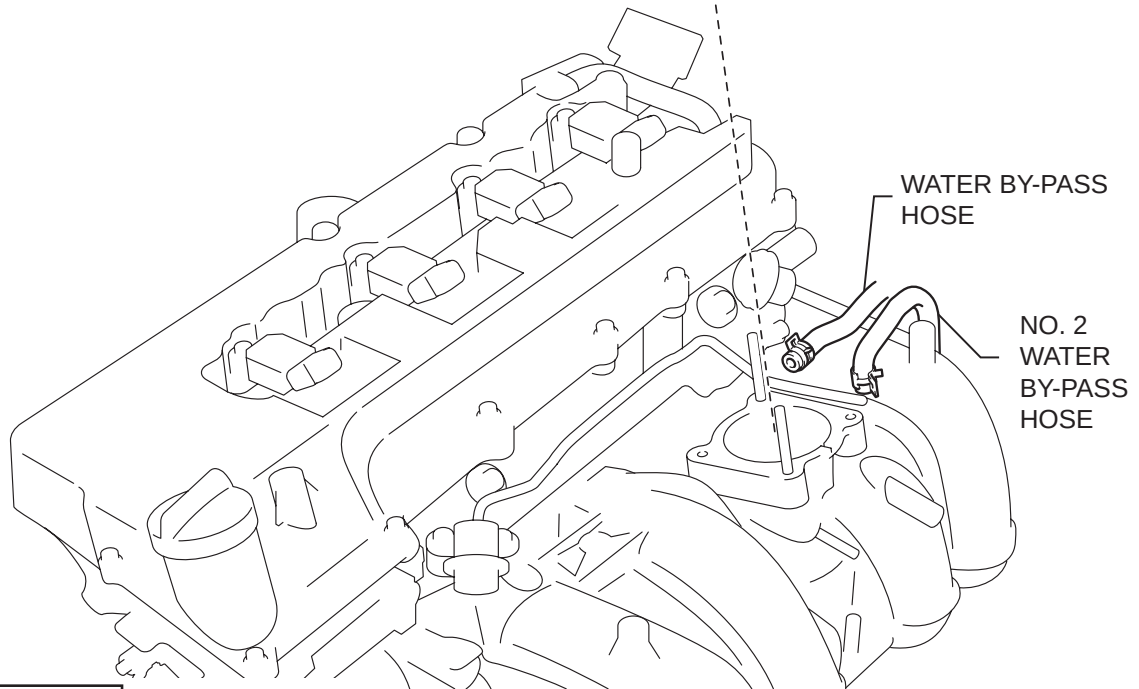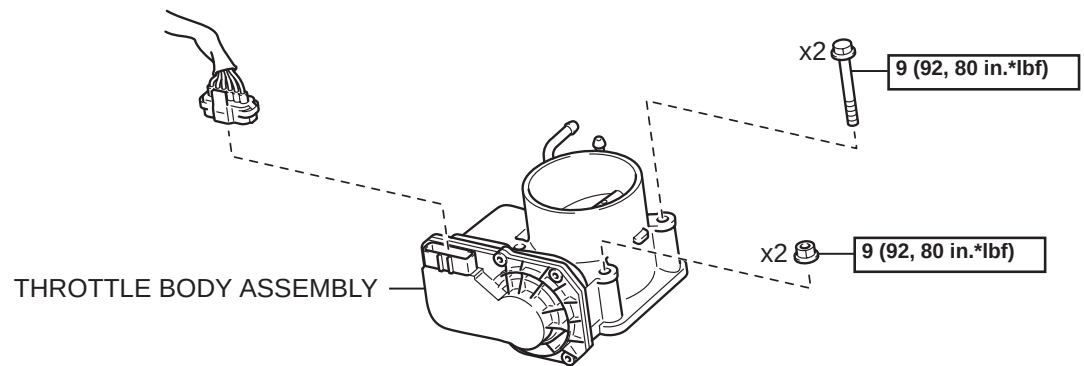


N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

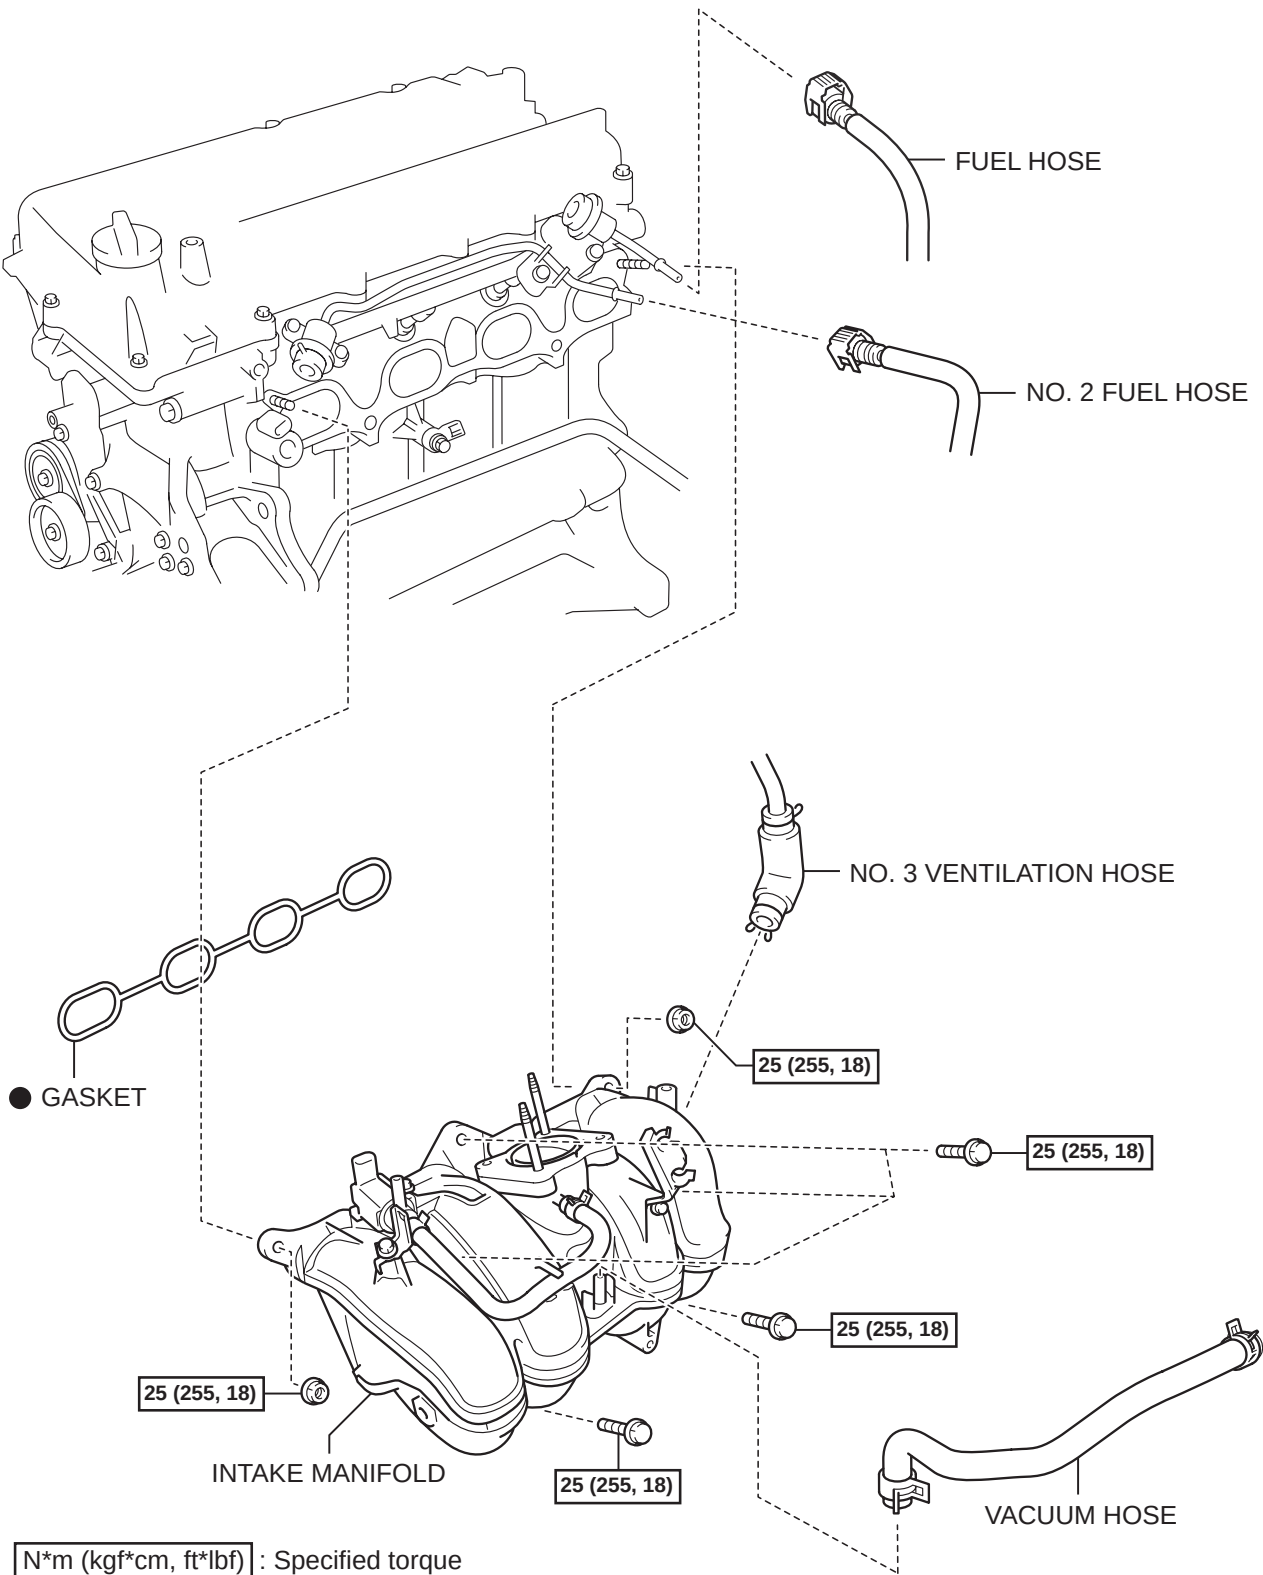


N*m (kgf*cm, ft*lb) : Specified torque

● Non-reusable part

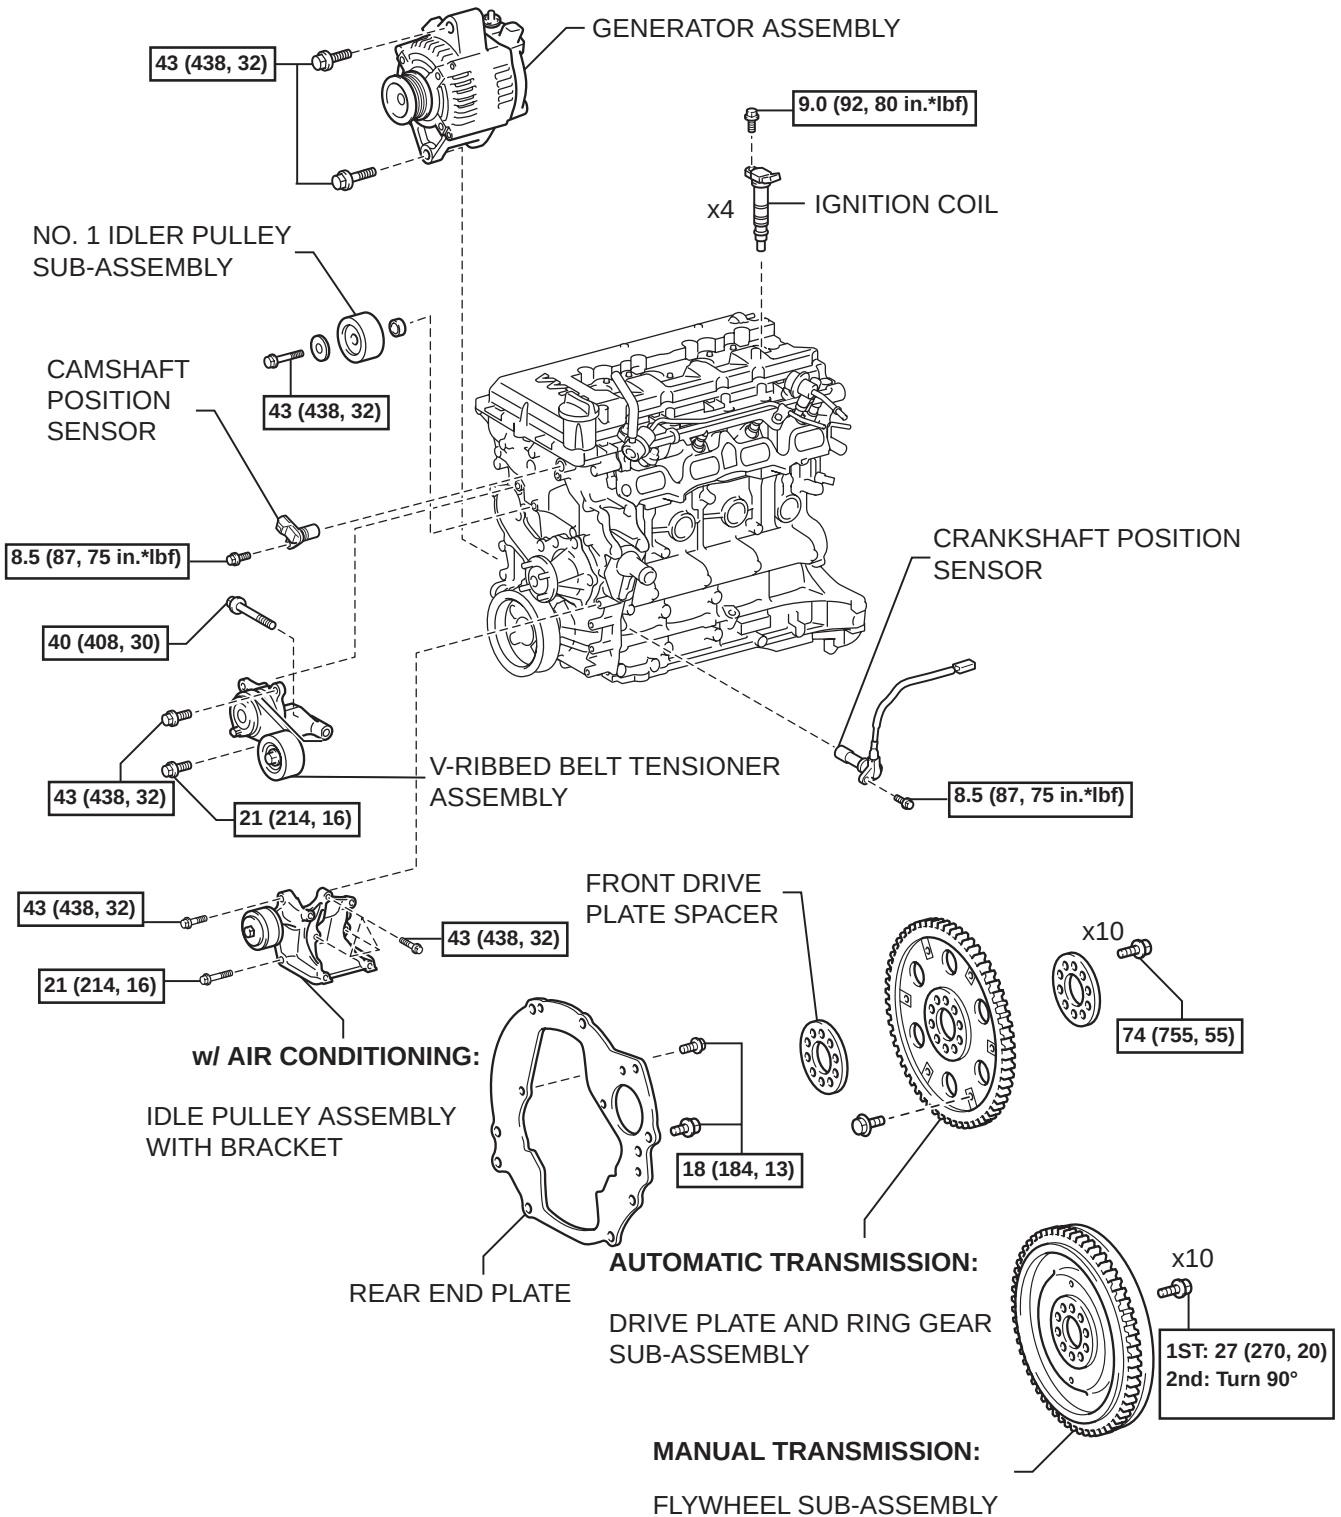


N*m (kgf*cm, ft*lbf) : Specified torque

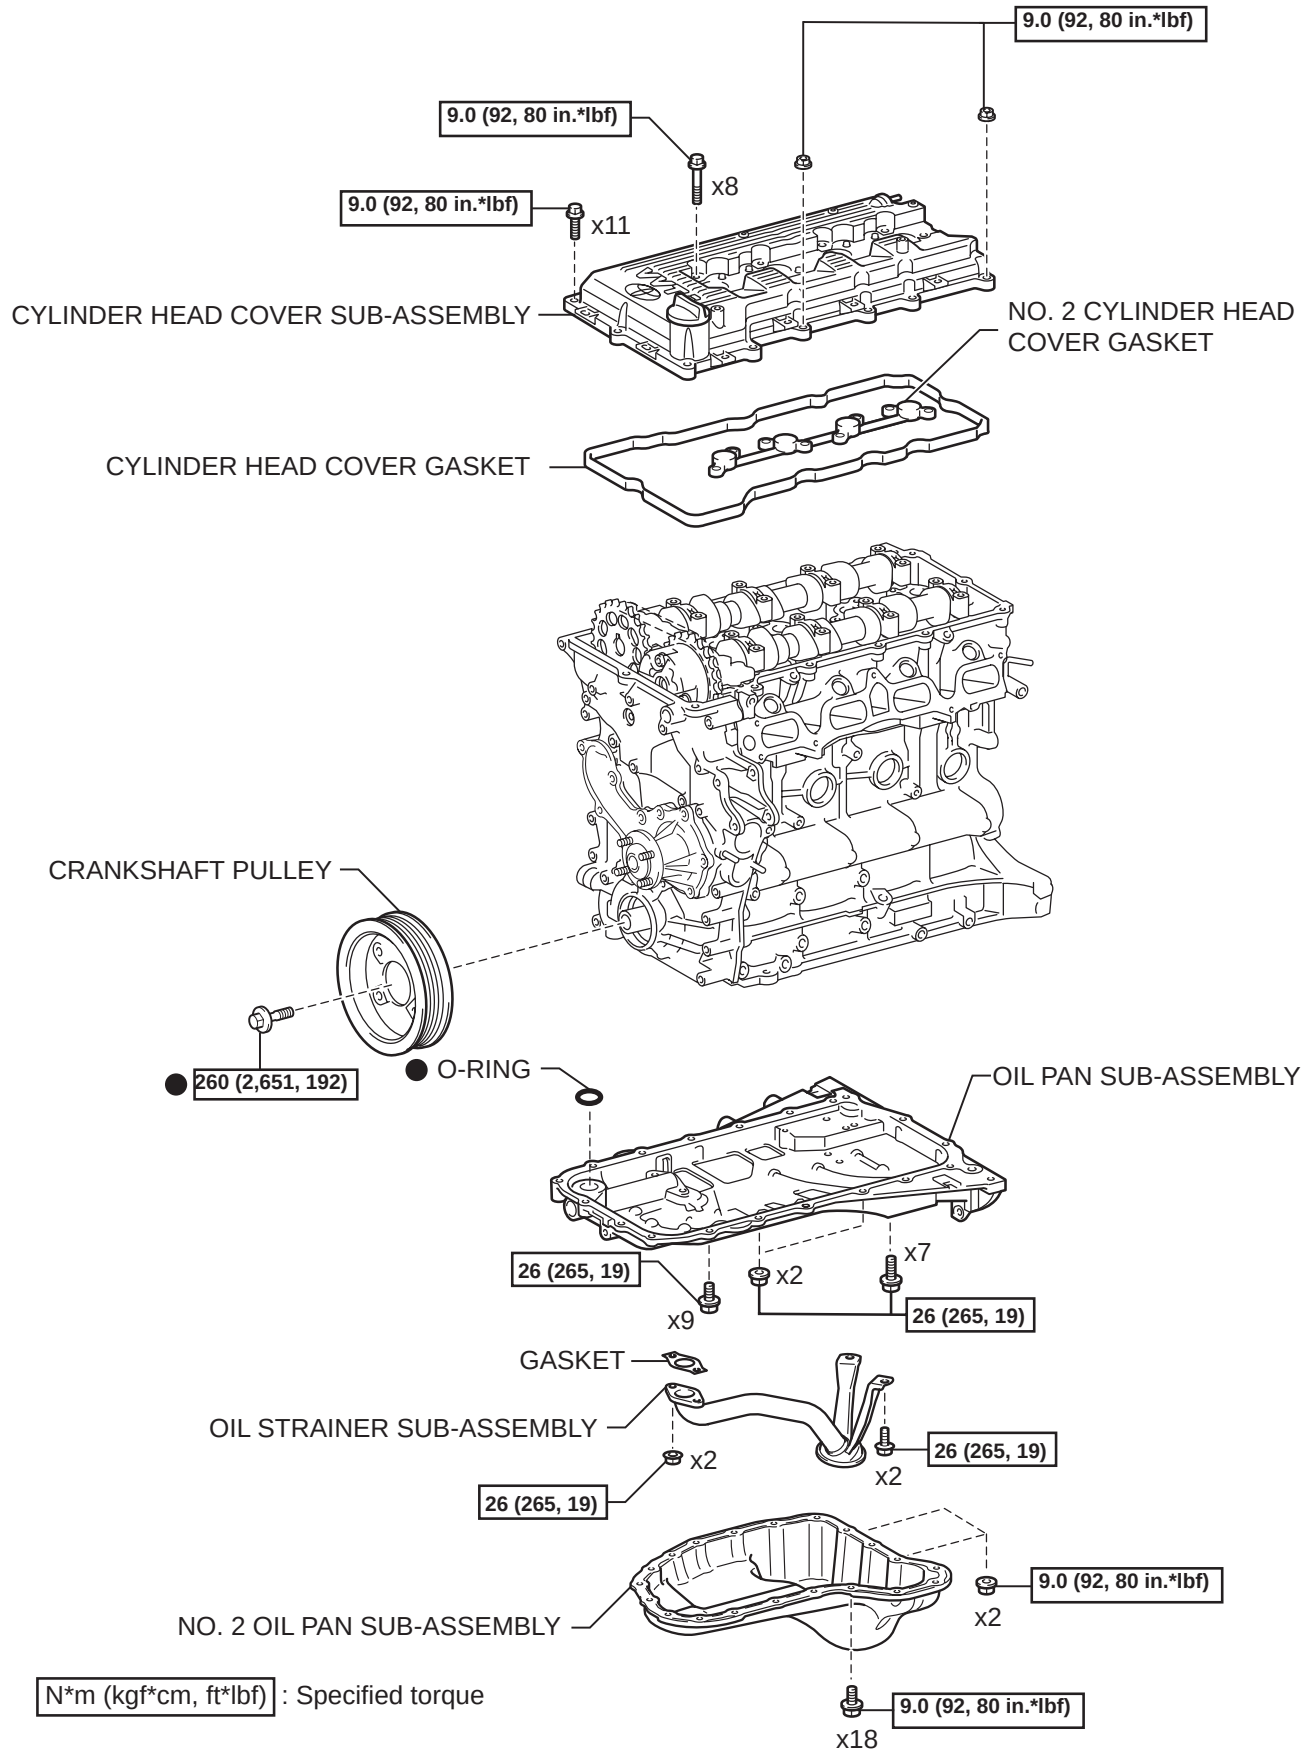

N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

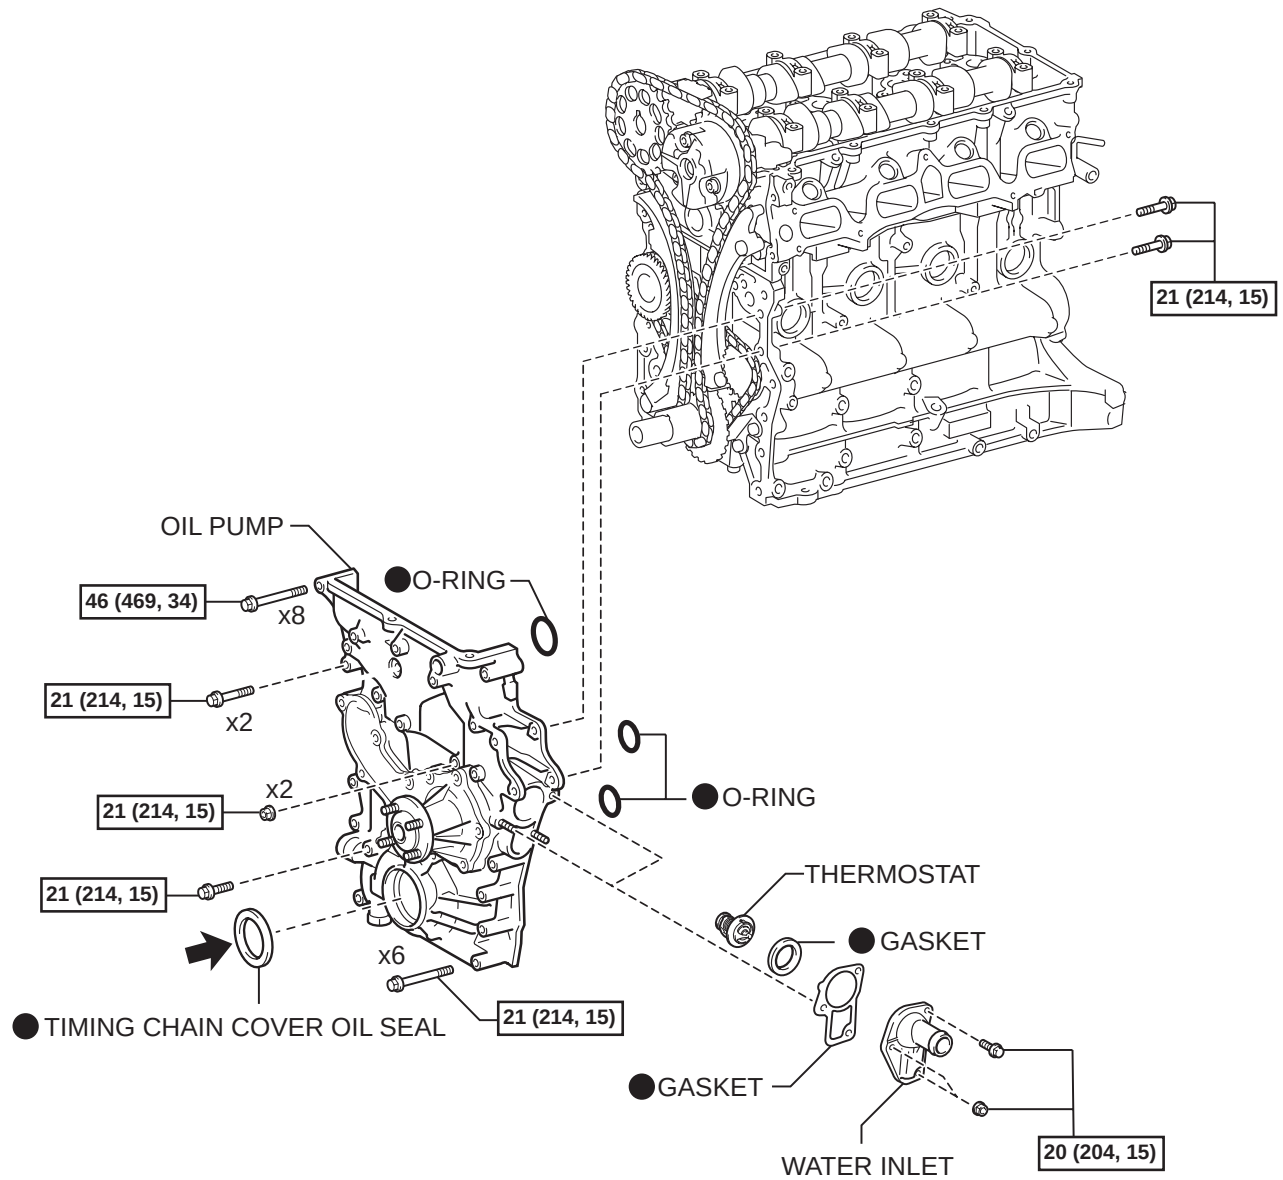

[N*m (kgf*cm, ft.*lbf)] : Specified torque

● Non-reusable part

← Apply MP grease

