



PROPELLER SHAFT ASSEMBLY (for Access Cab 2WD and Double Cab 2WD)

COMPONENTS

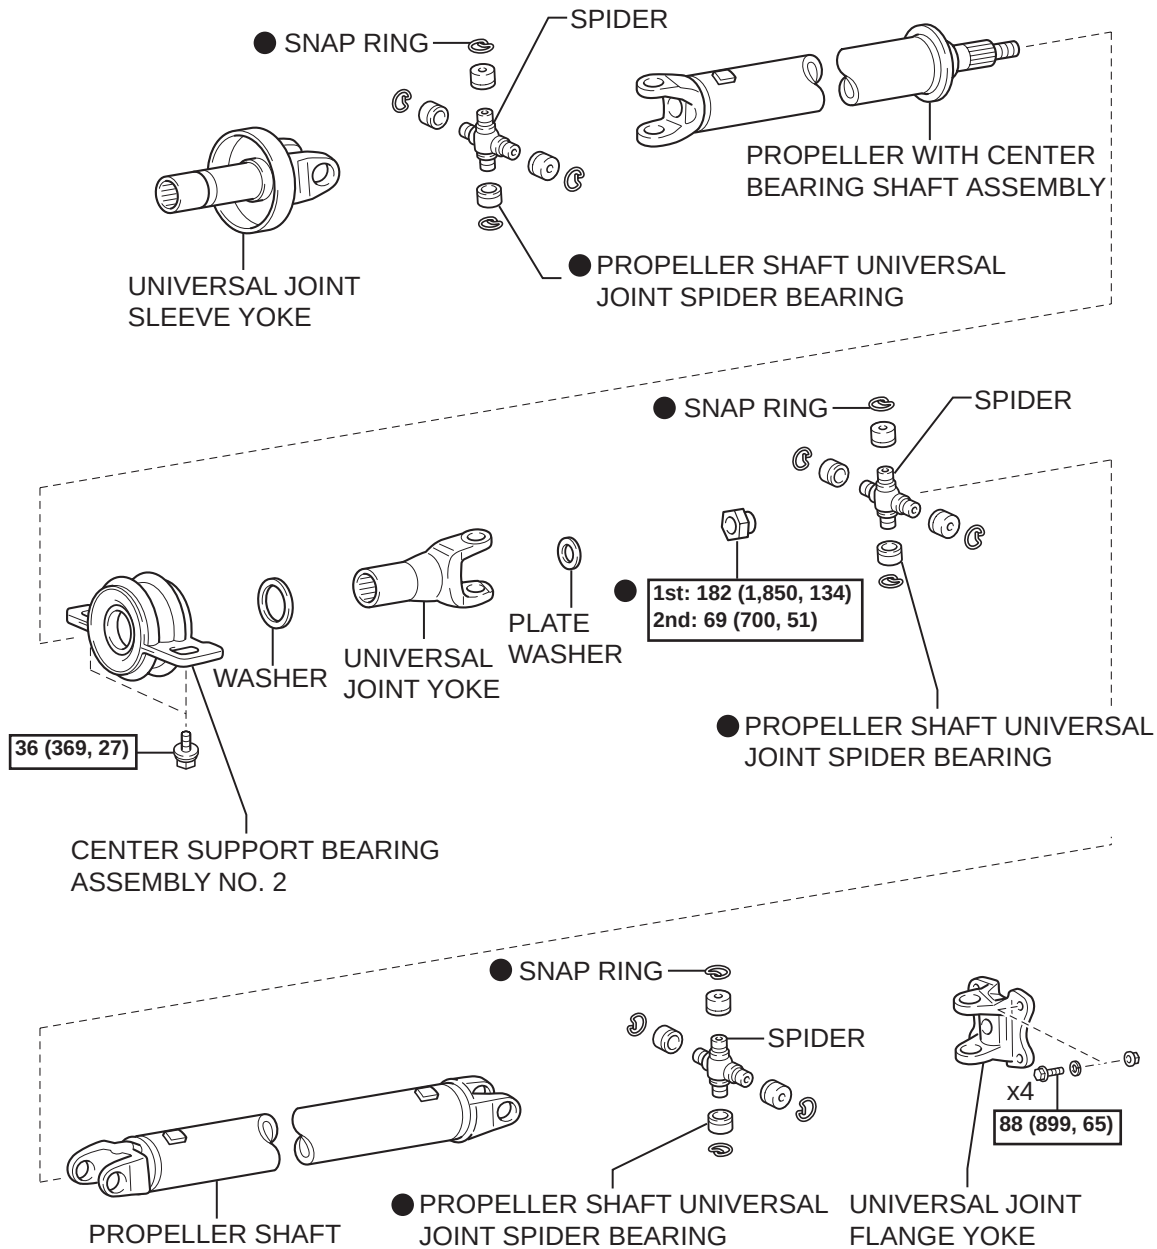

N*m (kgf*cm, ft*lbf) : Specified torque


● Non-reusable part

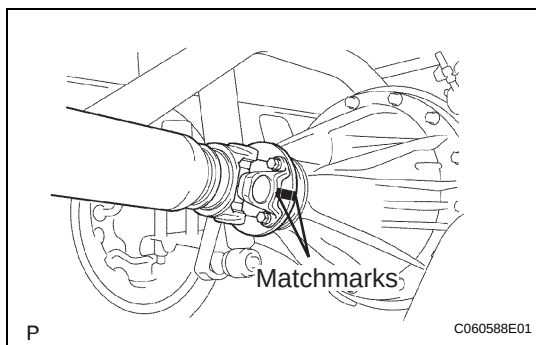


REMOVAL

1. REMOVE PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY

- Place matchmarks on the propeller shaft flange and differential flange.
- Remove the 4 nuts, 4 bolts and 4 washers, and remove the propeller shaft.

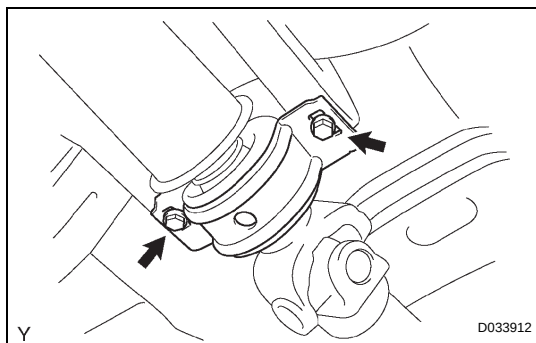

- Remove the 2 center support bearing bolts from the frame crossmember.

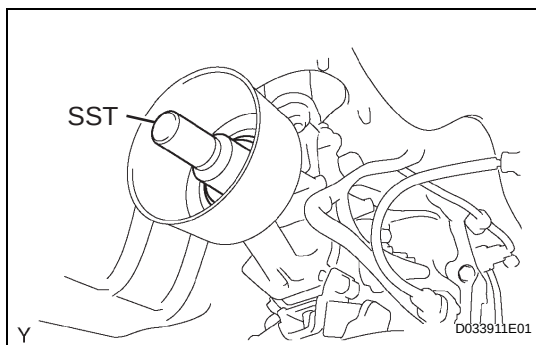

- Pull out the propeller shaft.
- Insert SST into the transmission to prevent oil leakage.

SST 09325-40010