



TIRE PRESSURE WARNING ECU

COMPONENTS


for Automatic Transmission on Bench Seat Type:

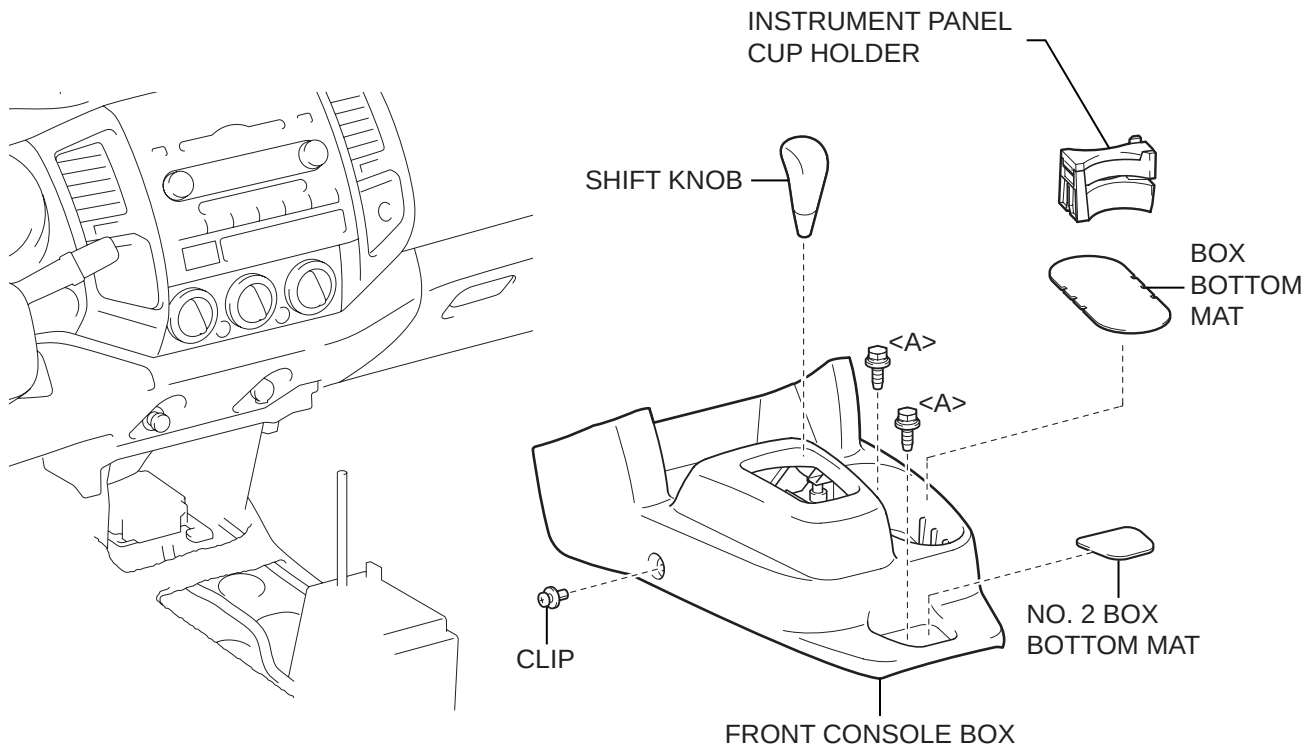


for Manual Transmission on Bench Seat Type:

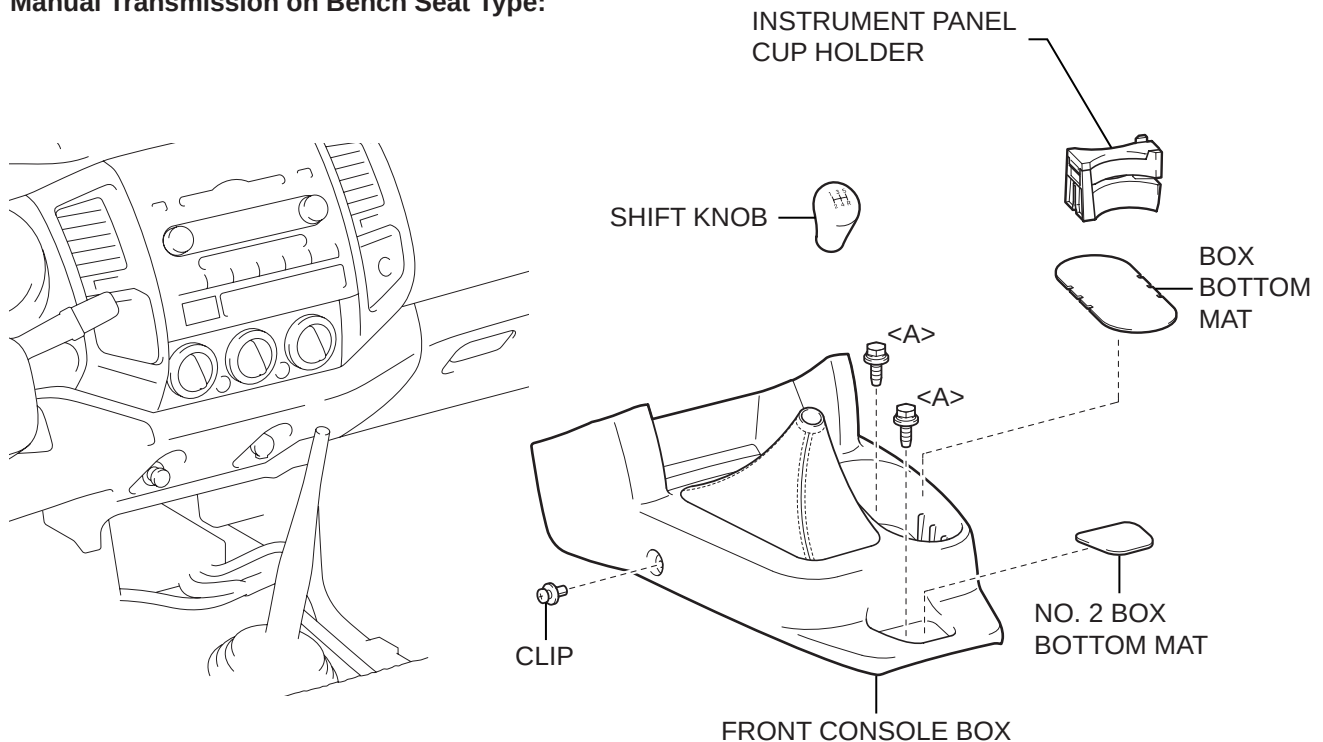


for Automatic Transmission
on Separate Seat Type :

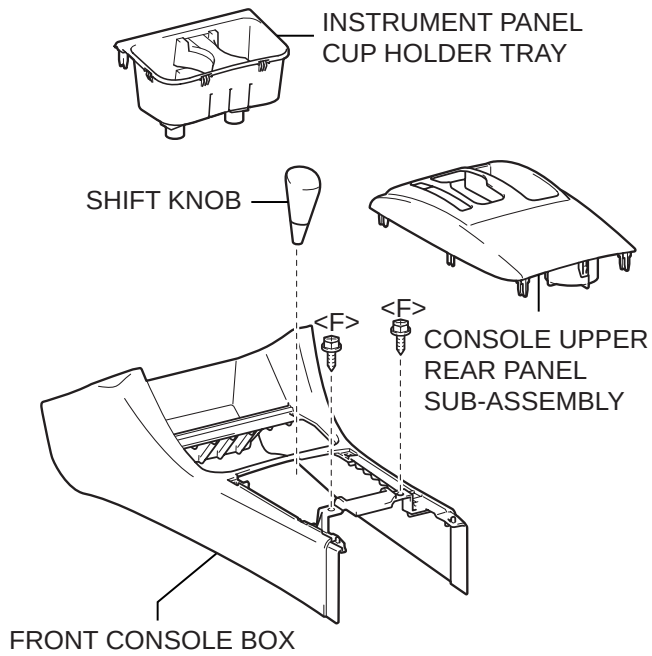


for Manual Transmission
on Separate Seat Type:

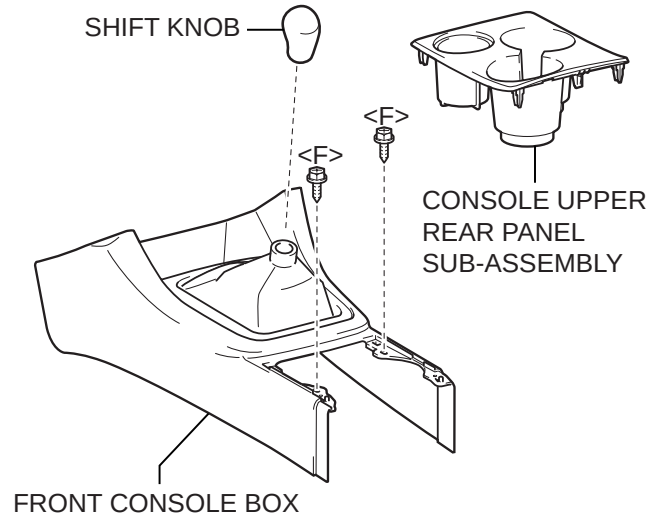

for Separate Seat Type:

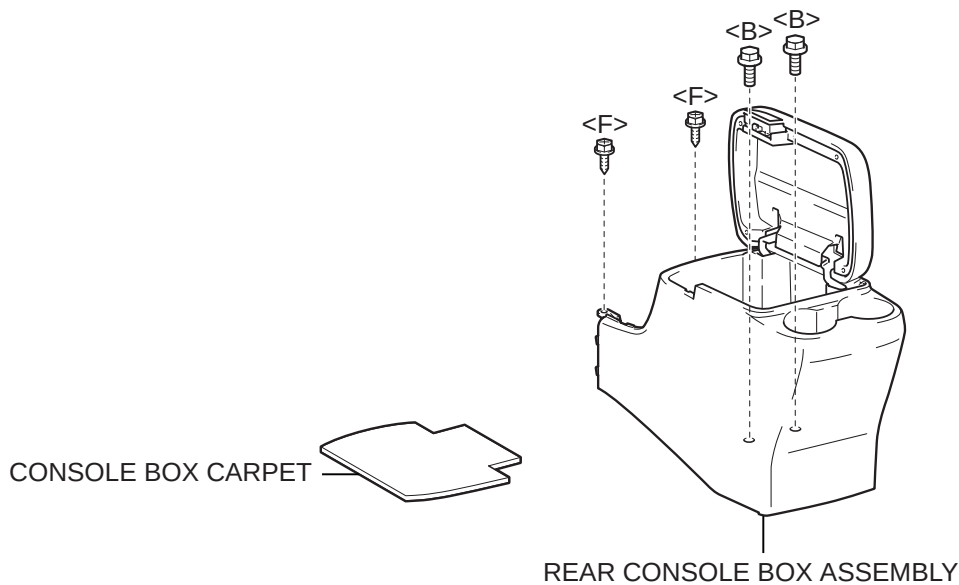

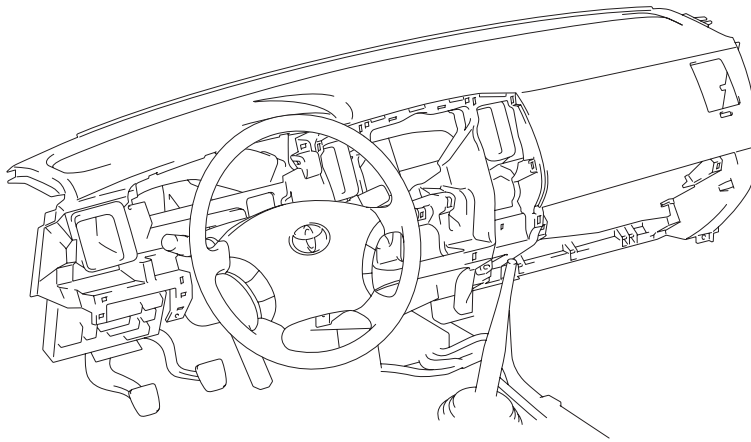



INSTRUMENT CLUSTER
CENTER FINISH PANEL
SUB-ASSEMBLY

INSTRUMENT CLUSTER FINISH
PANEL SUB-ASSEMBLY


CLIP

CLIP

LOWER INSTRUMENT PANEL LH

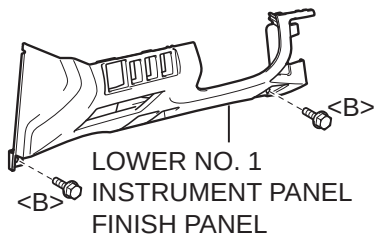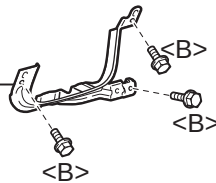

LOWER NO. 1
INSTRUMENT PANEL
FINISH PANEL

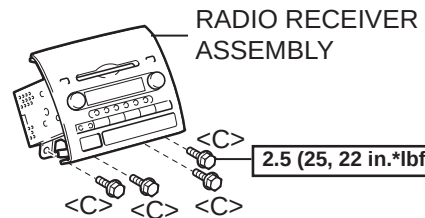

RADIO RECEIVER
ASSEMBLY

2.5 (25, 22 in.*lbf)



AIR CONDITIONING
CONTROL ASSEMBLY


for Automatic Transmission:
INSTRUMENT PANEL UNDER TRAY



for Manual Transmission:
INSTRUMENT PANEL HOLE COVER



COWL SIDE TRIM
BOARD LH

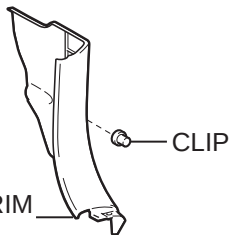


CLIP

FRONT FLOOR
FOOTREST




FRONT DOOR SCUFF PLATE LH

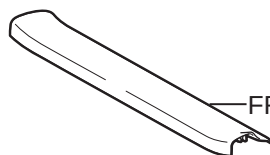


N*m (kgf*cm, ft*lbf) : Specified torque


INSTRUMENT PANEL LOWER
FINISH PANEL SUB-ASSEMBLY RH

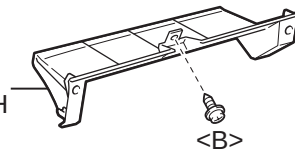

INSTRUMENT LOWER COVER
SUB-ASSEMBLY

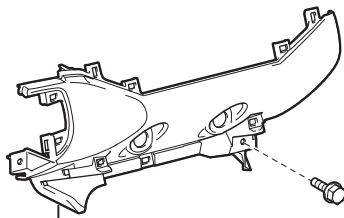


GLOVE COMPARTMENT
DOOR ASSEMBLY

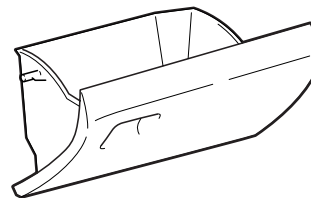

GLOVE COMPARTMENT
DOOR STOPPER



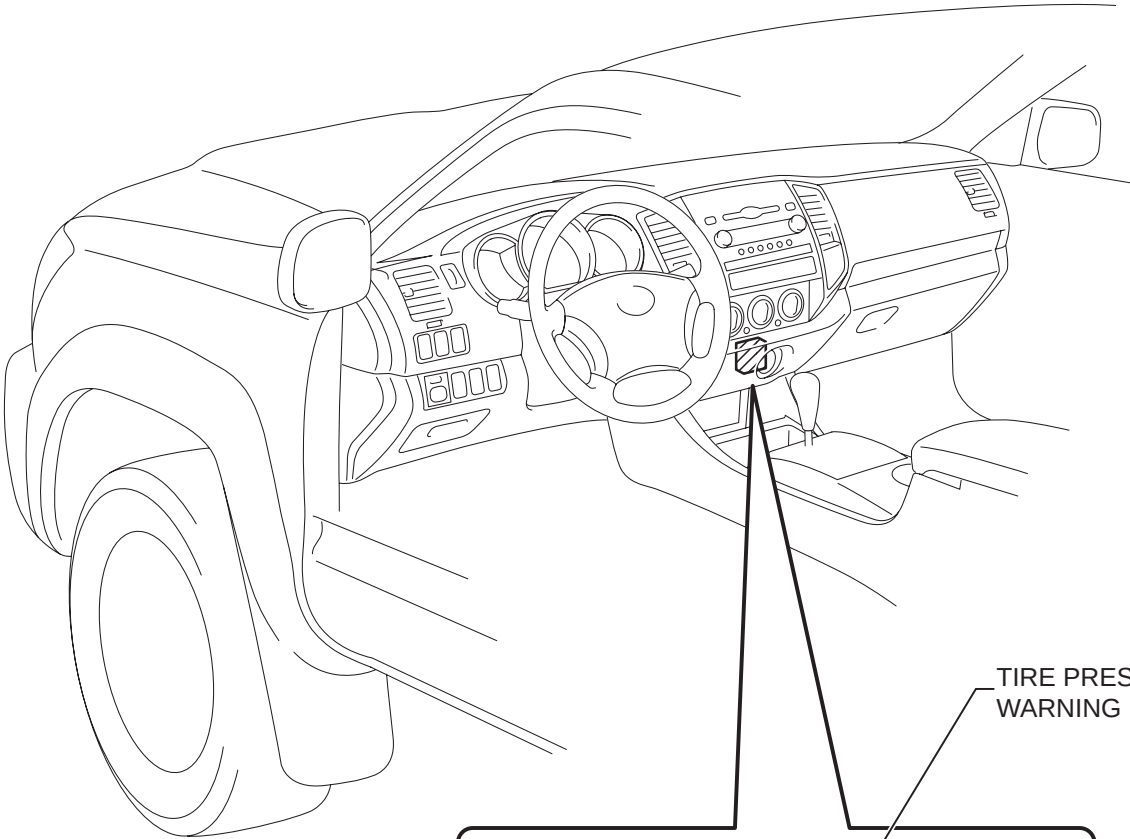

TIRE PRESSURE
WARNING ECU

5.5 (56, 49 in.*lbf)

5.5 (56, 49 in.*lbf)

N*m (kgf*cm, ft*lbf) : Specified torque