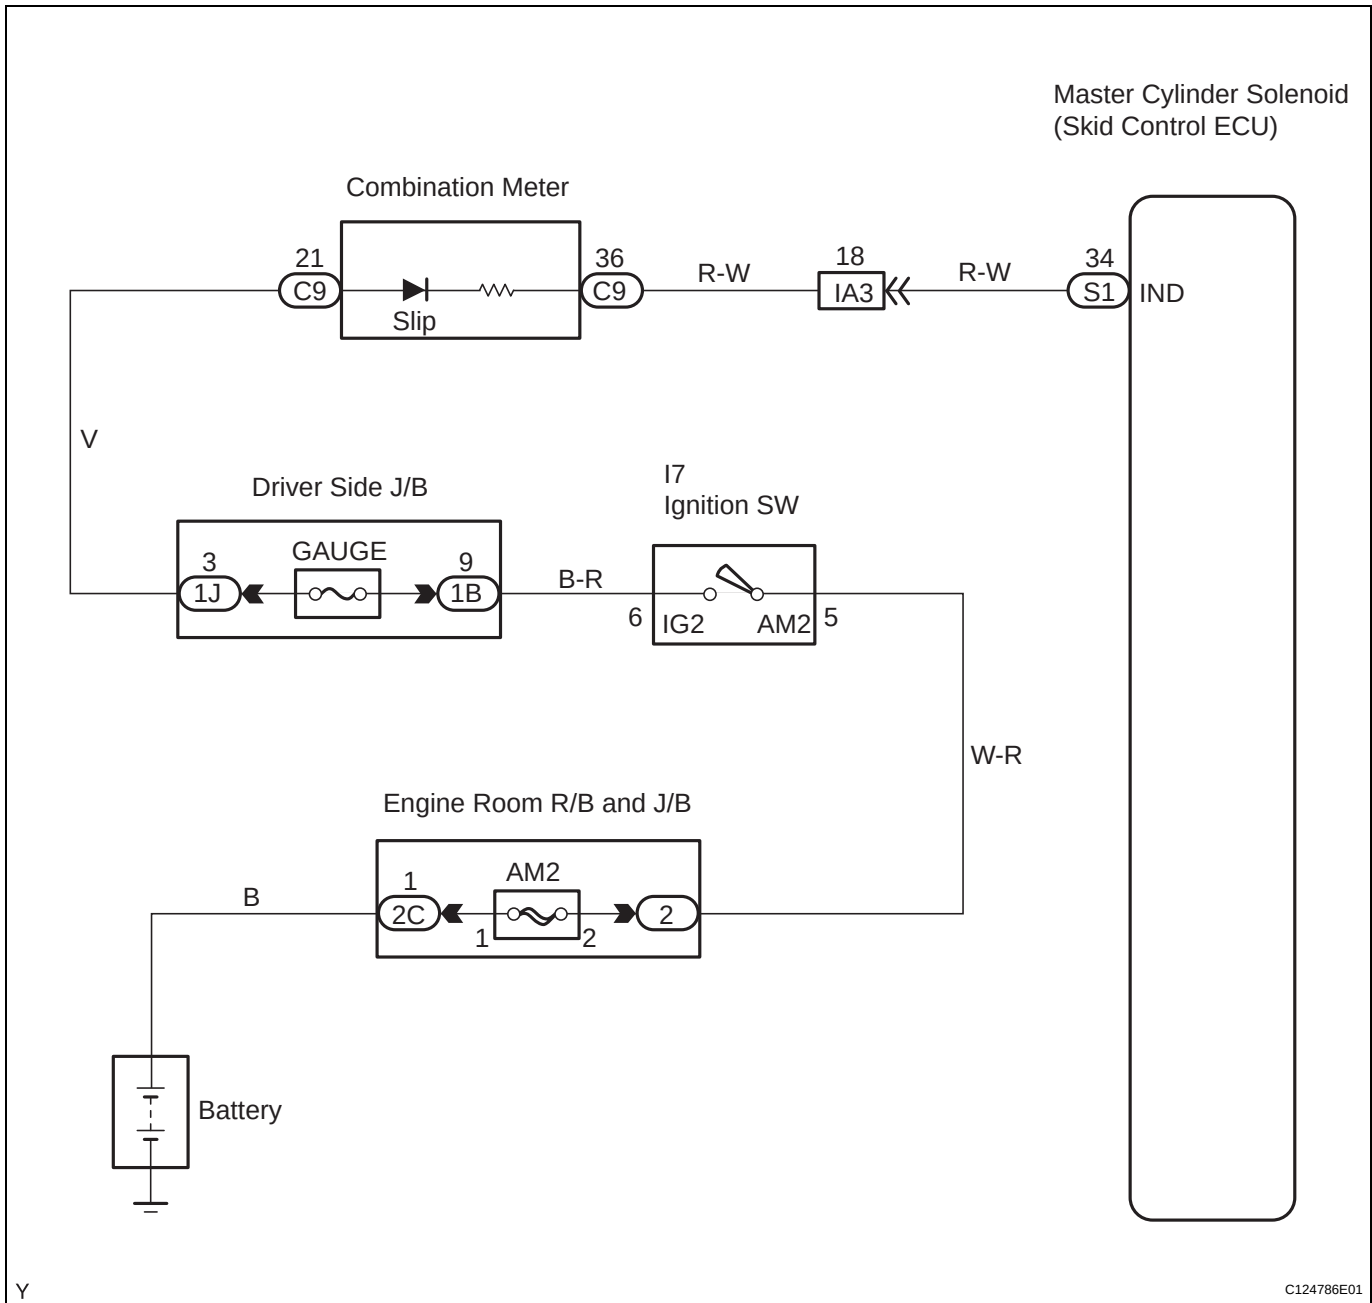


Slip Indicator Light Remains ON

DESCRIPTION

- The SLIP indicator blinks when any of the TRAC, VSV and AUTO LSD operate.
- When the system fails, the SLIP indicator light illuminates to warn the driver.

WIRING DIAGRAM



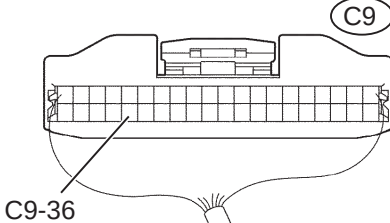
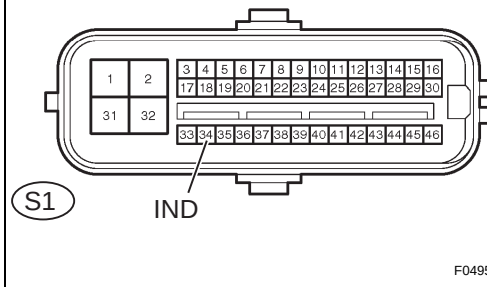
HINT:

Start the inspection from step 1 when using an intelligent tester and start from step 2 when not using an intelligent tester.

1 CHECK DTC

(a) Check the DTCs.

Result	Proceed to
DTC not output	A
DTC output	B

B**REPAIR CIRCUITS INDICATED BY OUTPUT DTCs****A****2 CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - COMBINATION METER)****Combination Meter
(harness side view)****Skid Control ECU
(harness side connector)**

F049577E02

- (a) Disconnect the skid control ECU connector.
 (b) Disconnect the combination meter connector.
 (c) Measure the resistance.

Standard

Tester Connection	Specified Condition
S1-34 (IND) - C9-36	Below 1 Ω

- (d) Measure the resistance.

Standard

Tester Connection	Specified Condition
S1-34 (IND) - Body ground	10 k Ω or higher

- (e) Reconnect the combination meter connector.
 (f) Reconnect the skid control ECU connector.

NG**REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****3 INSPECT COMBINATION METER ASSEMBLY**

- (a) Check the combination meter system (See page
- [ME-8](#)
-).

OK:

Combination meter is normal.

NG**REPLACE COMBINATION METER ASSEMBLY****OK****REPLACE MASTER CYLINDER SOLENOID**