


POWER STEERING LINK (for 4WD and Pre-Runner)

COMPONENTS



for 2TR-FE:

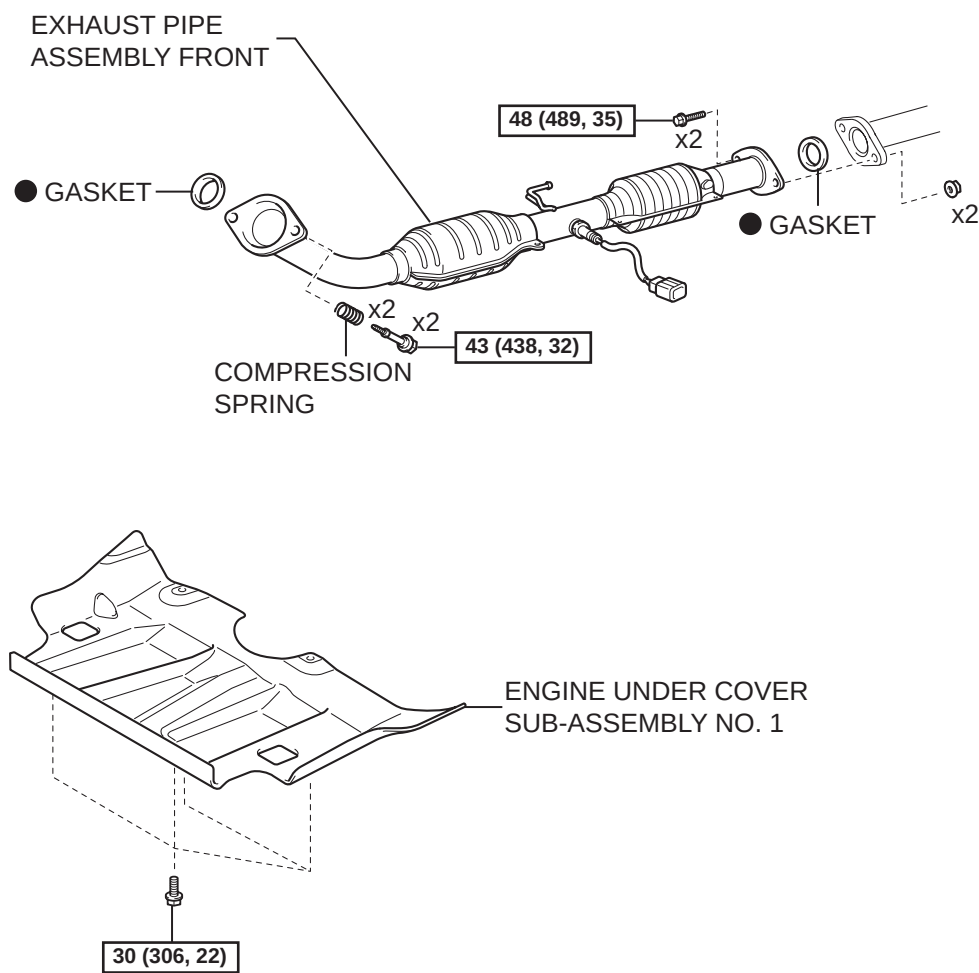


N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

for 1GR-FE:

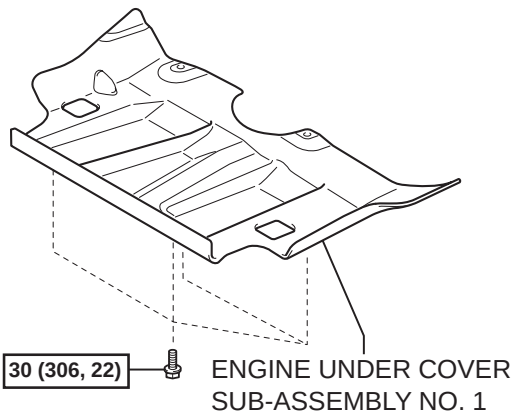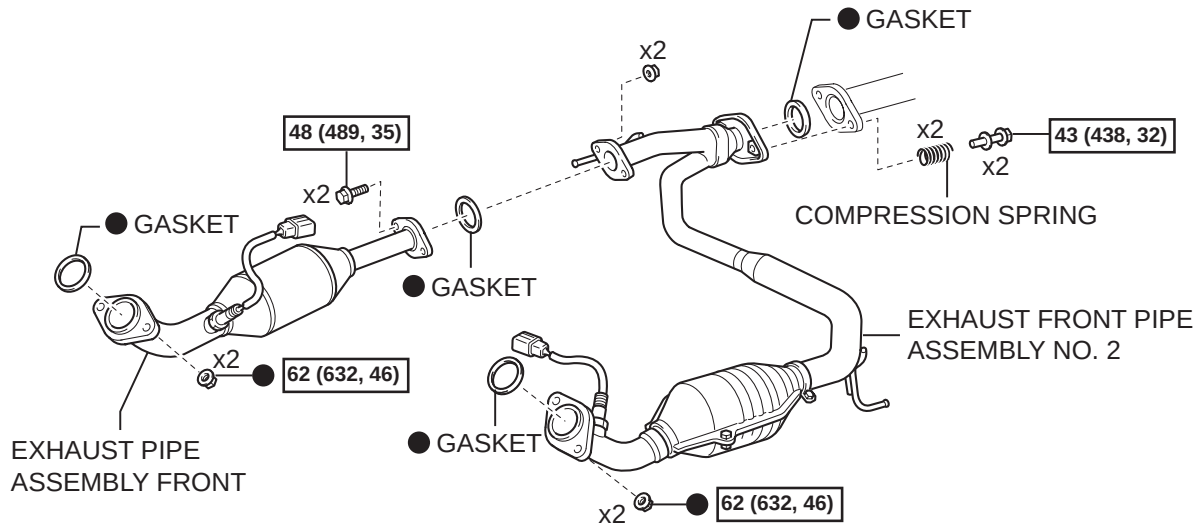

for 4WD:

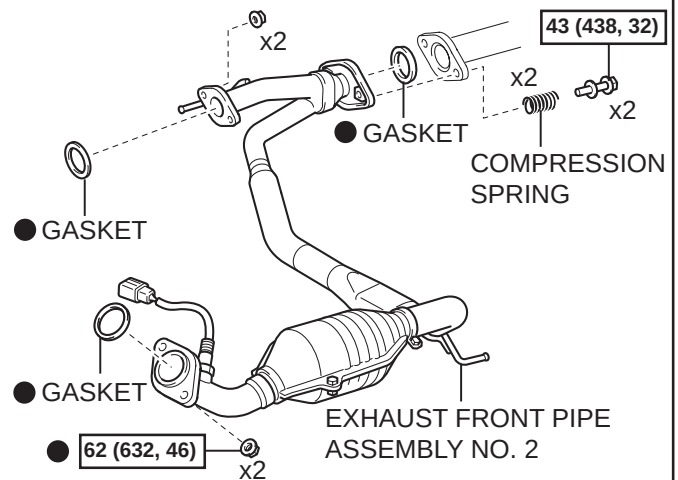


N*m (kgf*cm, ft*lb) : Specified torque


● Non-reusable part

for Pre-Runner:


for Regular Cab:

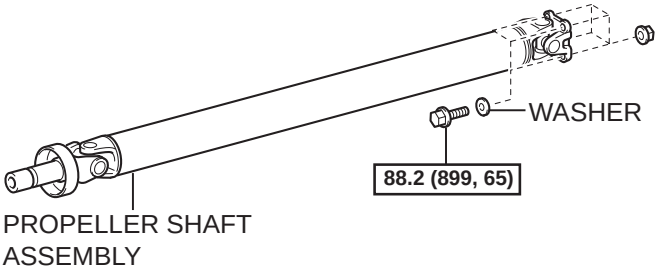

except for Regular Cab:

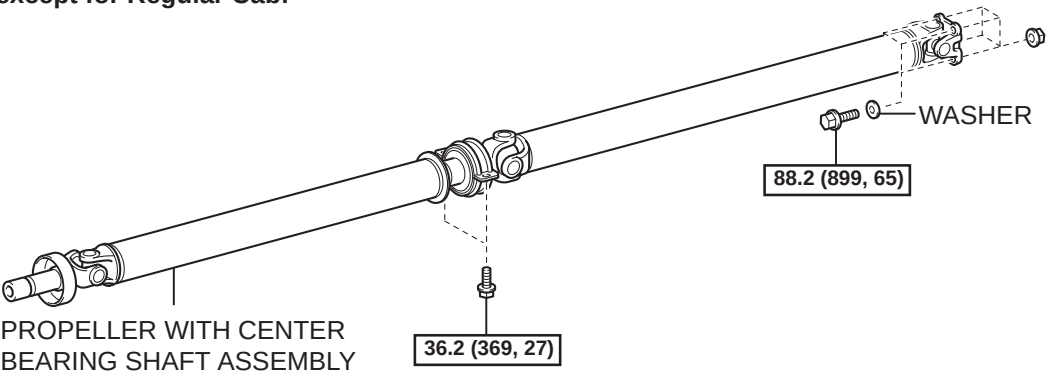


PS

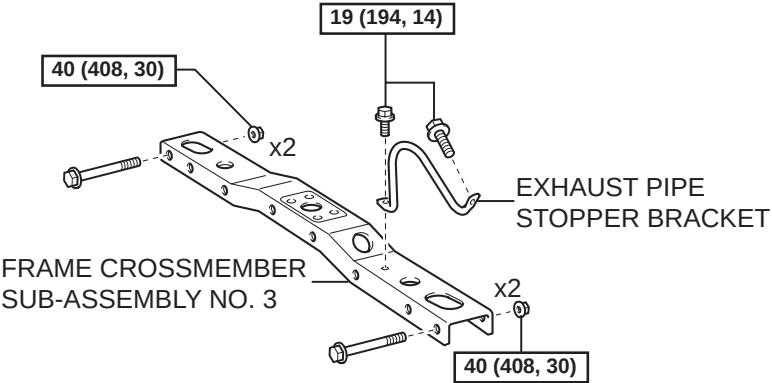


N*m (kgf*cm, ft*lbf) : Specified torque



for 4WD:

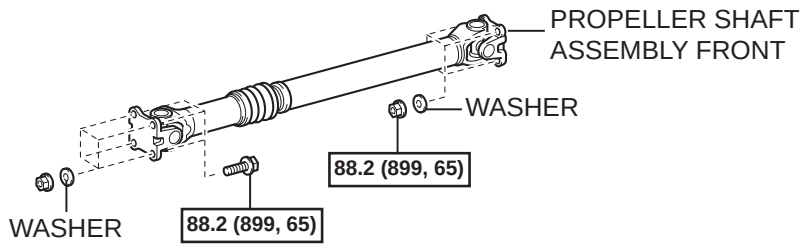


for Regular Cab:

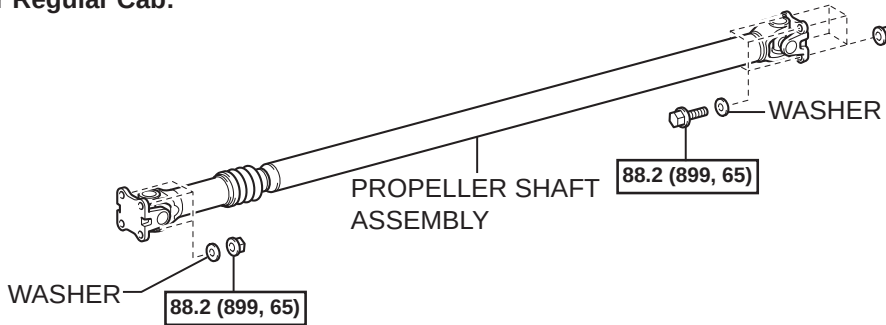


except for Regular Cab:

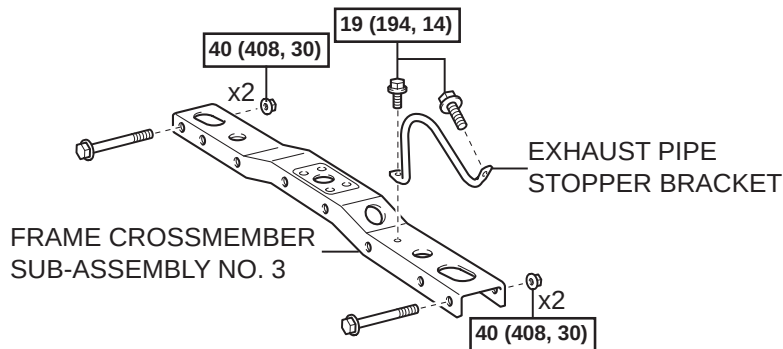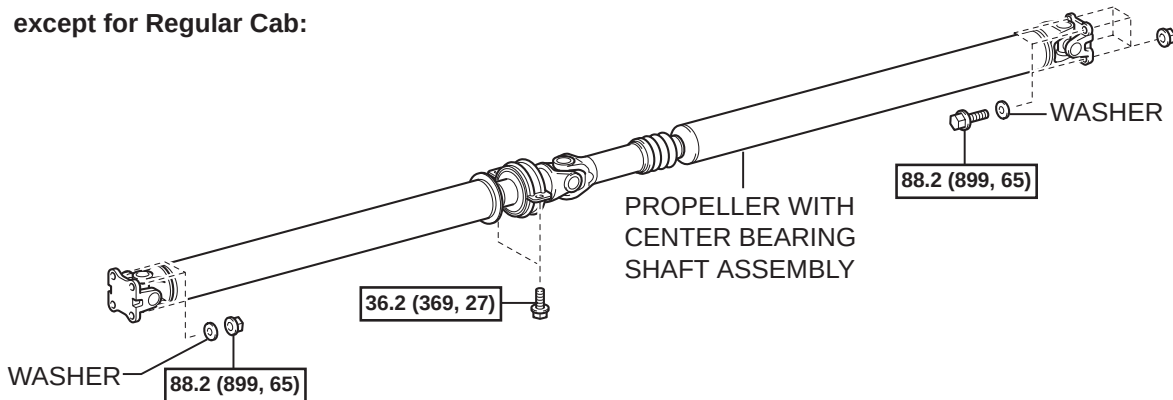


for 1GR-FE:

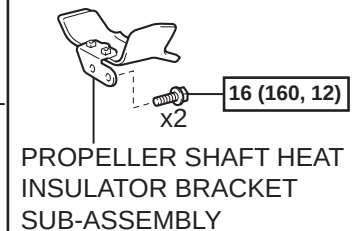

N*m (kgf*cm, ft*lbf) : Specified torque

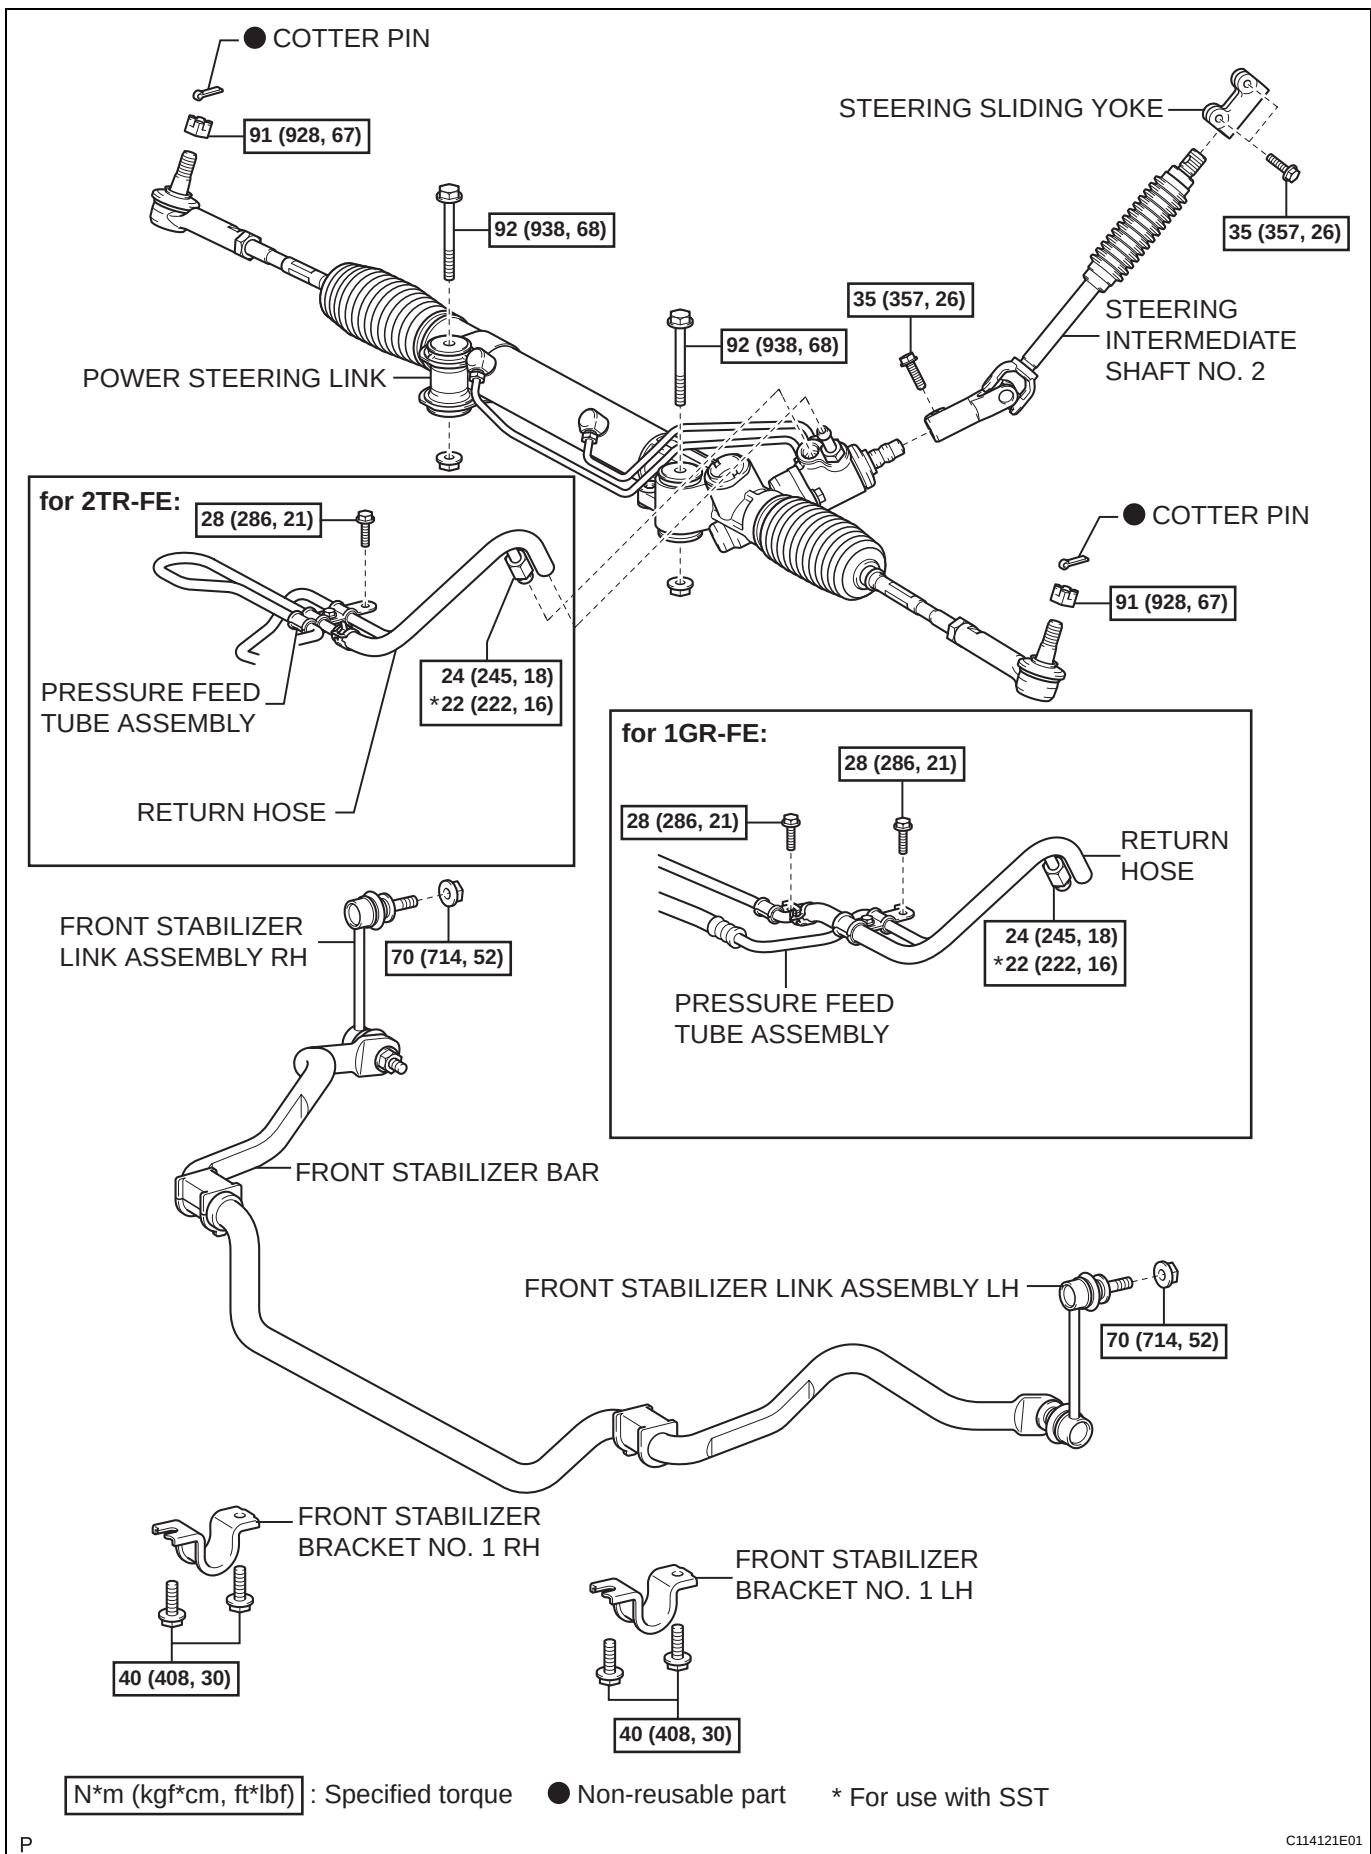

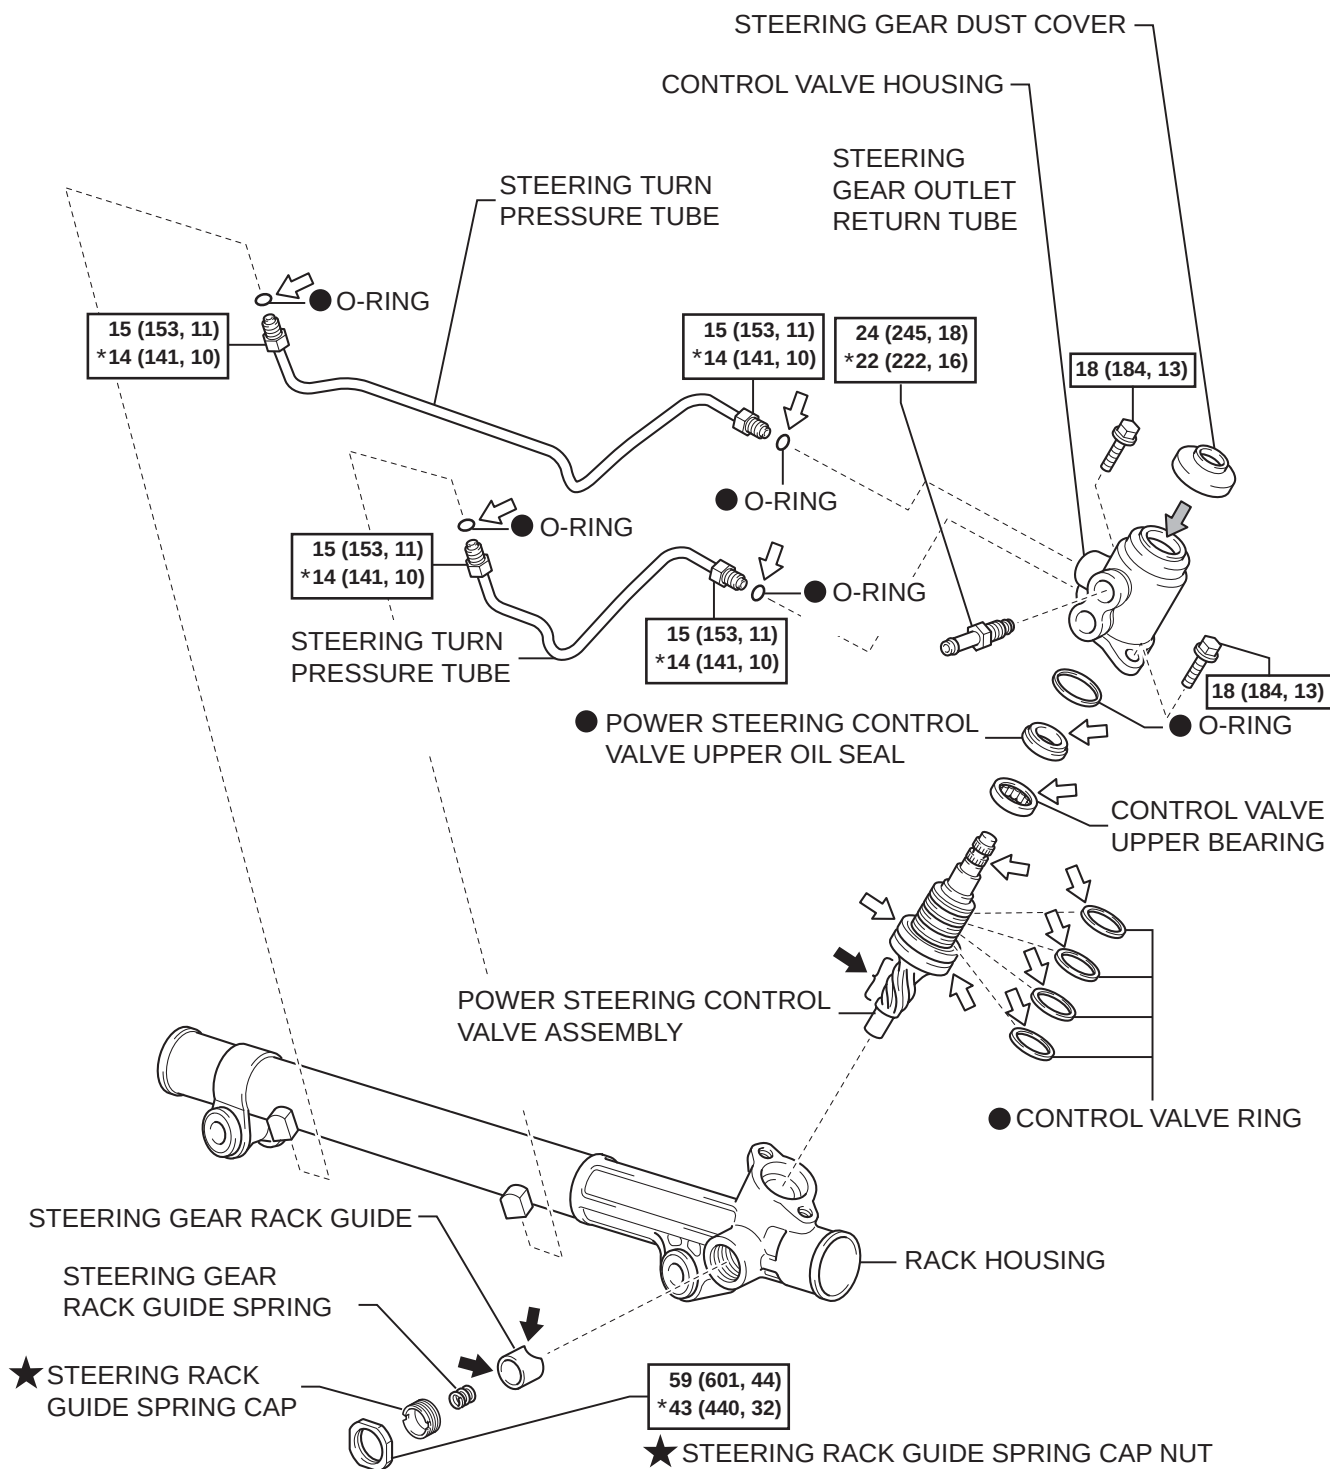

[N*m (kgf*cm, ft*lb)] : Specified torque

← Molybdenum disulfide lithium base grease * For use with SST

● Non-reusable part

← Power steering fluid

★ Precoated part

← MP grease

