



FRONT SEAT CUSHION ASSEMBLY (w/ Occupant Classification ECU, Occupant Classification Sensor)


COMPONENTS

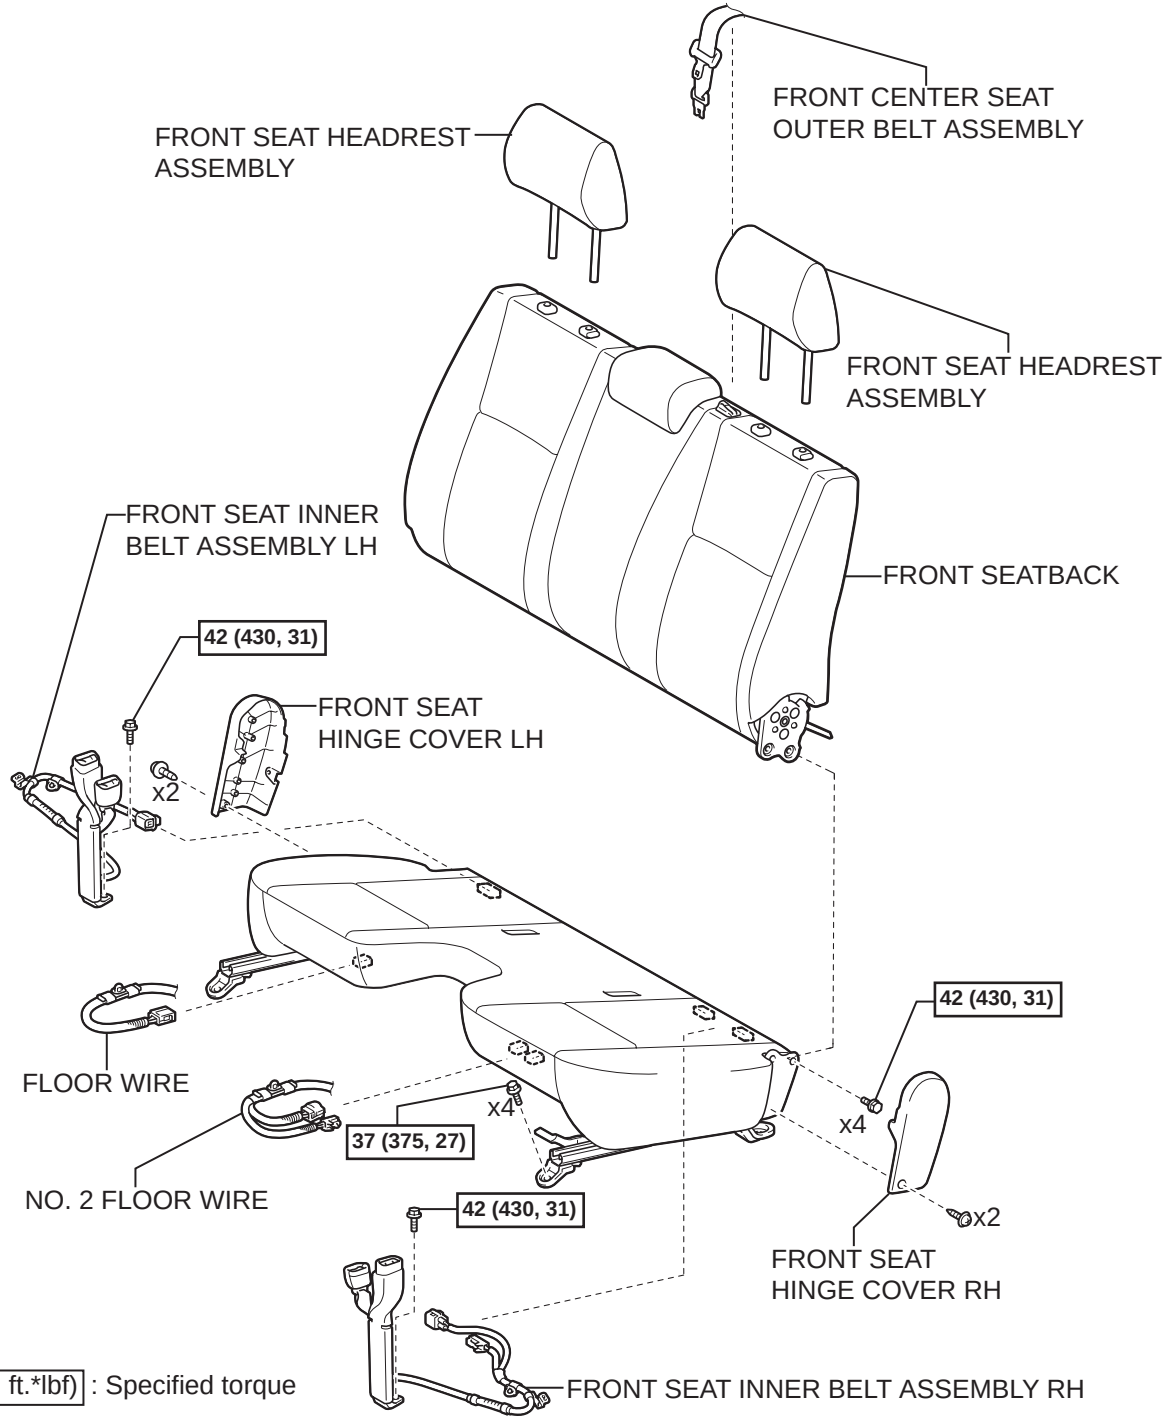

FRONT SEAT CUSHION
COVER PAD

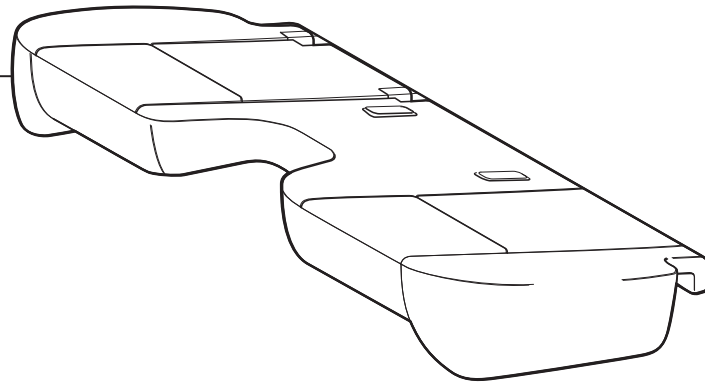

OCCUPANT CLASSIFICATION SENSOR

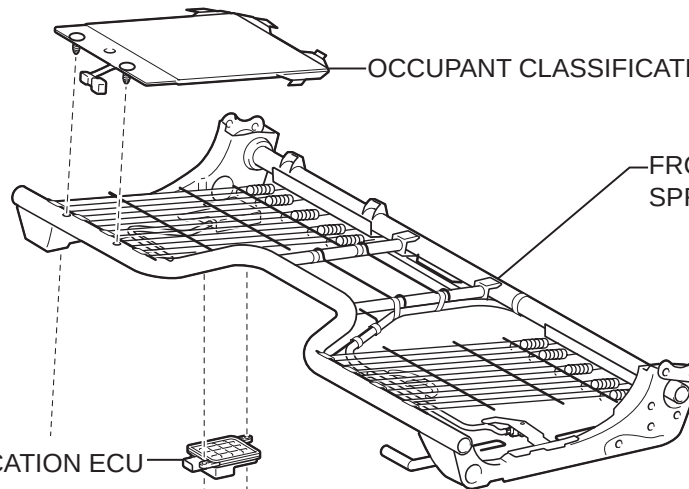


FRONT SEAT CUSHION
SPRING ASSEMBLY

OCCUPANT CLASSIFICATION ECU

3.0 (30, 27 in.*lbf)

 FRONT SEAT OUTER
TRACK ASSEMBLY RH



FRONT SEAT TRACK LOWER
REAR BRACKET RH



FRONT SEAT TRACK
LOWER FRONT
BRACKET RH



20 (205, 15)

x2

32 (325, 24)

32 (325, 24)

FRONT SEAT TRACK LOWER FRONT BRACKET LH

 


20 (205, 15)

x4

32 (325, 24)

FRONT SEAT OUTER
TRACK ASSEMBLY LH



FRONT SEAT
TRACK LOWER
REAR BRACKET LH



x2

32 (325, 24)

N*m (kgf*cm, ft.*lbf) : Specified torque