

SEAT BELT WARNING SYSTEM

PARTS LOCATION

FOR BENCH SEAT:

FRONT SEAT OUTER BELT ASSEMBLY RH
(BELT TENSION SENSOR)

FRONT SEAT INNER BELT ASSEMBLY RH


OCCUPANT CLASSIFICATION ECU

OCCUPANT CLASSIFICATION SENSOR

COMBINATION METER ASSEMBLY

FRONT SEAT INNER BELT ASSEMBLY LH

- DRIVER SIDE SEAT BELT WARNING LIGHT

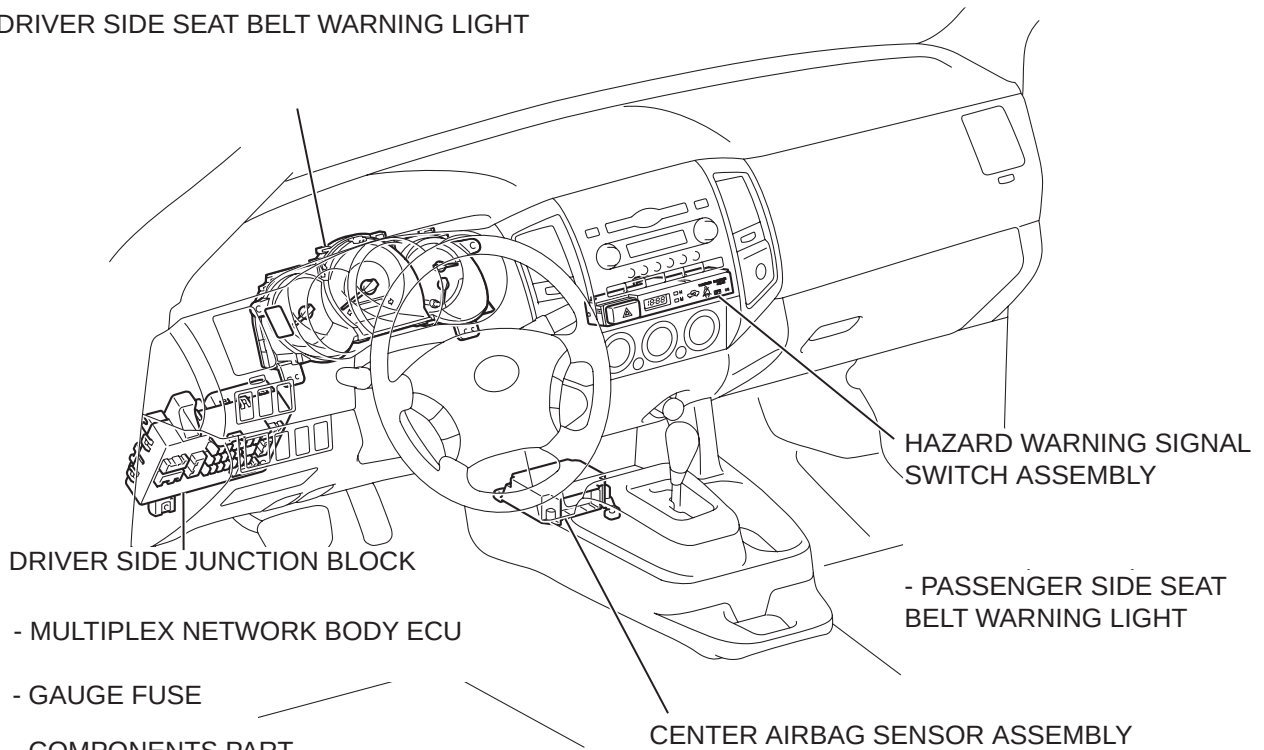

DRIVER SIDE JUNCTION BLOCK

- MULTIPLEX NETWORK BODY ECU

- GAUGE FUSE

- COMPONENTS PART

- IG1 FUSE

HAZARD WARNING SIGNAL
SWITCH ASSEMBLY

- PASSENGER SIDE SEAT
BELT WARNING LIGHT

CENTER AIRBAG SENSOR ASSEMBLY

FOR SEPARATE SEAT:

REAR OCCUPANT CLASSIFICATION SENSOR RH

REAR OCCUPANT CLASSIFICATION SENSOR LH

FRONT SEAT INNER BELT ASSEMBLY RH

FRONT OCCUPANT CLASSIFICATION SENSOR RH


OCCUPANT CLASSIFICATION ECU

FRONT OCCUPANT CLASSIFICATION SENSOR LH

FRONT SEAT INNER BELT ASSEMBLY LH

COMBINATION METER ASSEMBLY

- DRIVER SIDE SEAT BELT WARNING LIGHT

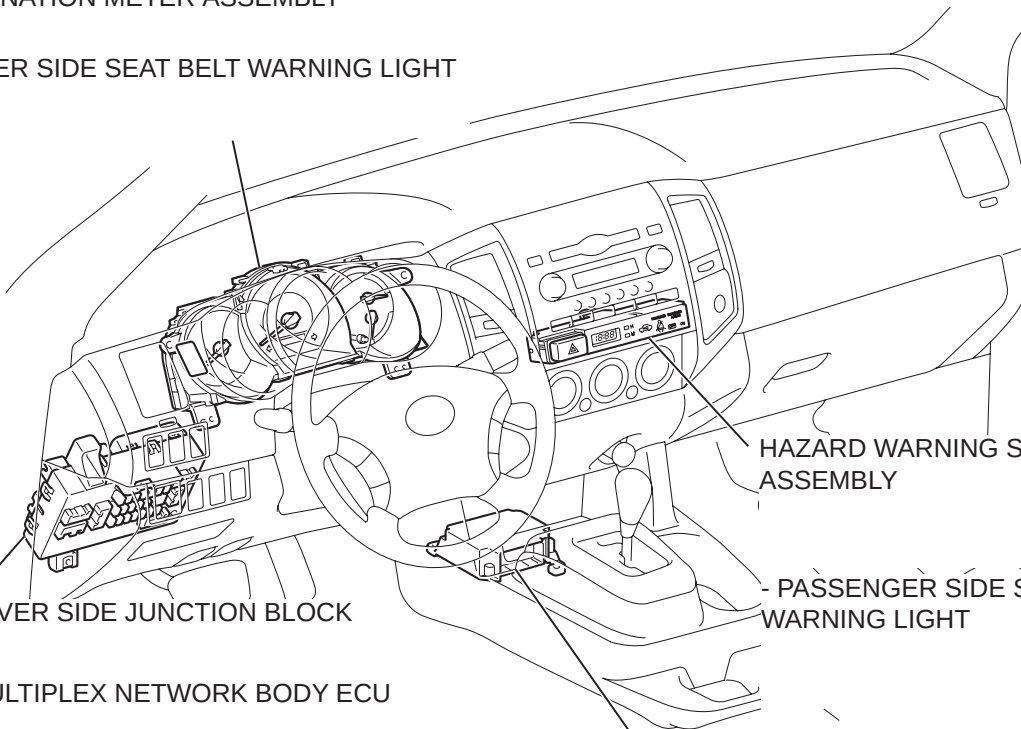

HAZARD WARNING SIGNAL SWITCH ASSEMBLY

- PASSENGER SIDE SEAT BELT WARNING LIGHT

CENTER AIRBAG SENSOR ASSEMBLY

- MULTIPLEX NETWORK BODY ECU

- GAUGE FUSE

- IG1 FUSE

- COMPONENTS PART