


FRONT WIPER MOTOR

COMPONENTS

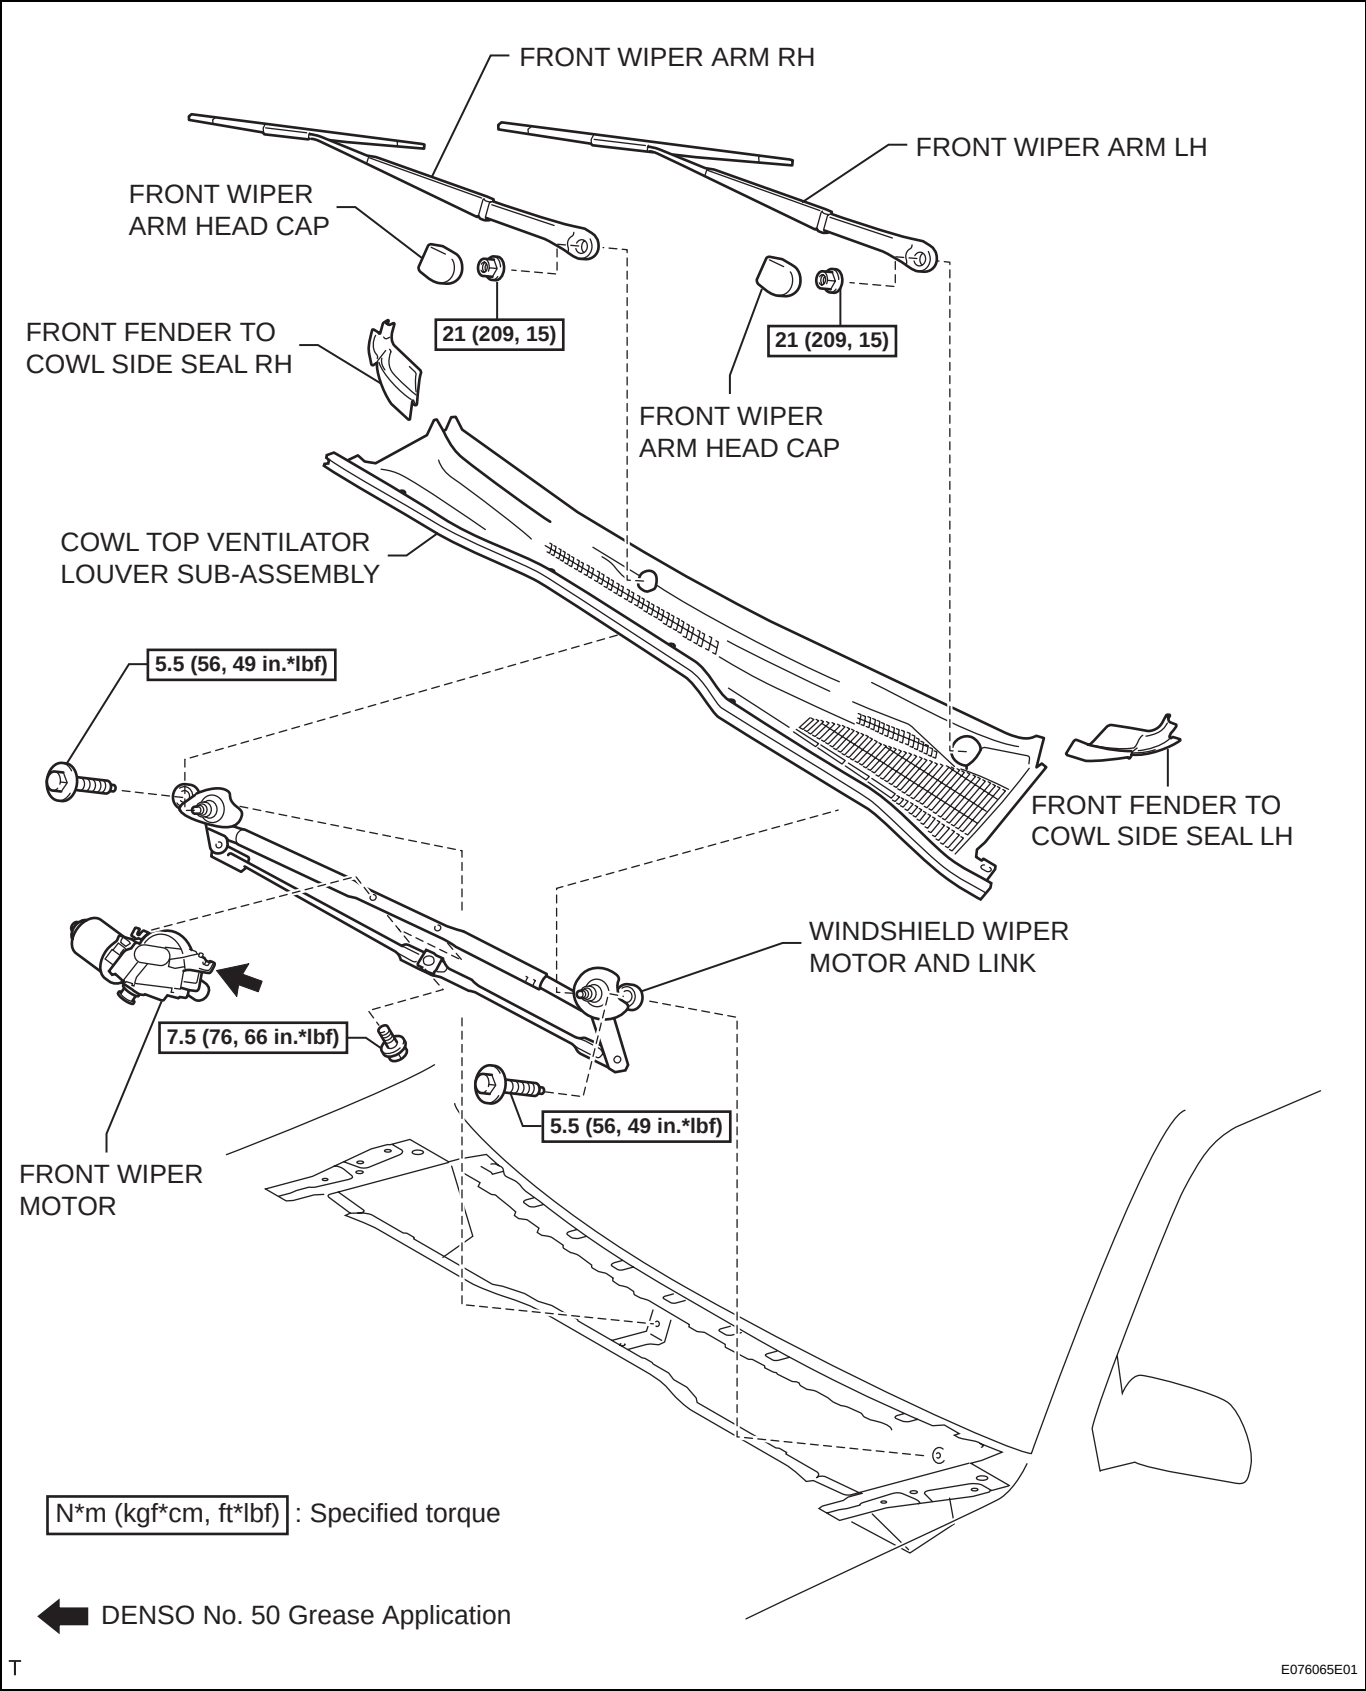

cardiagn.com


ON-VEHICLE INSPECTION

1. INSPECT FRONT WIPER MOTOR (for Driver Side)

- (a) Check the automatic stop position.
 - (1) Operate the windshield wiper motor assembly, then stop the operation.
 - (2) Check the automatic stop position when stopping the windshield wiper motor assembly operation.

Standard:

Front wiper arm stops at the position shown in the illustration.

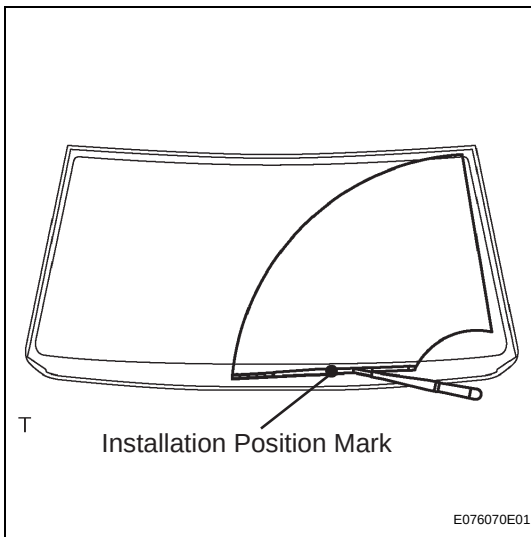

2. INSPECT FRONT WIPER MOTOR (for Front Passenger Side)

- (a) Check the automatic stop position.
 - (1) Operate the windshield wiper motor assembly, then stop the operation.
 - (2) Check the automatic stop position when stopping the windshield wiper motor assembly operation.

Standard:

Front wiper arm stops at the position shown in the illustration.

