
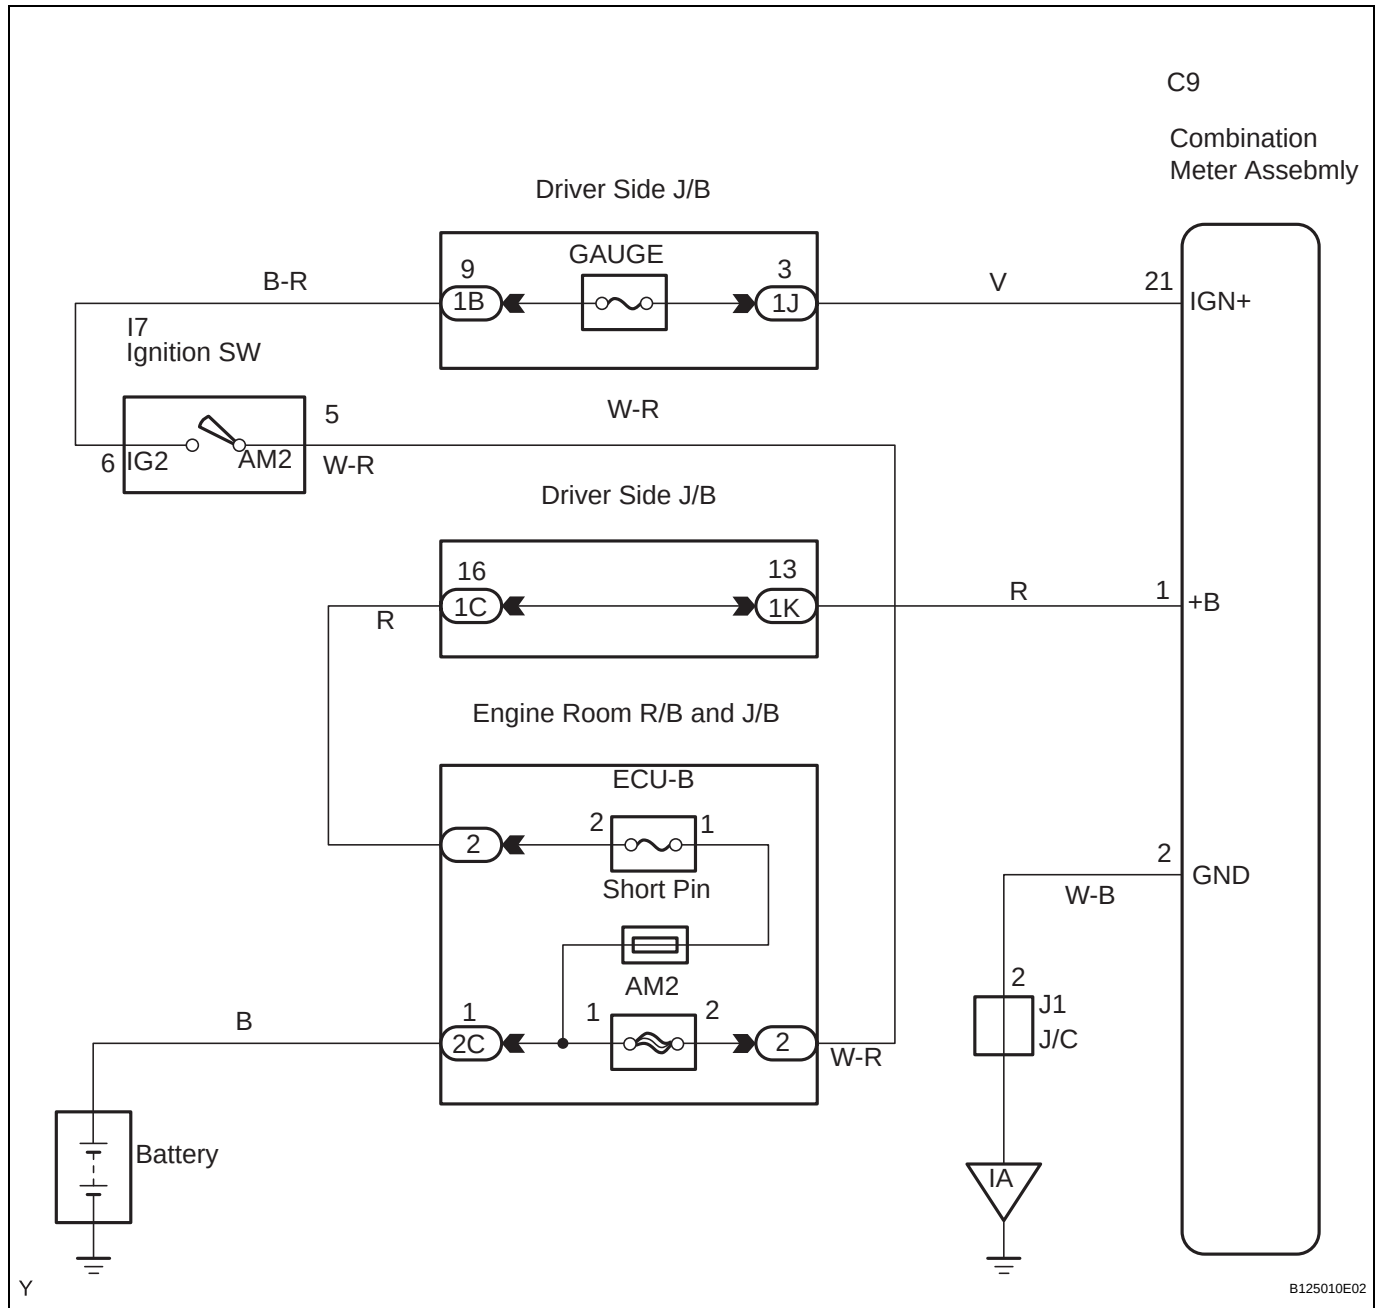
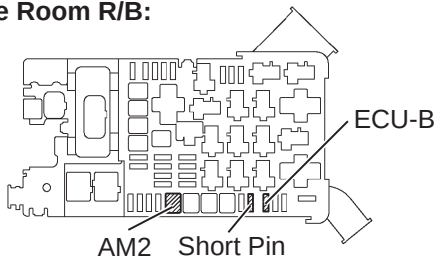


Entire Combination Meter does not Operate

WIRING DIAGRAM

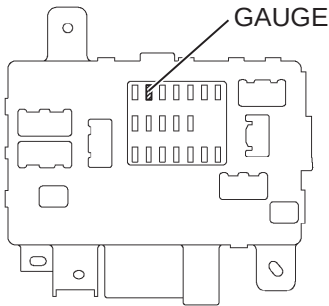

1 CHECK FUSE**Engine Room R/B:****Driver Side J/B:**

I101305E02


- (a) Remove the ECU-B fuse, AM2 fuse and short pin from the engine room R/B.
- (b) Remove the GAUGE fuse from the driver side J/B.
- (c) Measure the resistance.

Standard Resistance:**Below 1 Ω**

- (d) Reinstall the fuses and short pin.

NG

**INSPECT FOR SHORT CIRCUIT IN HARNESS
AND ALL COMPONENTS CONNECTED TO
FUSE**

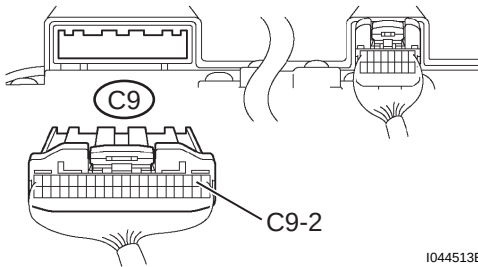OK**2 INSPECT COMBINATION METER ASSEMBLY****Combination Meter Connector**

Y

I044513E12

- (a) Disconnect the C9 combination meter connector.
- (b) Measure the resistance.

Standard Resistance

Tester Connection	Condition	Specified Condition
C9-2 - Body ground	Always	Below 1 Ω

- (c) Measure the voltage.

Standard Voltage

Tester Connection	Condition	Specified Condition
C9-1 - Body ground	Always	10 to 14 V
C9-21 - Body ground	Ignition switch ON	10 to 14 V

- (d) Reconnect the combination meter connector.

NG

**REPAIR OR REPLACE HARNESS OR
CONNECTOR**

OK**REPLACE COMBINATION METER ASSEMBLY**