


Fiat Croma 2009 – 2011 fuse box diagrams

Year of production: 2009, 2010, 2011

Fuse box in dashboard

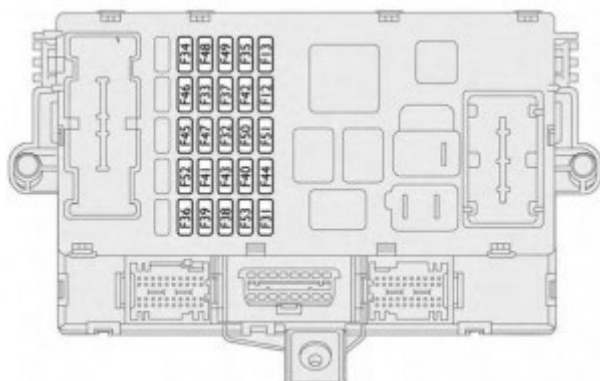


Fiat Croma – fuse box – dashboard

Users	Fuse	Ampere rating [A]
RH low beam	F12	15
LH low beam – Light stability corrector	F13	15
+15 excluded during ignition for dashboard control unit relay coils / engine compartment and Body computer	F31	7,5
+30 nodes front driver and passenger doors (door lock), TEG reader	F32	15
Boot compartment node power supply (rear left power window)	F33	20
Boot compartment node power supply (rear right power window)	F34	20
+15 backing lights, supplementary heater control unit, flow gauge, water in diesel fuel sensor, NC switch on brake pedal	F35	7,5
+30 boot compartment node (rear door locks)	F36	20
+15 instrument panel, control unit on gas discharge headlamps, NA switch on brake pedal, supplementary stop light	F37	10
Boot opening actuator	F38	15
+30 EOBD diagnostic socket , central front ceiling light, rear side ceiling lights, siren and volumetric sensor control unit for the antitheft system, tyre pressure control unit, air conditioning control unit, Blue-tooth control unit	F39	10
Heated rear window	F40	30
Windscreen / rear window washer nozzle demisters	F41	15
+15 ABS / ESP control unit, electrohydraulic driving node, yaw sensor , steering angle sensor	F42	7,5/15(*)
+15 excluded during ignition for electronic column switch module (windscreen wipers, windscreen / rear window washer pump)	F43	30
+15 excluded during ignition for cigar lighter, current outlet on tunnel	F44	20
Sun roof engine control unit power supply	F45	20

Sun roof visor engine control unit power supply	F46	20
Front driver door node power supply (front driver power window)	F47	20
Front passenger door node power supply (front passenger power window)	F48	20
+15 volumetric sensor control unit for antitheft device, emergency control display plaque lights / Blue-tooth and roof visor on roof panel / driver and passenger front seat console, driver side control dashboard lights / tunnel, DVD player presetting, electrochromic mirror, air conditioning	F49	7,5
+15 airbag control unit	F50	7,5
+15 Connect, Blue-tooth control unit, after market radio presetting, pneumatic pressure control unit, cruise control, rain / twilight sensor control unit, parking sensor control unit, AQS sensor	F51	7,5
+15 excluded during ignition for electronic column switch module (rear window wiper), relay coil on boot compartment control unit	F52	15
+30 instrument panel	F53	7,5

Fuse box in engine compartment

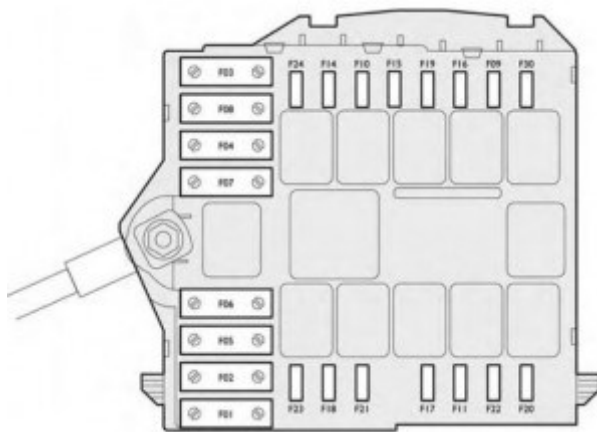


Fiat Croma – fuse box – engine compartment

Users	Fuse	Ampere rating [A]
Left fog light / cornering light	F9	7,5
Buzzers	F10	15
Engine control system power supply	F11	15
RH high beam	F14	7,5
LH high beam	F15	7,5
+15 engine control unit	F16	7,5
Engine control system power supply	F17	10
+30 engine control unit	F18	7,5
Conditioner compressor	F19	7,5
Headlamp washer pump	F20	20
Fuel pump	F21	15
Engine control system power supply	F22	20

+30 radio / Connect, supplementary heater control unit	F23	20
+15 automatic transmission control unit, automatic transmission switch	F24	15
Right fog light / cornering light	F30	7,5

Fuse box in the boot

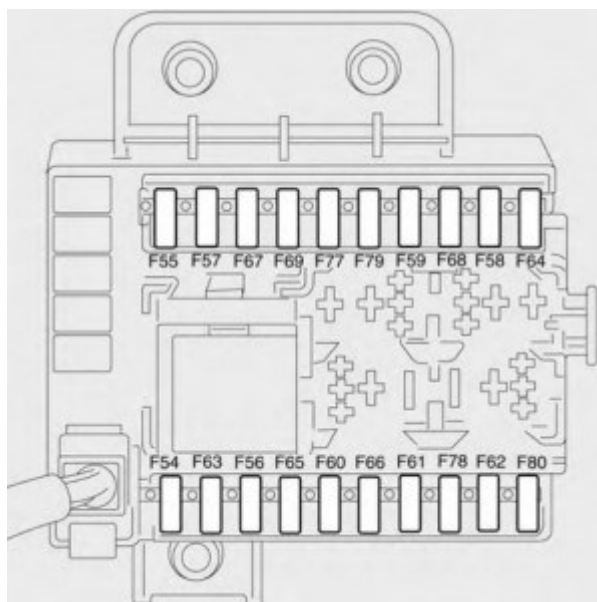

Fiat Croma – fuse box – boot

Users	Fuse	Ampere rating [A]
+30 Hi-Fi audio amplifier	F54	25
Free	F55	—
+30 front driver seat regulation control unit	F56	25
+15 excluded during ignition for front driver seat heating	F57	7,5
Free	F58	—
Free	F59	—
+30 front passenger seat regulation control unit	F60	25
Free	F61	—
Free	F62	—
Free	F63	—
Free	F64	—
Free	F65	—
Free	F66	—
+15 excluded during ignition for front driver seat heating	F67	7,5
Free	F68	—
Free	F69	—
Free	F77	—
Free	F78	—
Free	F79	—
Free	F80	—

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.