

23.A/C Filter**A: REPLACEMENT**

For the A/C filter replacement procedures, refer to the AC section. <Ref. to AC-51, REPLACEMENT, A/C Filter.>

ENGINE SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)**FU(H6DO)****EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)****EC(H6DO)****INTAKE (INDUCTION)****IN(H6DO)****MECHANICAL****ME(H6DO)****EXHAUST****EX(H6DO)****COOLING****CO(H6DO)****LUBRICATION****LU(H6DO)****SPEED CONTROL SYSTEMS****SP(H6DO)****IGNITION****IG(H6DO)****STARTING/CHARGING SYSTEMS****SC(H6DO)****ENGINE (DIAGNOSTICS)****EN(H6DO)(diag)****GENERAL DESCRIPTION****GD(H6DO)**

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

	Page
1. General Description	2
2. Throttle Body	16
3. Intake Manifold	17
4. Engine Coolant Temperature Sensor	23
5. Crankshaft Position Sensor	24
6. Camshaft Position Sensor	25
7. Knock Sensor	26
8. Throttle Position Sensor	27
9. Manifold Absolute Pressure Sensor	28
10. Mass Air Flow and Intake Air Temperature Sensor	29
11. EGR Valve	30
12. Fuel Injector	31
13. Oil Flow Control Solenoid Valve	33
14. Oil Temperature Sensor	34
15. Front Oxygen (A/F) Sensor	35
16. Rear Oxygen Sensor	37
17. Engine Control Module (ECM)	39
18. Main Relay	40
19. Fuel Pump Relay	41
20. Electronic Throttle Control Relay	42
21. Fuel Pump Control Unit	43
22. Fuel	44
23. Fuel Tank	46
24. Fuel Filler Pipe	49
25. Fuel Pump	51
26. Fuel Level Sensor	53
27. Fuel Sub Level Sensor	54
28. Fuel Filter	55
29. Fuel Delivery & Evaporation Lines	59
30. Fuel System Trouble in General	62