


10. Rear Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear door trim. <Ref. to EI-42, REMOVAL, Door Trim.>
- 3) Remove the wire from the rear inner remote. <Ref. to SL-29, REMOVAL, Rear Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-22, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-17, REMOVAL, Rear Door Glass.>
- 6) Disconnect the connector.
- 7) Remove the three screws, and remove the rear door latch and door lock actuator assembly.

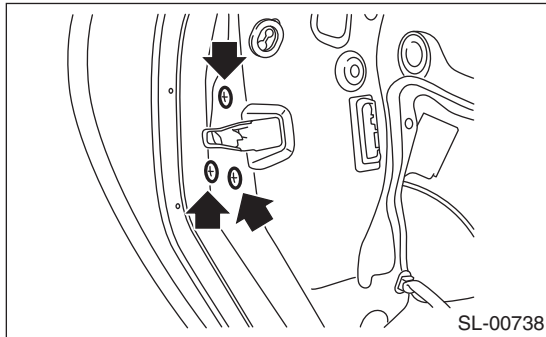

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

<Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION


1. DOOR LATCH

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check the lever and wire for smooth operation.

2. LOCK ACTUATOR

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

If defective, replace the rear door latch and door lock actuator assembly.

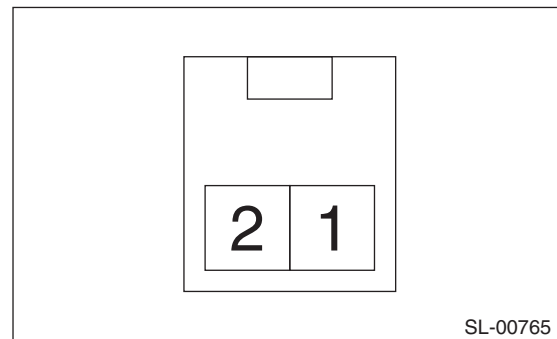

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	–	+
Unlock → Lock	+	–