

Rear Gate Opener Button

SECURITY AND LOCKS


11.Rear Gate Opener Button

A: REMOVAL


NOTE:

The rear gate opener button is integrated into the license plate light assembly harness.

- 1) Remove the rear gate trim. <Ref. to EI-60, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear gate garnish. <Ref. to EI-62, REMOVAL, Rear Gate Garnish.>
- 3) Disconnect the harness connectors of the rear gate opener button and license plate light assembly.
- 4) Loosen four screws to remove the rear gate garnish lower cover.

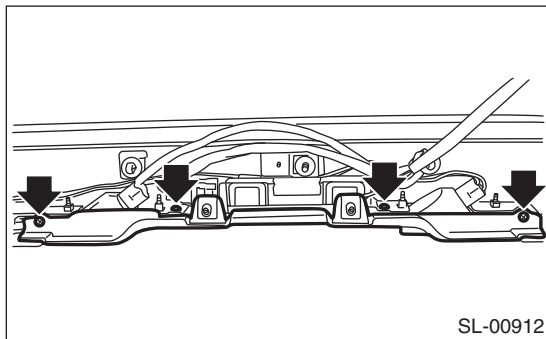

- 5) Hold down the hook of the rear gate opener button, and remove the rear gate opener button.

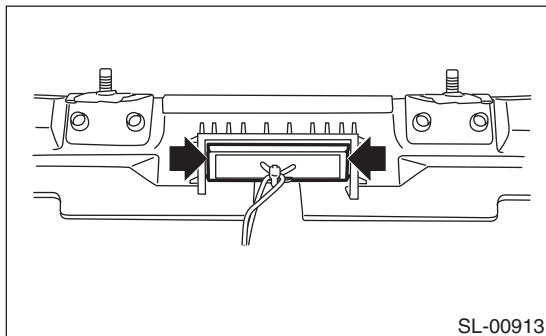

- 6) Remove the license plate light. <Ref. to LI-32, REMOVAL, License Plate Light.>
- 7) Remove the license plate light assembly harness.

B: INSTALLATION

CAUTION:


- Install with the protrusion of the switch harness clip facing towards the vehicle
- Make sure that the harness grommets are installed securely.

Failure to install securely may result in entry of water.

Install in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the rear gate opener button harness connector.
- 2) Inspect the continuity between the rear gate opener button connector terminals.

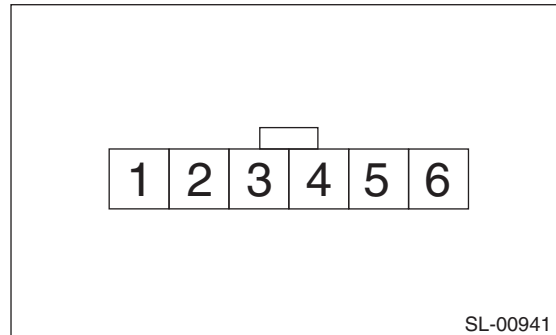

Switch	Terminal	Standard
Open	No. 5 and No. 6	Less than 1 Ω
Close		1 M Ω or more

If defective, replace the rear gate opener button.