


12. Rear Gate Latch and Actuator Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear gate trim. <Ref. to EI-60, REMOVAL, Rear Gate Trim.>
- 3) Remove two bolts.

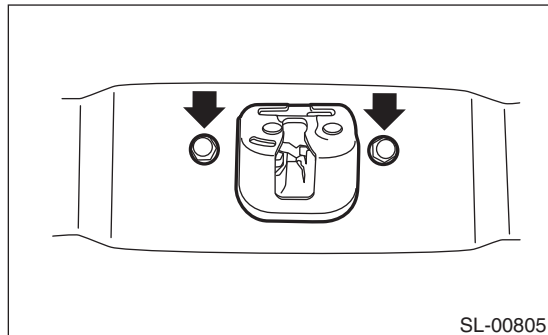

- 4) Disconnect the connector, and remove the rear gate latch and actuator assembly.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK LOCK ACTUATOR

- 1) Disconnect the harness connector of the rear gate latch and actuator assembly.
- 2) Connect the battery to the rear gate latch and actuator assembly terminals.

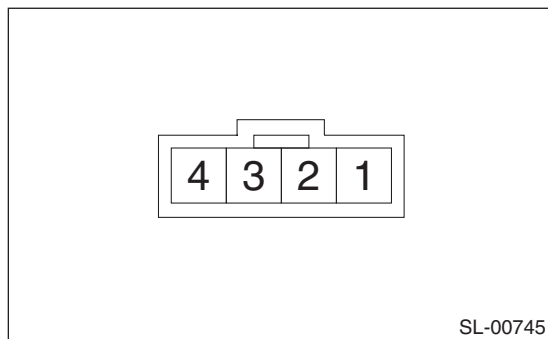

Actuator operation	Terminal	
	No. 1	No. 2
Lock → Unlock	+	-

If defective, replace the rear gate latch and actuator assembly.