


13. Front Hood Lock Assembly

A: REMOVAL

- 1) Open the front hood.
- 2) Remove the front bumper. <Ref. to EI-28, REMOVAL, Front Bumper.>
- 3) Remove the bolts, and then detach the front hood lock assembly.
- 4) Remove the release cable from the lock assembly.

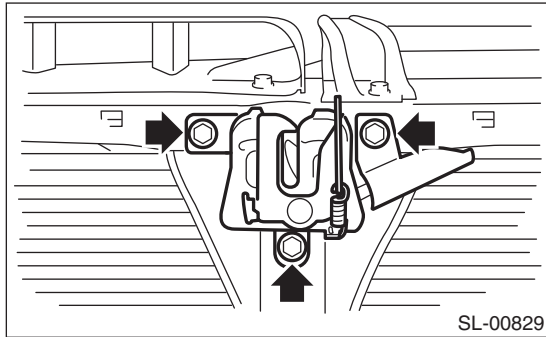

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:


<Ref. to SL-4, FRONT HOOD LOCK AND REMOTE OPENERS, COMPONENT, General Description.>

NOTE:

Apply grease to the movable part.

C: ADJUSTMENT

Loosen the bolt, and adjust the lock assembly while moving it up and down.

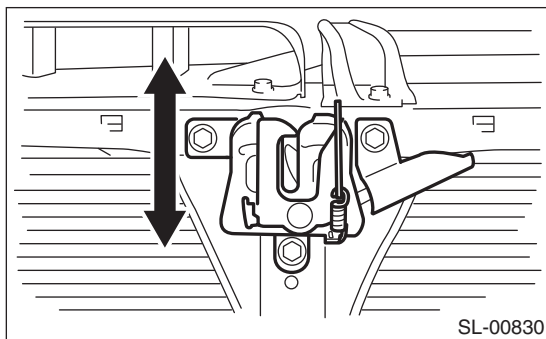

D: INSPECTION

- 1) Check the striker for deformation or abnormal wear.
- 2) Check the safety lever for improper movement.
- 3) Check other levers and springs for rust formation or unsmooth movement.