


14.Remote Openers

A: REMOVAL


1. FRONT HOOD OPENER

- 1) Remove the cable from the front hood lock.
- 2) Remove the bolt, and then detach the opener lever.

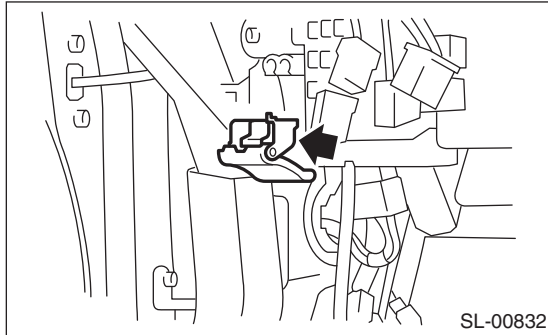


2. FUEL FILLER LID OPENER

- 1) Remove the rear seat. <Ref. to SE-15, REMOVAL, Rear Seat.>
- 2) Remove the driver's side lower inner trim, rear quarter trim and floor mat.
Remove the clip holding the cable.
- 3) Remove the bolt and nut, and remove the opener pull handle (B).
- 4) Remove cable (A) from the opener pull handle (B).

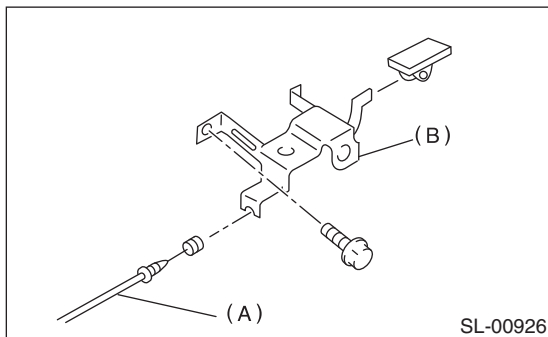

- 5) Remove the rear quarter trim RH. <Ref. to EI-55, REMOVAL, Rear Quarter Trim.>
- 6) Rotate the fuel lock inside the quarter panel to 90° and remove. (Either right or left turn)

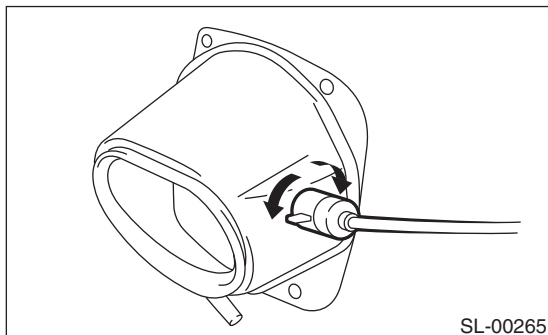

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure that the front hood and fuel flap open and close smoothly.