



16.Key Lock Cylinders

A: REPLACEMENT

- 1) Raise the front door glass to the top position.
- 2) Remove the door trim. <Ref. to EI-42, REMOVAL, Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 4) Remove the rod clamp.
- 5) Remove the plug to the rear of the door panel.
- 6) Loosen the TORX® bolt (1).

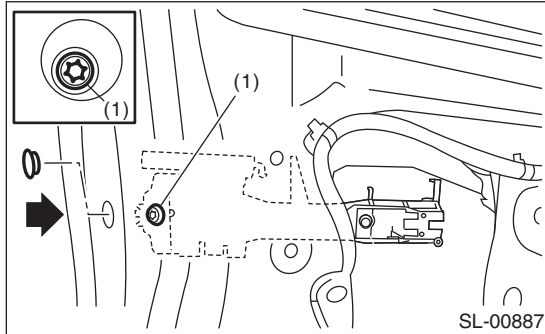

- 7) Remove the key cylinder along with the handle cover.
- 8) Remove the key cylinder from the cover, and replace the key cylinder.

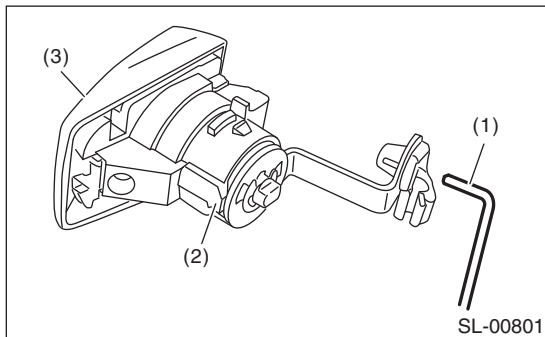

- (1) Latch connection rod
- (2) Key cylinder
- (3) Door outer handle cover