


19. Keyless Entry Control Module

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the left rear quarter trim. <Ref. to EI-55, REMOVAL, Rear Quarter Trim.>
- 3) Remove the bolt, disconnect the connector and remove the keyless entry control module.

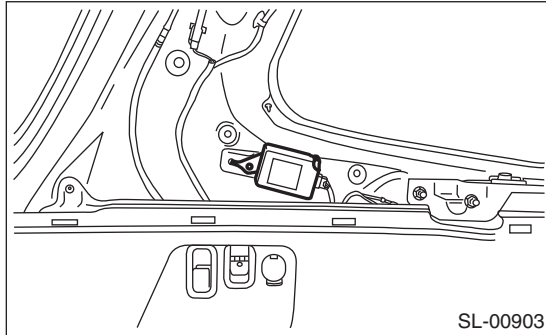

B: INSTALLATION

Install in the reverse order of removal.