


20.Keyless Buzzer

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front bumper. <Ref. to EI-28, REMOVAL, Front Bumper.>
- 3) Remove the bolt, and then remove the keyless buzzer.

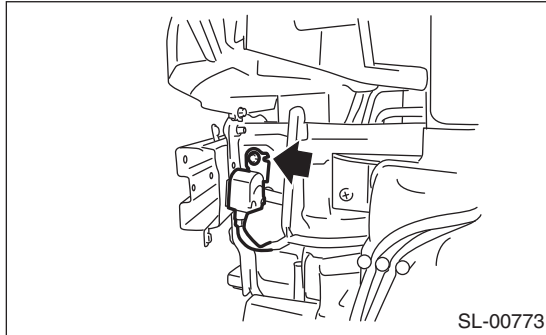

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Using the Subaru Select Monitor, perform forced operation of the keyless buzzer. <Ref. to LAN(diag)-27, Function Check.>

NOTE:

If it does not sound, replace the buzzer.