

21.Body Integrated Unit

A: REMOVAL


NOTE:

1. When replacing the body integrated unit
 - Prepare the security ID plate.
 - For models with immobilizers, prepare the required number of new immobilizer keys (unregistered).
 - When replacing the body integrated unit, check the current settings and record it. <Ref. to LAN(diag)-17, Read Current Data.>
2. After replacing the body integrated unit with immobilizer
 - Register the immobilizer. For detailed operation procedures, refer to the “PC application help for Subaru Select Monitor”.
 - Set the current settings according to what was recorded.
- 1) Disconnect the ground cable from the battery.
- 2) Remove the driver's side instrument panel lower cover. <Ref. to EI-44, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the knee guard panel.
- 4) Disconnect the connector of body integrated unit.

CAUTION:

Be careful to keep water and other foreign materials away from body integrated unit.

- 5) Remove two mounting nuts for body integrated unit bracket, and remove the body integrated unit.

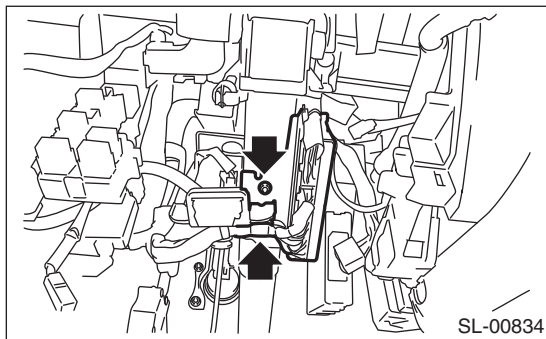

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure that there are no differences from the contents of the current settings after installation. <Ref. to LAN(diag)-17, Read Current Data.>